


Trainings ▾

Remove

Note : The alternator guard may appear different than illustrated depending on the alternator option.
Although different in appearance, the procedure remains the same.

Remove the alternator belt guard assembly.

If equipped, use **only** the captive-washer capscrews.

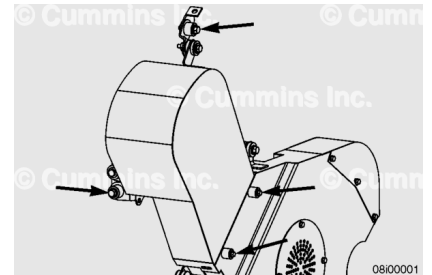


Inspect for Reuse

Inspect the belt guard and bracket for cracks or other damage.
If damaged, they **must** be replaced.

Inspect the isolators for damage. If the isolators are hard and brittle, they **must** be replaced.

If damaged or bent, replace the belt guard studs.

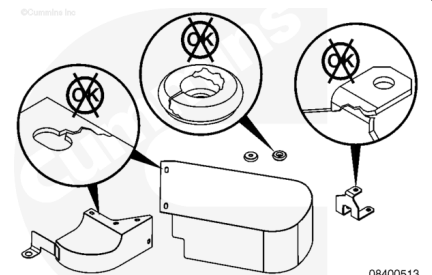

Install


Note : The alternator guard may appear different than illustrated depending on the alternator option.
Although different in appearance, the procedure remains the same.

Install the alternator belt guard assembly.

Tighten the captive-washer capscrews.

Torque Value:

3/8 inch Capscrew 40 n•m [30 ft-lb]

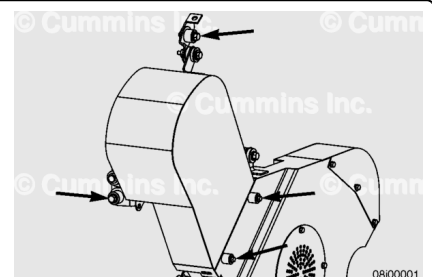

Install the two captive-washer capscrews.

Torque Value:

1/4 inch Capscrew 10 n•m [89 in-lb]

Last Modified: 06-Jan-2011
