

Trainings ▾

General Information

Change the service coolant filter at every oil and filter change interval.

The correct service coolant filter to be used is determined by the total cooling system capacity and other operational factors.

Refer to Procedure 018-004

(</qs3/pubsys2/xml/en/procedures/102/102-018-004.html>)

(Coolant Recommendations and Specifications) in Section V.




Remove

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

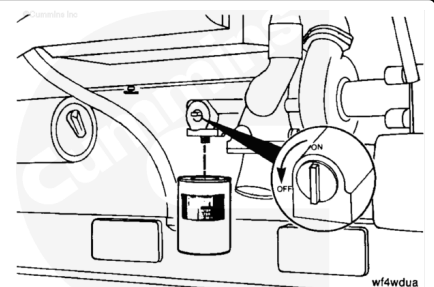

Note : The valve does **not** completely stop the flow of coolant from the filter head. It is recommended to have the new filter ready to install before removing the old filter.

Turn the valve on the filter head to the OFF position.

Remove and discard the coolant filter.


Install

Do **not** allow oil to get in the filter. It will break down the SCA.

Lubricate the seal on the filter with clean engine oil.



Install the coolant filter. Turn the filter until the seal touches the filter head. Turn an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after contact.

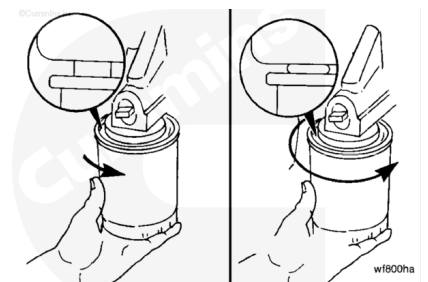

Turn the valve to the ON position.

