


Trainings ▾

Inspect

Check the impeller and port plate for damage from cavitation.
Replace the parts, if necessary.

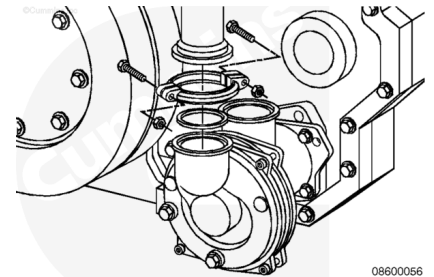

Note : This is **only** a temporary repair for an emergency situation. Cummins Inc., does **not** recommend the use of this procedure for a permanent repair. The correct repair procedures **must** be followed as soon as possible.

Gilkes recommends the replacement of the mechanical seal **only** when the contact ring is replaced at the same time.

For an emergency repair, the contact ring (1) can be reversed so that the side of the ring that is not worn touches the mechanical seal.

Reverse the ring and install it in the rubber boot (2).

