

Trainings ▾

Inspect


Note : If inspections or dimensional checks indicate a problem, contact a Cummins® Authorized Repair Location. Reference the model number on the turbocharger dataplate.

If the engine is equipped with a turbocharger, inspect the turbocharger every 6000 hours or 2 years.

Remove the air intake and exhaust piping.

Check the turbocharger for damaged or cracked compressor or turbine blades.

Check to make sure the turbocharger shaft spins freely.

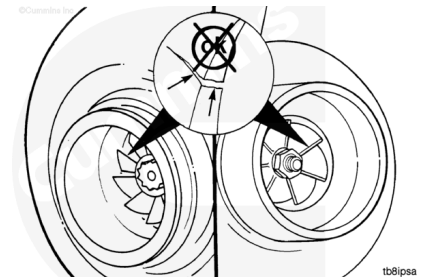


Measure

All Applications

Measure the axial clearance (end-to-end) with a depth gauge, or a dial indicator, Part Number ST-537.


Axial Clearance			
	mm		in
HC5A	0.025	MIN	0.001
	0.152	MAX	0.006
T18A	0.10	MIN	0.004
	0.23	MAX	0.009

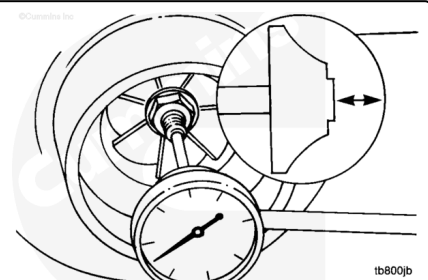

If the turbocharger is **not** within specifications, it **must** be replaced.

Measure the radial end play (side-to-side) at the compressor nose using a dial gauge.

Compressor Impeller Radial End Play			
	mm		in
Holset® HC5, HC5A (127 mm wheel)	0.228	MIN	0.009
	0.686	MAX	0.027
Holset® HC5, HC5A (130 mm wheel)	0.228	MIN	0.009
	0.762	MAX	0.03

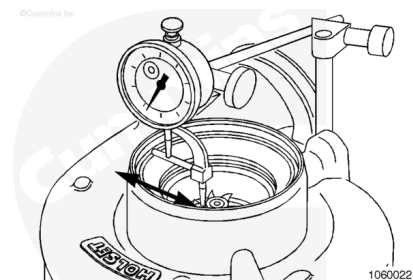


Make sure movement is within the MIN/MAX total indicator reading (TIR) values shown above.

Note : If the clearance exceeds the specifications, the turbocharger must be replaced or rebuilt. Contact a Cummins® Authorized Repair Location. See HC5 Turbocharger Shop Manual, Bulletin 3810243, for rebuild instructions.

Measure the radial clearance (side-to-side) with a wire-type feeler gauge.

Compressor Impeller and Turbine Wheel Radial Clearance			
	mm		in
AirResearch h™ T18A	0.08	MIN	0.003
	0.18	MAX	0.007

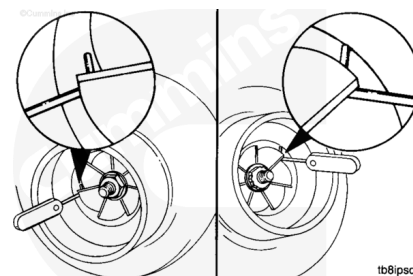

Note : If the clearance exceeds the specifications, the turbocharger must be replaced or rebuilt. Contact a Cummins® Authorized Repair Location. See T35/50 VT50/ST50 Turbocharger, Bulletin 3379091, for rebuild instructions.

