

Trainings ▾


Inspect

Check the exterior of the turbocharger for damage.

Check the wheel for fretting and broken vanes.

Use a dial indicator to measure the turbocharger end clearance.

Measure the end clearance.

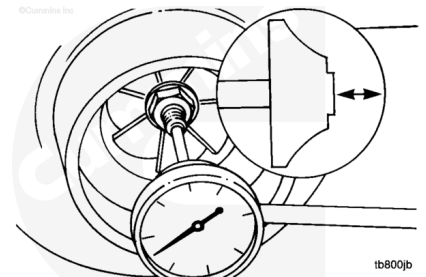


Holset® HX82 Turbocharger End Clearance		
mm		in
0.025	MIN	0.001
0.152	MAX	0.006

If the end clearance exceeds the specifications, the turbocharger **must** be replaced.

Measure the radial clearance (side to side) at compressor impeller nose using a dial gauge

Holset® HX82 Turbocharger			
	mm		in
Compressor/Impeller	0.254	MIN	0.010
	0.787	MAX	0.031

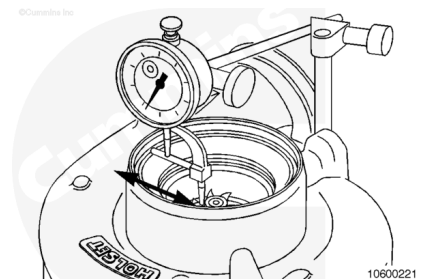

Make sure movement is within MIN/MAX Total Indicator Reading (TIR) values shown above.

If the end clearance exceeds the specifications, the turbocharger **must** be replaced.

