

Trainings ▾

Replace

Cummins


Replace the air compressor air cleaner element every 250 hours or 6 months.

Remove the wing nut, cover, housing, and element.

Clean the cover and the housing with a clean cloth.

Inspect the rubber gasket on the center bolt. Replace, if damaged.


Install a new element, Fleetguard Part Number AF-251, or Cummins Part Number 256837, in the front cover and assemble over the center bolt. Install the wing nut and finger tighten.

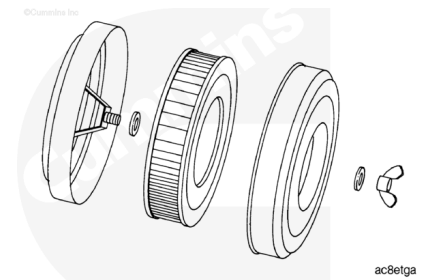

Bendix-Westinghouse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

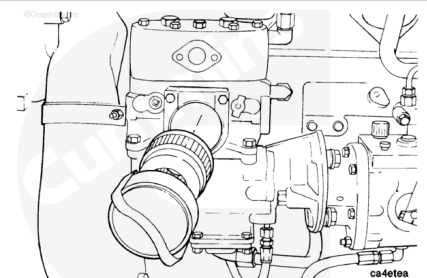

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

Use skin and eye protection when handling caustic solutions to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Note : If other compressors are used, follow the manufacturer's service requirements.

For replacing the paper element, remove the breather cover and element.

Clean by reverse flushing with compressed air.

Assemble on the compressor.

Discard the element if it is damaged or can **not** be cleaned.

For replacing the sponge element, remove the breather from the air compressor.

Disassemble the breather, wash all metal parts in solvent, and blow dry with compressed air.

Wash the element in solvent.

Remove all solvent from the element.

Dip the element in clean engine oil and squeeze excess oil from the element.