

Trainings ▾

Preparatory Steps

- Disconnect the batteries. Refer to the OEM service manual.
- Remove the alternator drive belt guard. Refer to Procedure 008-001 in Section A.
(/qs3/pubsys2/xml/en/procedures/18/18-008-001-om-ind.html)




Remove

Loosen the adjusting link and the alternator mounting capscrews.

Note : The lower jam nut has left-hand threads.

Loosen both of the jam nuts. Turn the adjusting screw to relieve the belt tension.


Remove the belt.

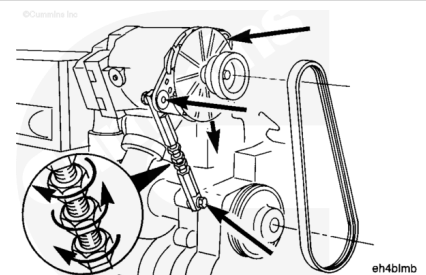

Inspect for Reuse

Check the belt for wear.

If the belt indicates any wear, it **must** be replaced.

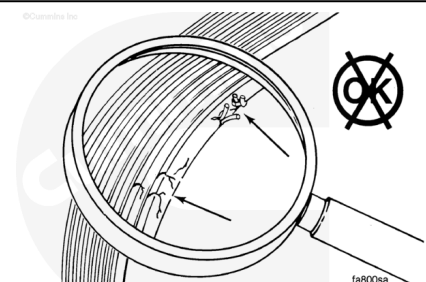


Inspect the belt for cracks, glazing, tears, or cuts. The belt **must** be replaced if damaged.



Install

Do **not** attempt to pry the belt on the pulley. Turn the adjusting screw **counterclockwise** to shorten the link if necessary. Install the alternator belt.

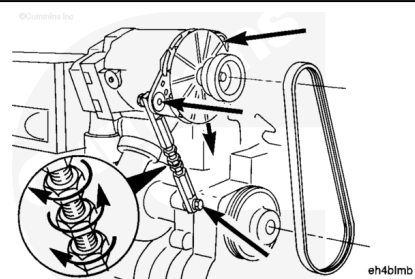


Adjust


Note : The lower jam nut has **left-hand threads**.

Loosen the alternator and adjusting link mounting capscrews.

Loosen the jam nuts on the adjusting screw.

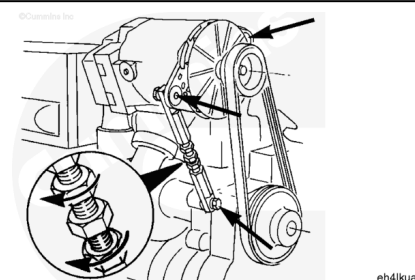

Turn the adjusting screw **clockwise** to tighten the belt tension.

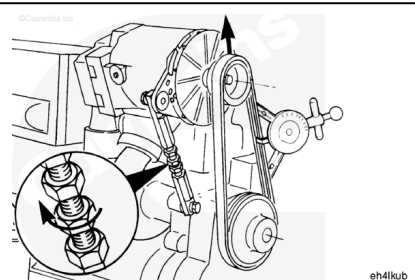

Note : The lower jam nut has **left-hand threads**.

Tighten the jam nuts on the adjusting screw.


Tighten the adjusting link and alternator mounting capscrews.

Torque Value:

Jam Nuts 55 n•m [41 ft-lb]

Torque Value:

Alternator Mounting Capscrews 55 n•m [41 ft-lb]

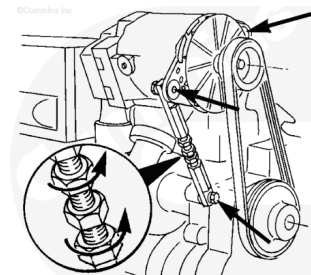

eh41kuc


Check the belt tension again to be sure it is correct.

The belt tension **must** be:

Measurements

	n	lbf
Belt Tension:	670	150


If the belt tension is **not** within specification, repeat the Adjust section of this procedure.

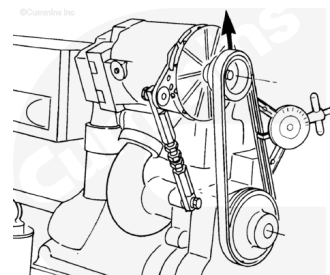

eh41oga

Finishing Steps

- Install the alternator drive belt guard. Refer to Procedure 008-001 in Section A.
(/qs3/pubsys2/xml/en/procedures/18/18-008-001-om-ind.html)
- Connect the batteries. Refer to the OEM service manual.
- Start the engine and check for proper operation.

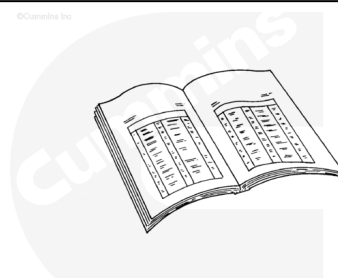

ck800wa