

## Trainings ▾

### Specifications

**Note :** For performance and fuel rate values, refer to the engine data sheet or the fuel pump code for the particular model involved.

|              |                                                                    |
|--------------|--------------------------------------------------------------------|
| Engine Speed | Refer to the fuel pump calibration data for optional speed rating. |
|--------------|--------------------------------------------------------------------|

|              |                        |
|--------------|------------------------|
| Displacement | 19 liters [1150 cu in] |
|--------------|------------------------|

|                 |                                           |
|-----------------|-------------------------------------------|
| Bore and Stroke | 158.75 mm x 158.75 mm [6.25 in x 6.25 in] |
|-----------------|-------------------------------------------|

#### Engine Weight:

|     |                   |
|-----|-------------------|
| Dry | 1720 kg [3800 lb] |
|-----|-------------------|

|     |                   |
|-----|-------------------|
| Wet | 1800 kg [3965 lb] |
|-----|-------------------|

|              |             |
|--------------|-------------|
| Firing Order | 1-5-3-6-2-4 |
|--------------|-------------|

#### Valve Settings:

|                         |                    |
|-------------------------|--------------------|
| Intake Valve Adjustment | 0.36 mm [0.014 in] |
|-------------------------|--------------------|

|                     |                                     |
|---------------------|-------------------------------------|
| Intake Valve Limits | 0.28 to 0.43 mm [0.011 to 0.017 in] |
|---------------------|-------------------------------------|

|                          |                    |
|--------------------------|--------------------|
| Exhaust Valve Adjustment | 0.69 mm [0.027 in] |
|--------------------------|--------------------|

|                      |                                     |
|----------------------|-------------------------------------|
| Exhaust Valve Limits | 0.61 to 0.76 mm [0.024 to 0.030 in] |
|----------------------|-------------------------------------|

#### Injector Settings:

|                                 |                           |
|---------------------------------|---------------------------|
| Fixed Time, Indicator (nominal) | 7.72 mm [0.304 in] travel |
|---------------------------------|---------------------------|

|                                      |                                         |
|--------------------------------------|-----------------------------------------|
| Fixed Time, Indicator (reset Limits) | 7.67 to 7.77 mm [0.302 to 0.306] travel |
|--------------------------------------|-----------------------------------------|

|                            |                   |
|----------------------------|-------------------|
| STC and HVT, OBC (nominal) | 10 N•m [90 in-lb] |
|----------------------------|-------------------|

|                                 |                   |
|---------------------------------|-------------------|
| STC and HVT, OBC (reset limits) | 10 N•m [90 in-lb] |
|---------------------------------|-------------------|

|                          |             |
|--------------------------|-------------|
| Crosshead Lash (nominal) | 0 mm [0 in] |
|--------------------------|-------------|

|                               |             |
|-------------------------------|-------------|
| Crosshead Lash (reset limits) | 0 mm [0 in] |
|-------------------------------|-------------|

**Note : Crosshead lash is only for crossheads with stems.**


|                   |                  |
|-------------------|------------------|
| Compression Ratio | 13.8:1 to 15.5:1 |
|-------------------|------------------|

|                                                           |           |
|-----------------------------------------------------------|-----------|
| Crankshaft Rotation (viewed from the front of the engine) | Clockwise |
|-----------------------------------------------------------|-----------|

Refer to the graphic for the cylinder locations.

The cylinder firing order is: 1-5-3-6-2-4.

QSK19 Cylinder Location

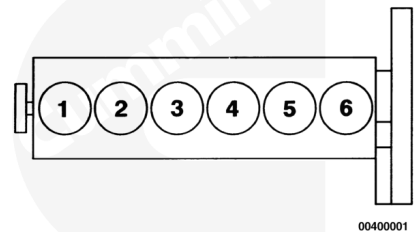

Refer to the graphic for the intake and exhaust valve locations.

○ Intake  
● Exhaust

