

Trainings ▾

Specifications

Minimum Battery Capacity at -18° to 0°C [0° to 32°F] Ambient Temperature:

12-VDC Starter 400 Ampere Hour	1800 Cold Cranking Amps at -18°C [0°F]
--------------------------------	--

24-VDC Starter 200 Ampere Hour	900 Cold Cranking Amps at -18°C [0°F]
--------------------------------	---------------------------------------

Minimum Battery Capacity above 0°C [32°F] Ambient Temperature:

12-VDC Starter 300 Ampere Hour	1280 Cold Cranking Amps at -18°C [0°F]
--------------------------------	--

24-VDC Starter 150 Ampere Hour	640 Cold Cranking Amps at -18°C [0°F]
--------------------------------	---------------------------------------

Maximum Starting Circuit Resistance:

12-VDC Starter	0.00075 ohms
----------------	--------------

24-VDC Starter	0.00200 ohms
----------------	--------------

Battery Cable Sizes - American Wire Gauge (maximum length in cranking motor circuit) 12-VDC:

Number 00	3.7 m [12 ft]
-----------	---------------

Number 000	4.9 m [16 ft]
------------	---------------

Number 0000 or two Number 0*	6.1 m [10 ft]
------------------------------	---------------

Two Number 00	7.6 m [25 ft]
---------------	---------------

Battery Cable Sizes - American Wire Gauge (maximum length in cranking motor circuit) 12-VDC High Output:

Number 00	2.1 m [7 ft]
-----------	--------------


Number 000	2.7 m [9 ft]
------------	--------------

Number 0000 or two Number 0*	3.7 m [12 ft]
------------------------------	---------------

Two Number 00	4.3 m [14 ft]
---------------	---------------

Battery Cable Sizes - American Wire Gauge (maximum length in cranking motor circuit) 24 to 32 - VDC:

Number 00	6.1 m [20 ft]
Number 000	8.2 m [27 ft]
Number 0000 or two Number 0*	10.7 m [35 ft]
Two Number 00	13.7 m [45 ft]
* Two strands of Number 0 cable can be used instead of one strand of Number 0000 cable, provided that all connections are carefully made to provide equal current flow in each parallel cable.	
Minimum Cranking Speed without Starting Aid	150 rpm
Minimum Ambient Temperature Without Starting Aid	Refer to the starting aid chart.

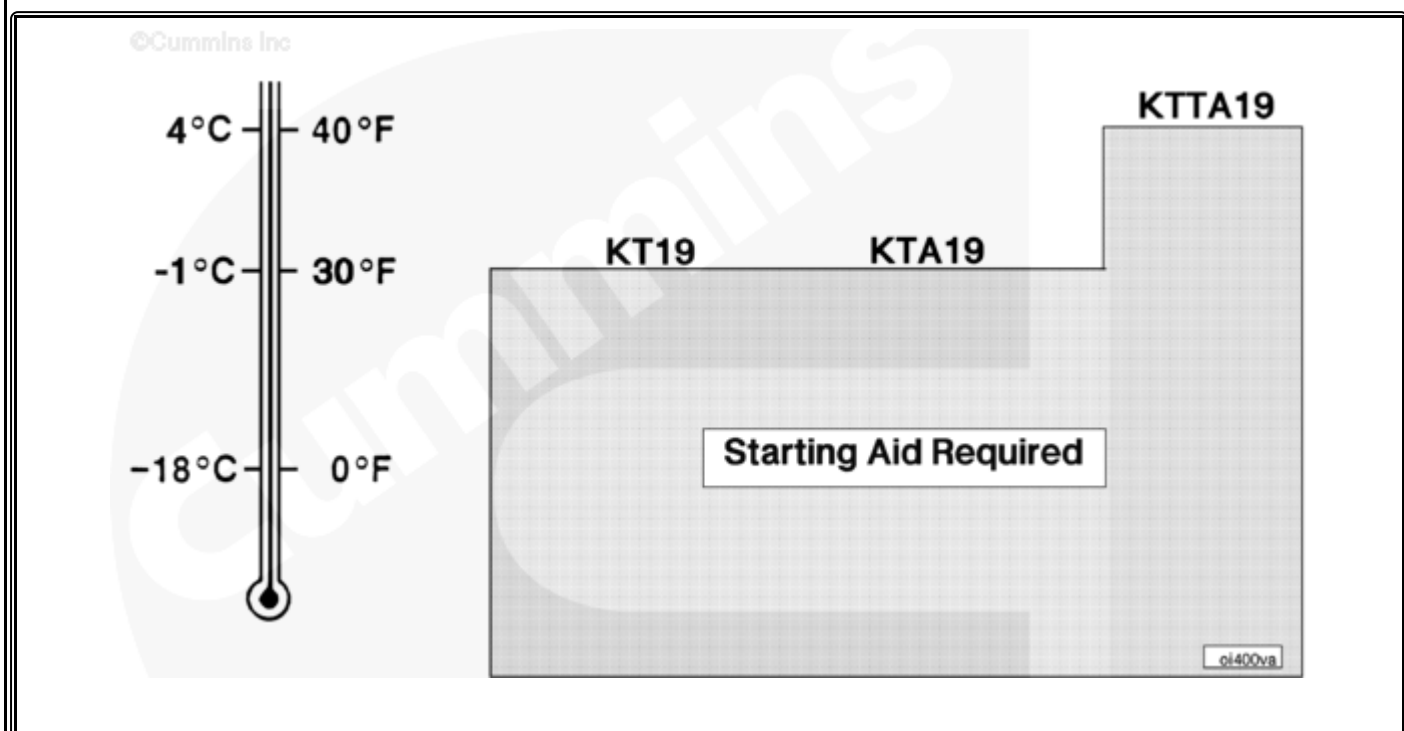

Note : Starting aids, such as block heaters, lubricating oil pan heaters, and so forth, are available to aid in cold weather starting.

Battery State of Charge	Specific Gravity at 27°C [80°F]
100 percent	1.260 to 1.280
75 percent	1.230 to 1.250
50 percent	1.200 to 1.220
25 percent	1.170 to 1.190
Discharged	1.110 to 1.130

Last Modified: 12-Aug-2019
