


Trainings ▾

Engine Views

The illustrations show the locations of the major external engine components, the filters and other service and maintenance points. Some external components will be at different locations for different engine models. The engine shown is a KTTA19, KT19 and KTA19 engines will **not** have the low pressure turbocharger and piping.

©Cummins Inc

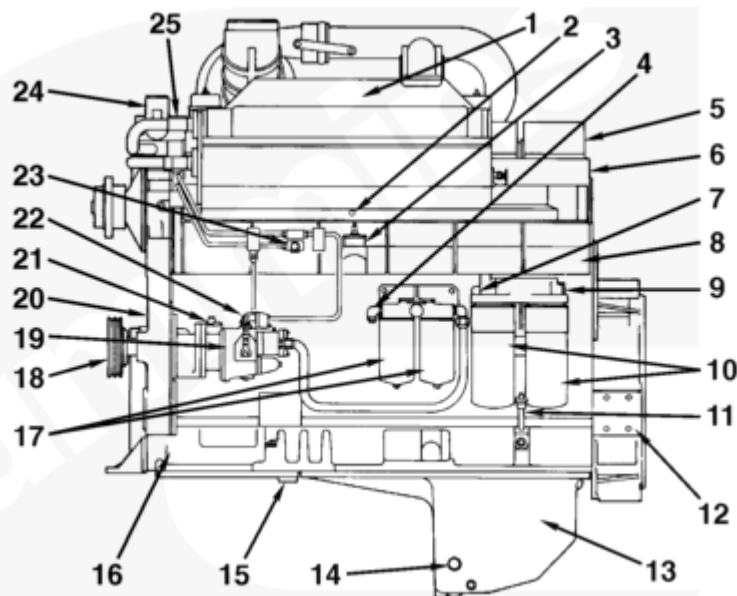


00400199

Left Side View

1. Aftercooler
2. Cold start port
3. Oil fill
4. Fuel inlet
5. Rocker lever cover
6. Rocker lever housing
7. Provision for oil pressure gauge
8. Cam follower covers
9. Bypass oil filter supply
10. Full flow oil filters
11. Dipstick tube
12. Flywheel housing
13. Oil pan
14. Provision for sump heater

15. Front plate oil drain
16. Oil pan adapter
17. Fuel filters
18. Accessory drive pulley
19. Fuel pump
20. Front gear cover
21. Tachometer drive
22. Fuel pressure port
23. Fuel Return to tank
24. Water outlet
25. Engine coolant vent.

©Cummins Inc

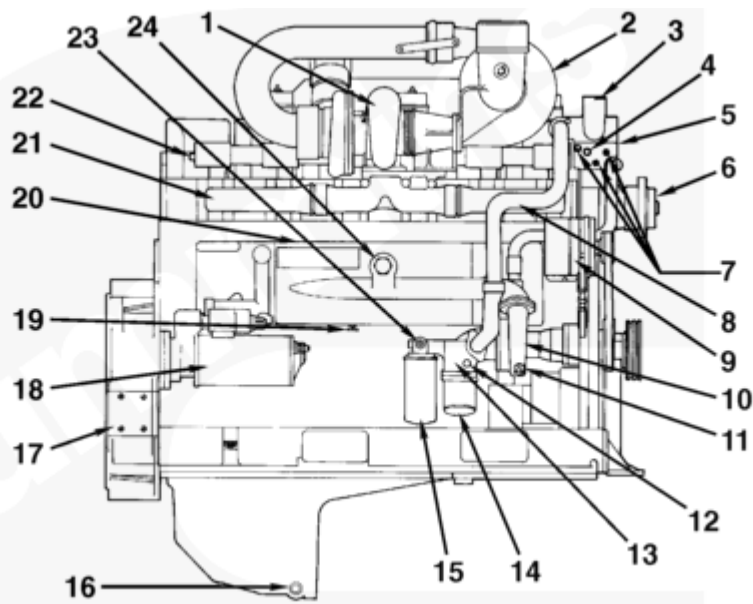


00400200

Right Side View

1. High pressure turbocharger
2. Low pressure turbocharger
3. Water outlet
4. Water pressure pickup
5. Thermostat housing
6. Fan hub (gear driven)
7. Water pressure or temperature pickup
8. Water bypass tube
9. Alternator
10. Water pump
11. Petcock for water drain
12. Heater return port
13. Water pump inlet housing
14. Water inlet connection
15. Coolant filter
16. Oil drain
17. Flywheel housing

18. Starter
19. Petcock for water drain
20. Oil cooler
21. Exhaust manifold
22. Heater supply port
23. Water shutoff valve
24. Coolant heater port.


©Cummins Inc

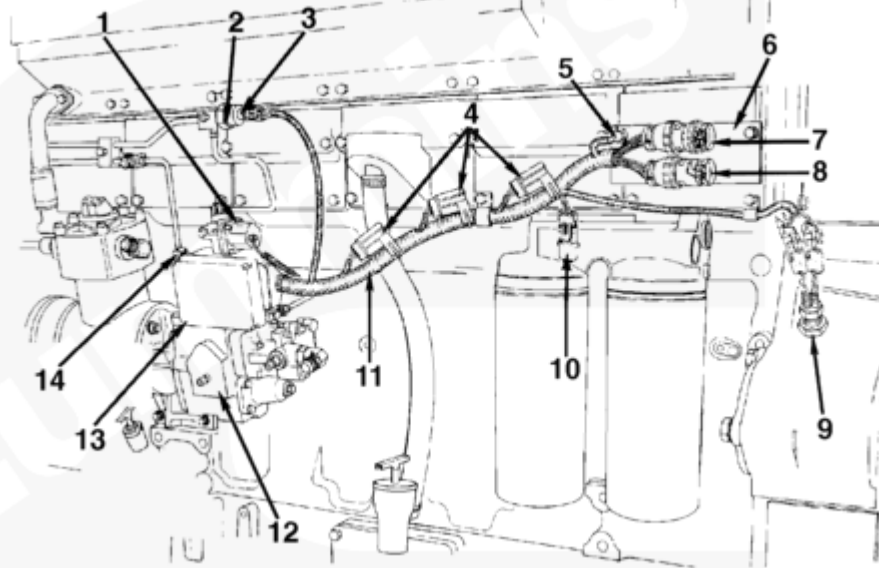

19801614

CENTRY™ System Models, Left Side

1. Fuel shutoff valve
2. Fuel block
3. Rail pressure sensor
4. Fuses (5 amp)
5. System ground connector
6. OEM C5 and C6 connector bracket
7. C5 connector
8. C6 connector
9. Engine speed sensor
10. Engine side datalink connector
11. Engine harness
12. Fuel pump
13. ECM
14. Electronic fuel control valve.

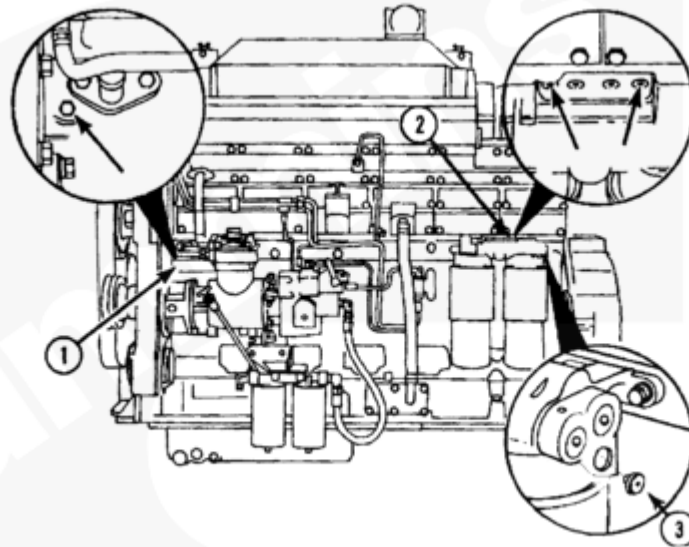


07400043

Oil Pressure Ports

1. Engine oil rifle plug
2. Plug - filtered oil
3. Plug - unfiltered oil.


Generator Set Applications

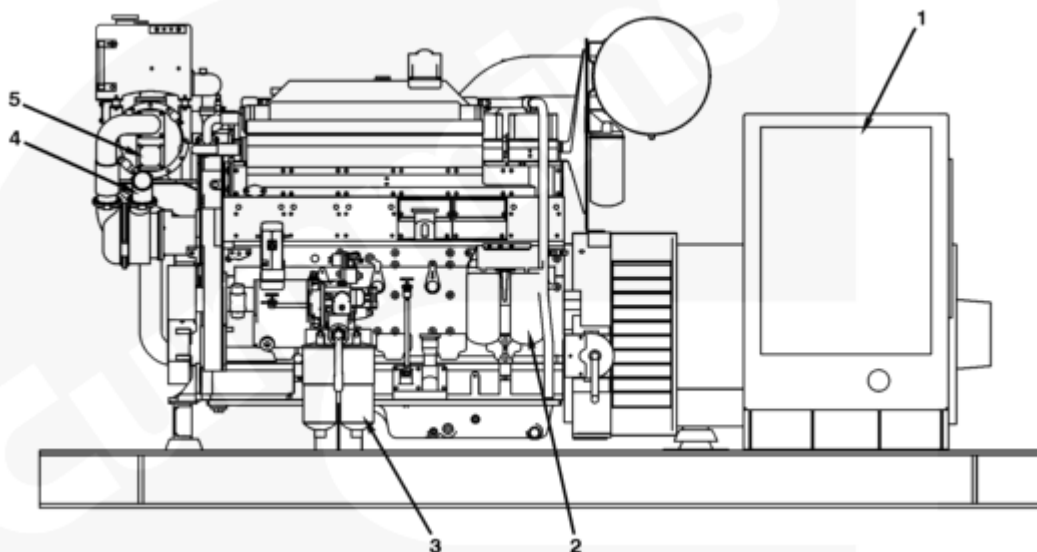

00400209

C Power Heat Exchanger Cooled Left Side


1. Control panel
2. Lubricating oil filters
3. Fuel filters
4. Sea water inlet connection
5. Sea water outlet connection.

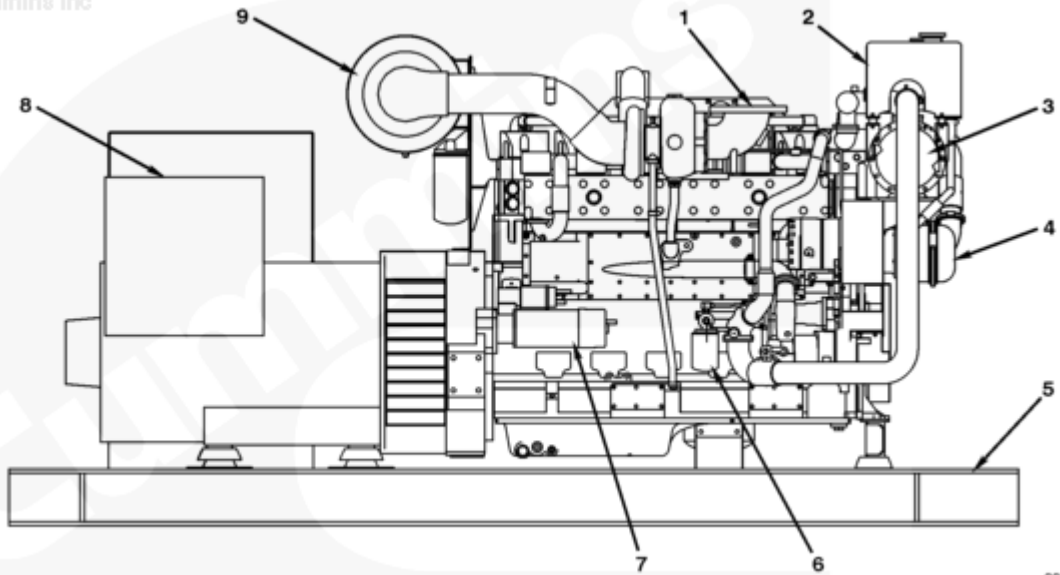

00400208

C Power Heat Exchanger Cooled Right Side

1. Turbocharger exhaust outlet connection
2. Coolant expansion tank
3. Heat exchanger
4. Sea water pump
5. Base rail
6. Coolant filter
7. Starter
8. Alternator
9. Air Cleaner.

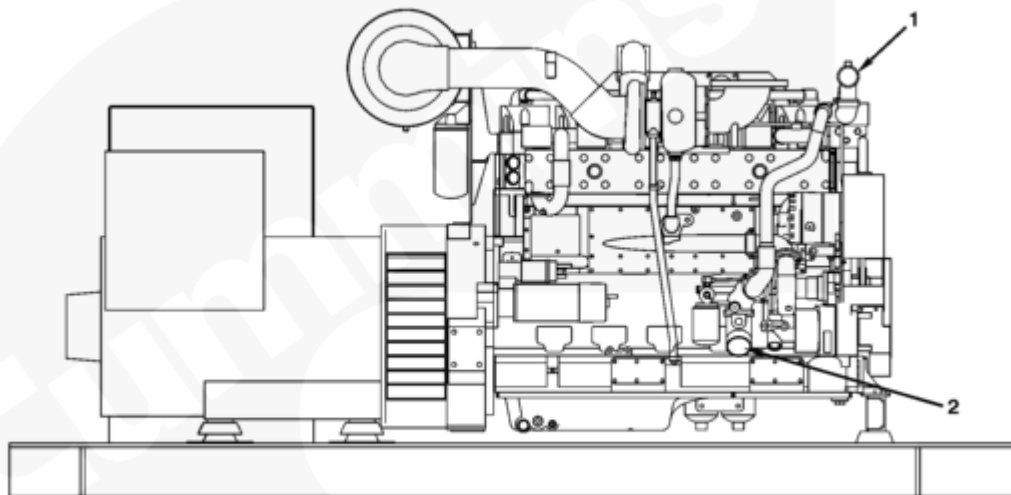

00400210

C Power Keel Cooled Right Side

1. Coolant outlet connection to keel cooler
2. Coolant inlet connection from keel cooler.

Last Modified: 03-Oct-2006
