


Trainings ▾

Flow Diagram


©Cummins Inc

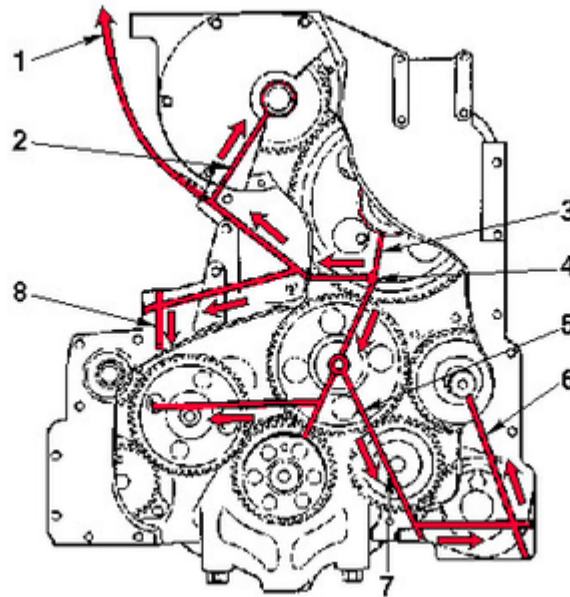

07400252


Front View

1. Oil supply to turbocharger
2. Oil supply to fan hub
3. Oil supply to camshaft bushing
4. Main oil rifle
5. Oil supply to idler gear and hydraulic pump drive
6. Oil supply to air compressor and fuel pump drive
7. Oil supply to main bearing and idler
8. Oil supply to water pump housing.

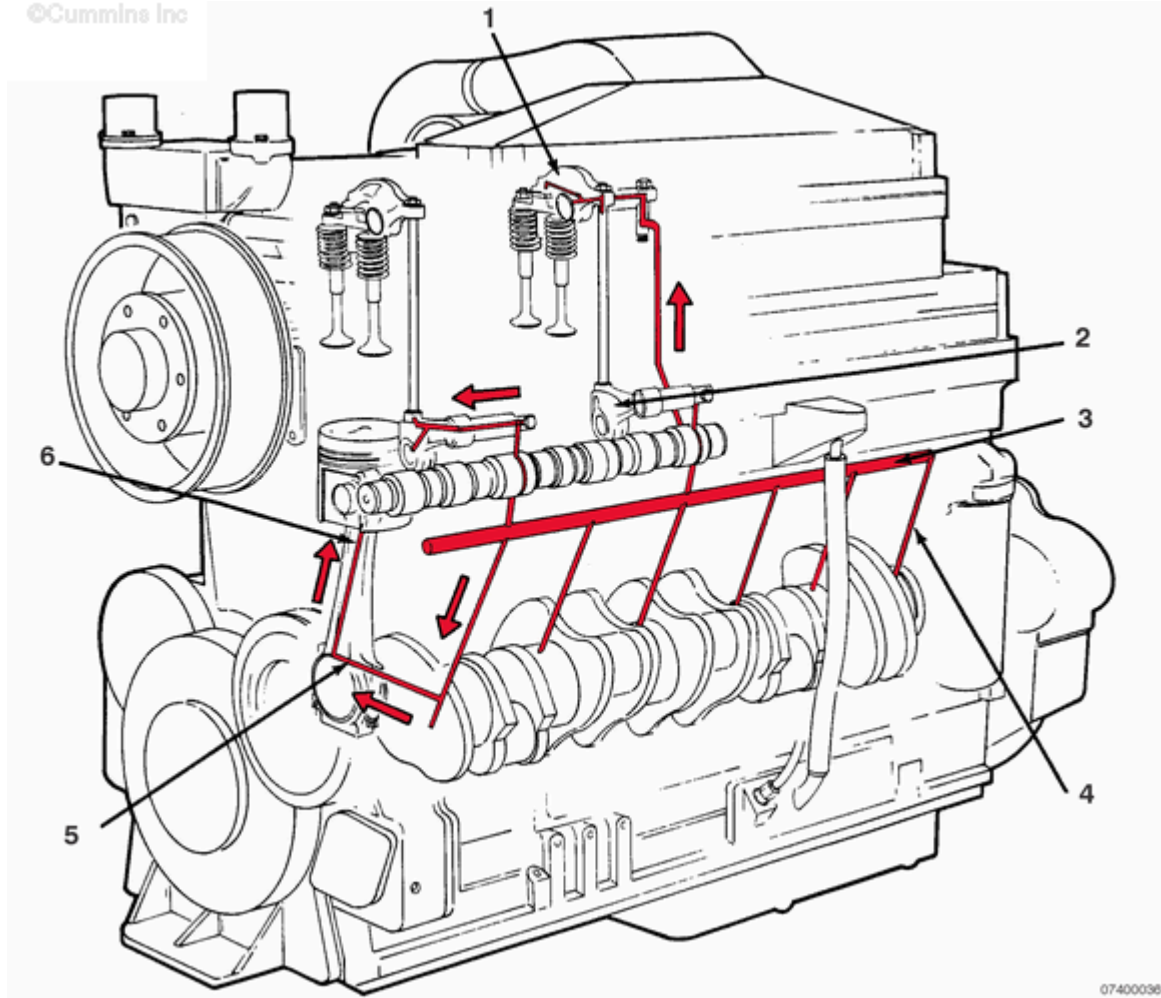

Left Side View


1. Rocker lever
2. Cam follower
3. Main oil rifle
4. Oil supply to main bearings
5. Oil supply to connecting rods
6. Oil supply to piston pin bushing.

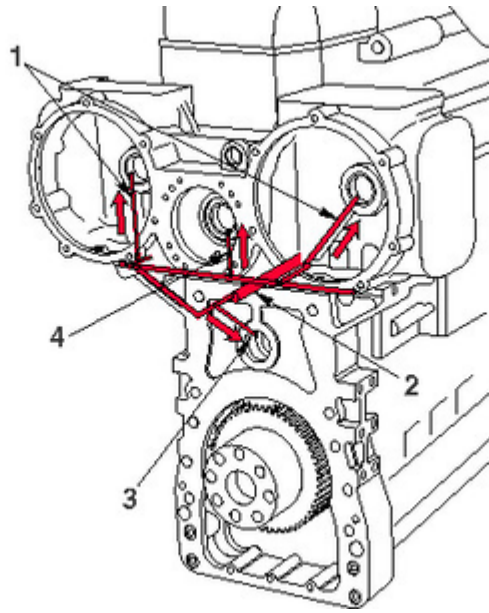

07400252

Rear View

1. Oil supply to hydraulic pump driveshaft bushings
2. Main oil rifle
3. Oil supply to lower idler shaft
4. Oil supply to center hydraulic pump driveshaft bushing.

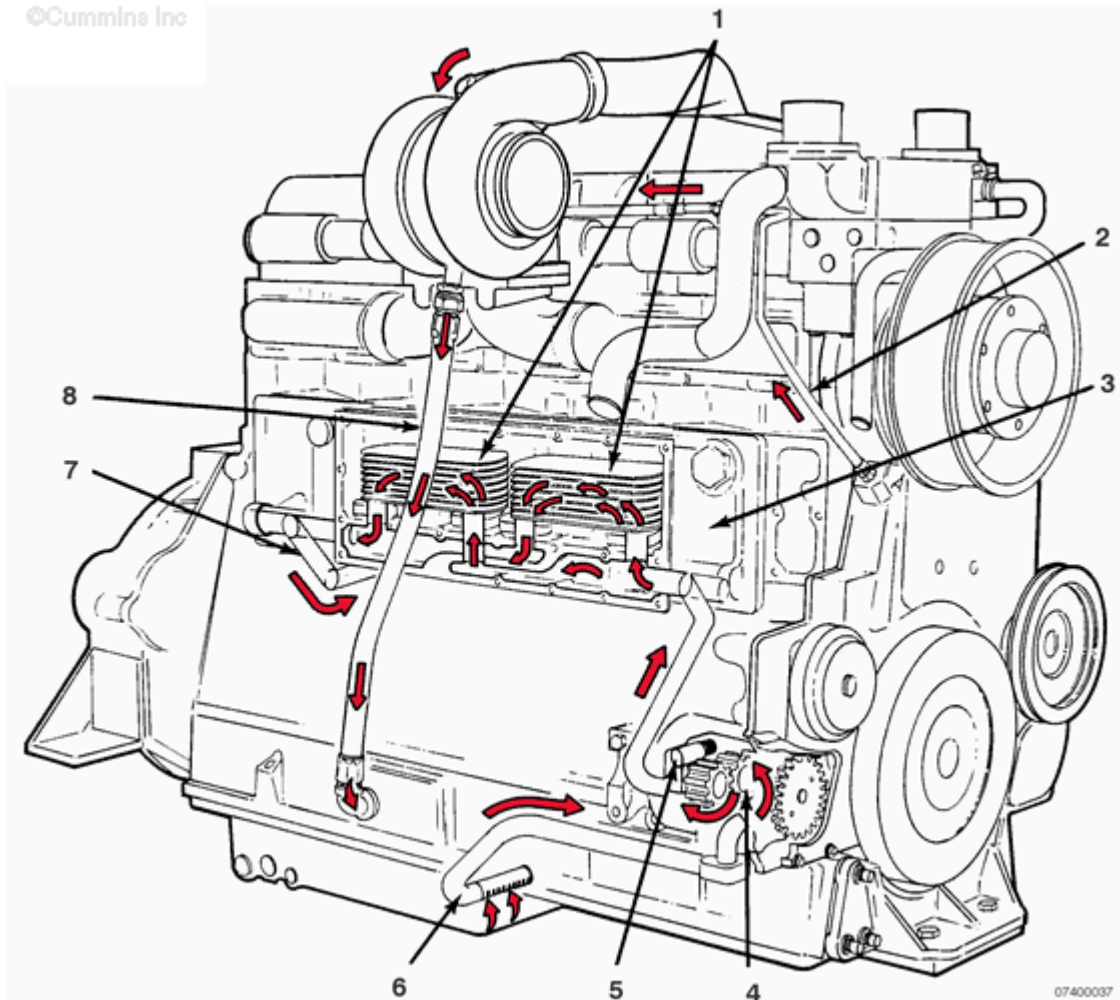


07400037

Right Side View

1. Oil cooler elements
2. Turbocharger oil supply
3. Oil cooler housing
4. Lubricating oil pump
5. Lubricating oil pump regulator
6. Oil suction tube
7. Oil to filter head
8. Turbocharger oil drain.


©Cummins Inc

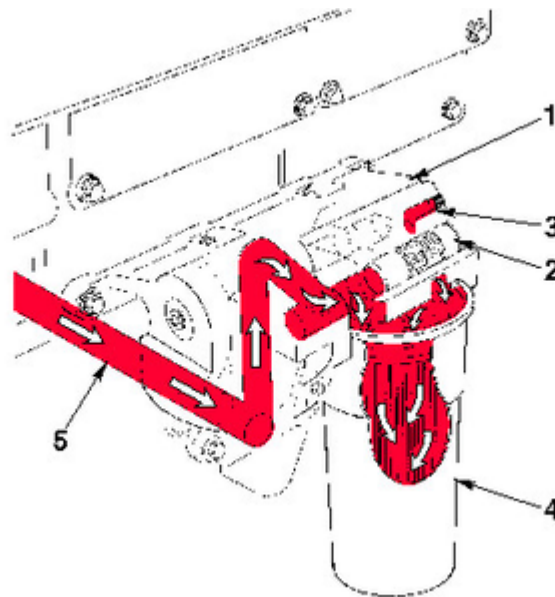

0 740 035 0

Filter Head

1. Filter head
2. Filter bypass valve
3. Oil before filter
4. Full flow filter
5. Oil to filter head.

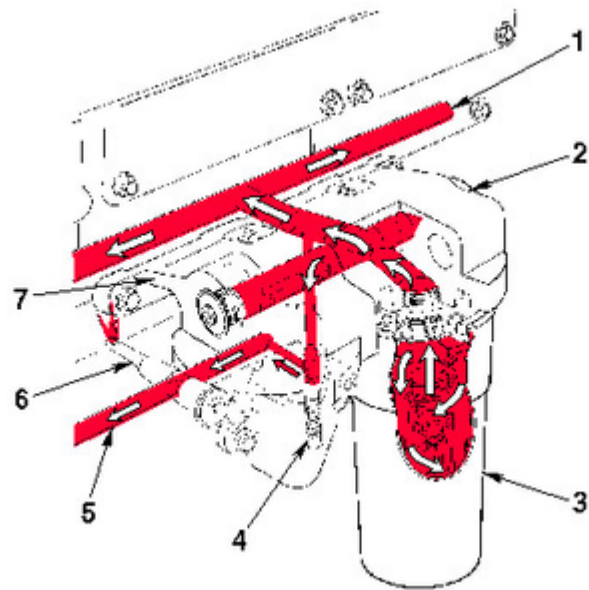

0 740 035 1

Filter Head

1. Main oil rifle
2. Oil filter head
3. Full flow filter
4. Piston cooling control valve
5. Piston cooling oil rifle
6. Piston cooling nozzle
7. Oil after filter.