



Trainings ▾

Flow Diagram

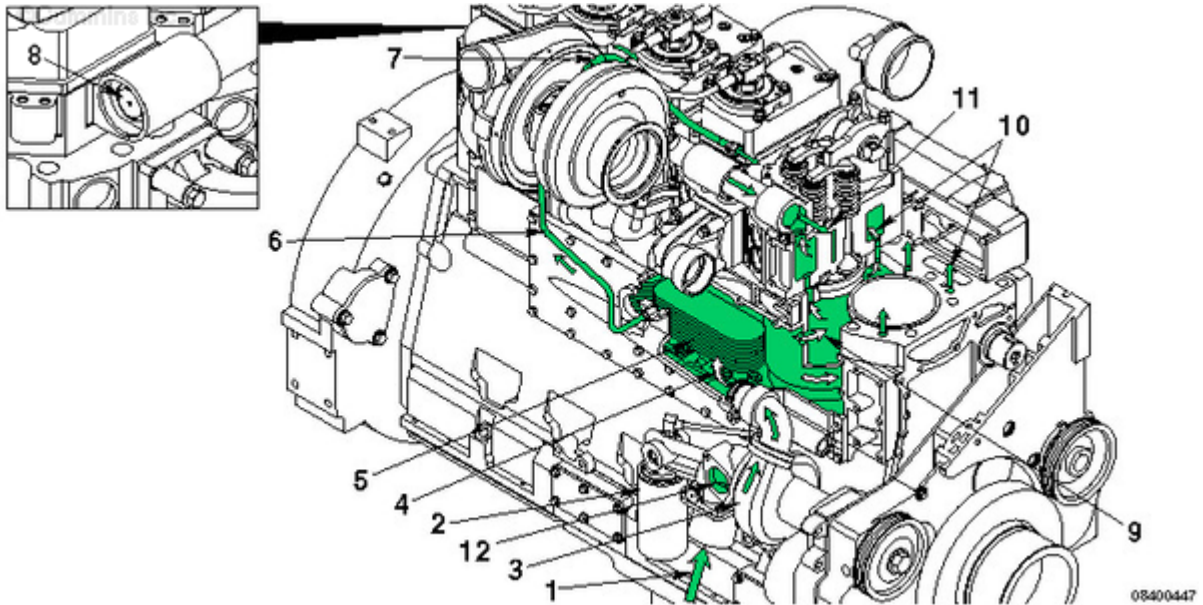


1. Coolant inlet
2. Coolant filter
3. Coolant pump
4. Coolant supply to engine block
5. Lubricating oil cooler
6. Coolant supply to turbocharger
7. Coolant return from turbocharger
8. Cabin heater port
9. Coolant flow to cylinder liners
10. Coolant flow to cylinder head
11. Coolant return to thermostat housing
12. Coolant bypass from thermostat.

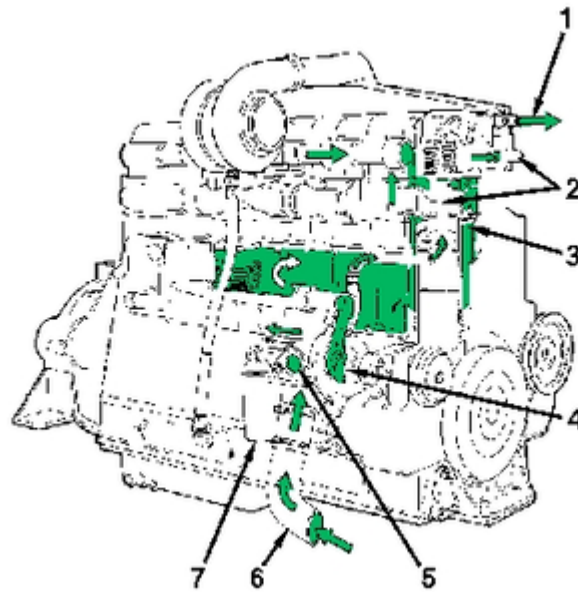

0 949 0002

1. Coolant out of aftercooler
2. Coolant to aftercooler
3. Cylinder liner
4. Water pump
5. Coolant bypass from thermostat
6. Water inlet
7. Water filter.

Aftercooled Engines

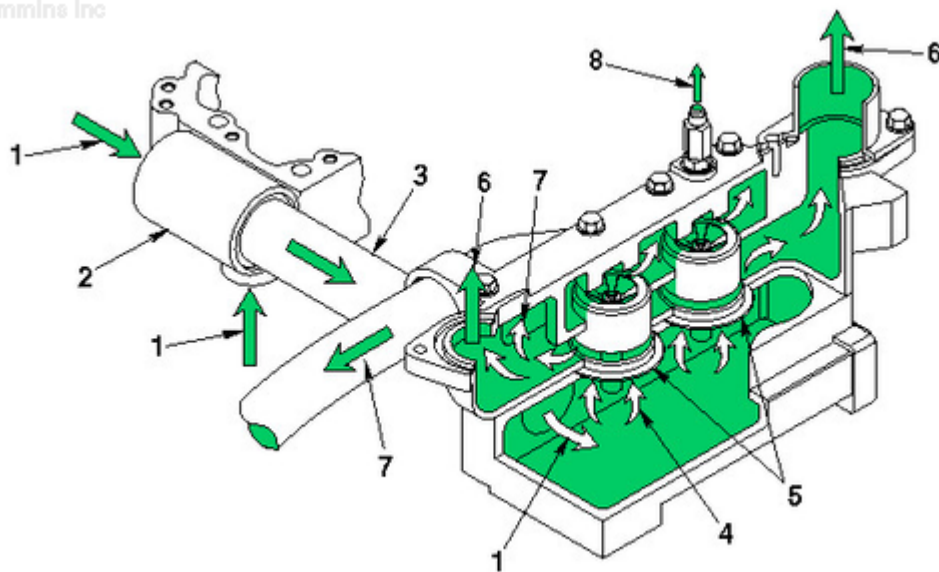


0 840 0446

1. Coolant flow from cylinder heads
2. Rocker housing
3. Coolant manifold
4. Coolant before thermostat
5. Thermostats

- 6. Coolant return to radiator
- 7. Coolant bypass to coolant pump
- 8. Vent to radiator.

©Cummins Inc

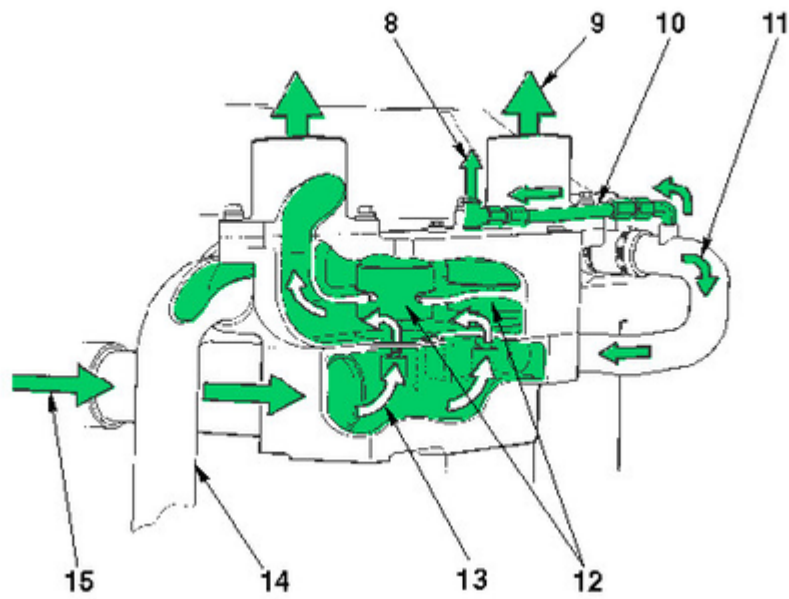


08400004

- 8. Vent to radiator top tank
- 9. Coolant to radiator
- 10. Vent line from aftercooler
- 11. Coolant out of aftercooler
- 12. Thermostats
- 13. Coolant before thermostats
- 14. Coolant bypass
- 15. Coolant manifold.

LTA


©Cummins Inc

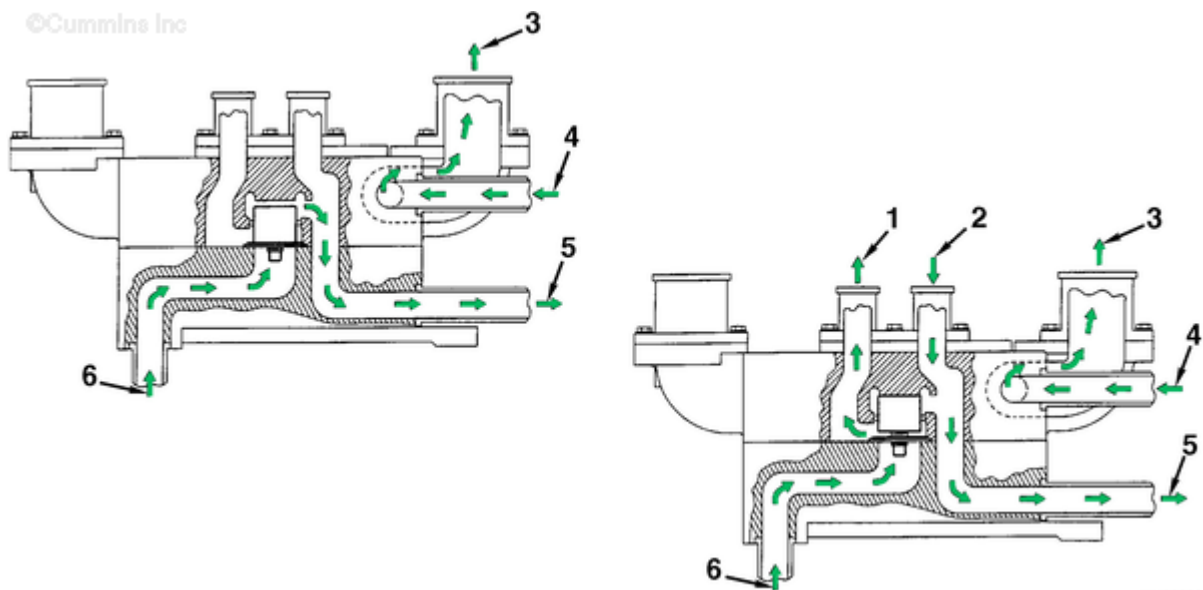

08400006

1. To aftercooler radiator
2. From aftercooler radiator
3. To radiator
4. From aftercooler
5. To aftercooler
6. From coolant pump.


©Cummins Inc

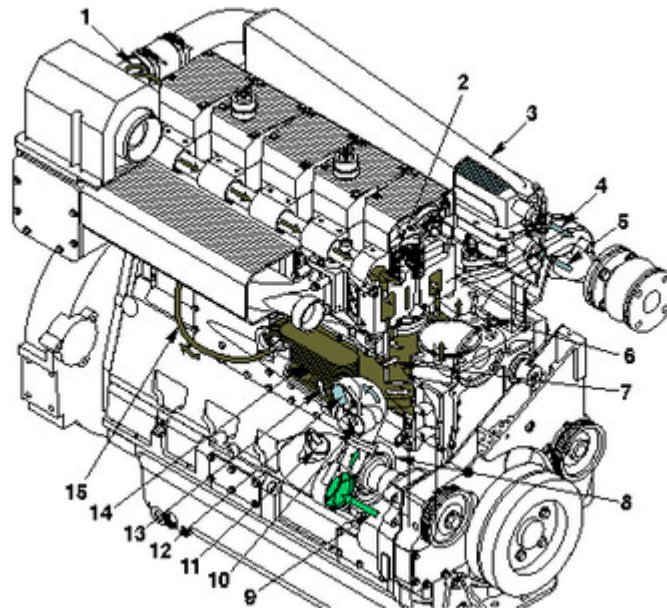

085400415

Single Loop LTA Cooling


1. Coolant return from turbocharger
2. Coolant return to thermostat housing
3. Aftercooler
4. Coolant return from aftercooler
5. Coolant supply to aftercooler
6. Coolant flow to cylinder head
7. Coolant flow to cylinder liners
8. Coolant pump
9. Coolant return to coolant pump
10. Emergency pump connection outlet
11. Emergency pump connection inlet
12. Coolant supply to thermostat housing
13. Coolant supply to engine block
14. Lubricating oil cooler
15. Coolant supply to turbocharger.

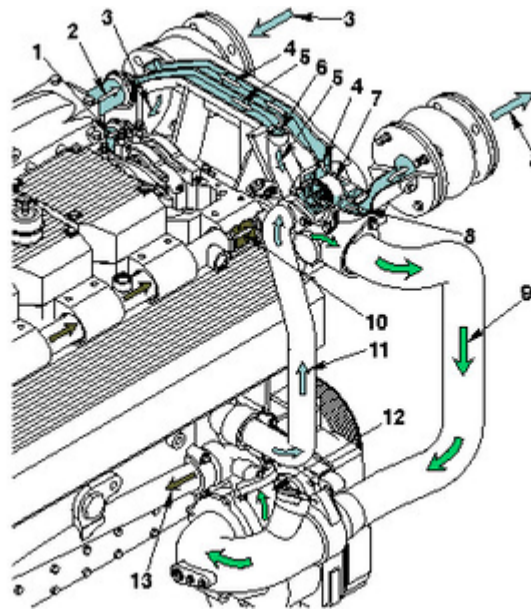

08400414

Single Loop LTA Keel Cooling

1. Aftercooler coolant supply
2. Aftercooler coolant return to thermostat housing
3. Coolant supply from keel cooler
4. Coolant bypass flow to aftercooler
5. Aftercooler coolant return to coolant pump
6. Coolant make-up line from expansion tank
7. Thermostat
8. Coolant supply to keel cooler
9. Coolant return to coolant pump
10. Coolant return to thermostat housing
11. Coolant supply to thermostat housing
12. Coolant pump
13. Coolant supply to engine block.

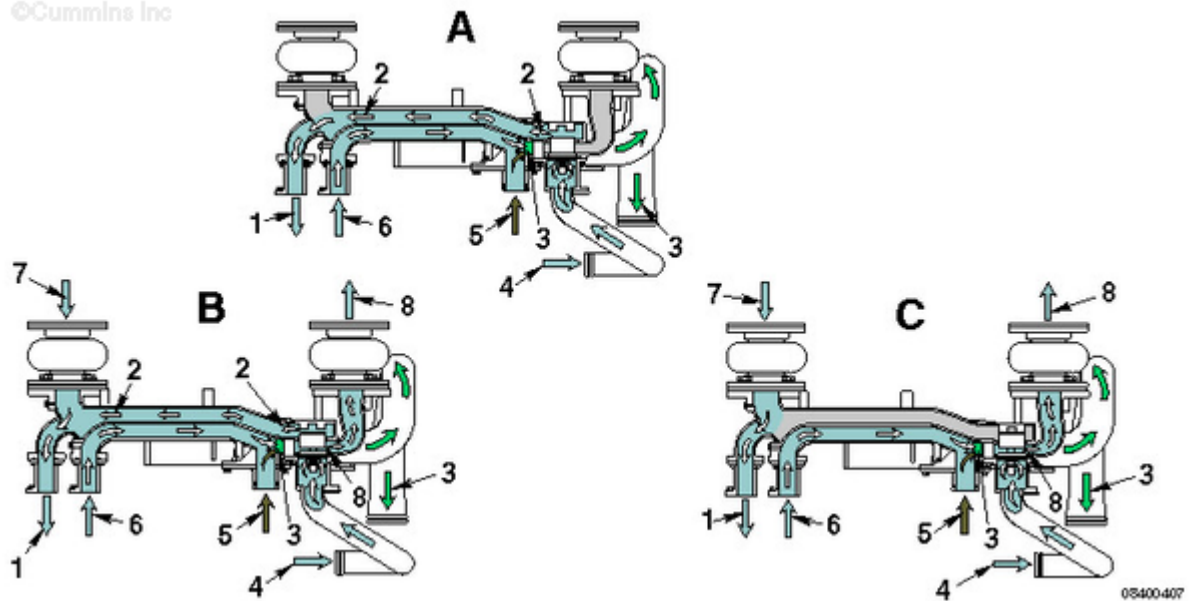

Single Loop LTA Thermostat Housing Coolant Flow

- A. Thermostat closed (up to 66°C [150°F])
 B. Thermostat partially open (66 to 79°C [150 to 175°F])
 C. Thermostat open (above 79°C [175°F]).

1. Aftercooler coolant supply
2. Coolant bypass flow to aftercooler
3. Coolant return to coolant pump
4. Coolant supply from coolant pump
5. Block coolant return to thermostat housing
6. Aftercooler coolant return to thermostat housing
7. Coolant from keel cooler
8. Coolant to keel cooler.