


Trainings ▾

General Information

⚠ WARNING ⚠

Lifting the QSK19 engine improperly can cause equipment damage, severe personnel injury or death. Lifting must be done only by trained, experienced technicians in accordance with instructions in this manual.

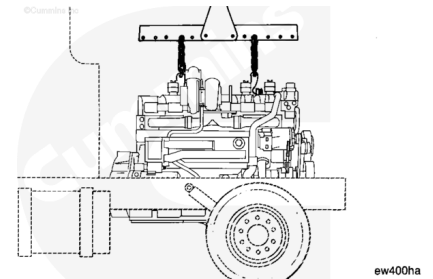

The procedures required to replace an engine will vary with different engine models, the type of equipment, optional equipment, and the shop facilities. Use the following procedures as a guide.

Note : All replacement steps do not apply to all types of equipment. Complete only the steps that apply to the equipment involved. Use the equipment manufacturer's recommendations and precautions for removal of chassis parts to gain access to the engine.

For Rail Applications, because the QSK19-Rail engine is mounted in a horizontal position, the engine has two additional lifting bracket locations to aid in the lifting of the engine. The front lifting bracket is mounted on the lubricating oil pan adapter by three capscrews. The rear lifting bracket is mounted on the flywheel housing by four metric capscrews. The QSK19-Rail engine also uses the two QSK19 standard lifting brackets located between the rocker lever housings.

