


Trainings ▾

Install


Install the o-ring in the groove in the gear cover.

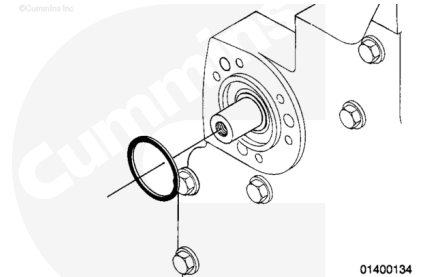


⚠ CAUTION ⚠

Do not allow oil to come in contact with other areas of the seal.

To aid in seal installation, use a small nonmetallic bristle brush to apply a thin film of clean SAE 15W-40 oil to the inside diameter of the seal case.

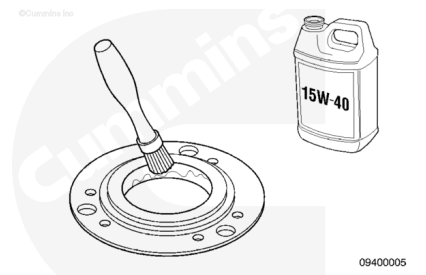


Install the seal on the alternator drive shaft.

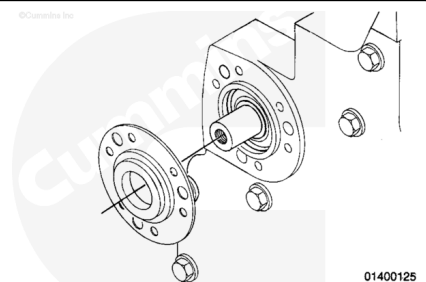


Use the seal installation tool that is supplied with the service seal to push the seal on the alternator drive shaft.

Place the installation tool against the seal.

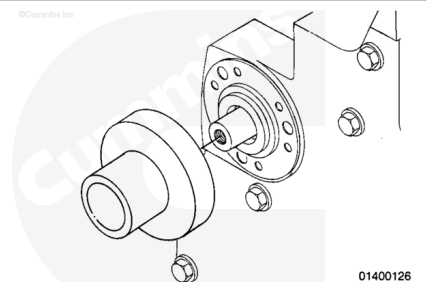


Use the pulley installation tool, Part Number 3376326, or equivalent, to push the seal on the alternator drive shaft.


Position the pulley installer on the accessory drive shaft.

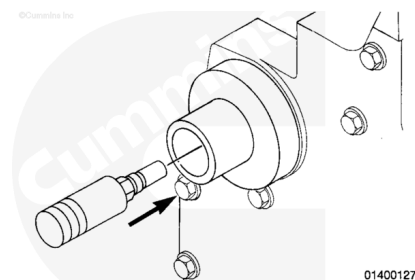


Put the pulley installation housing on the pulley installer.

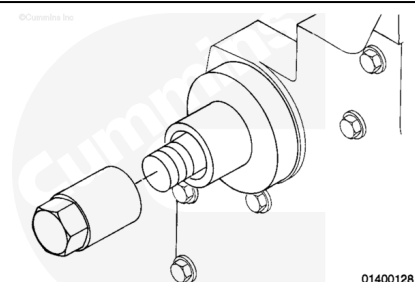


Align the three clinch nuts on the back of the seal carrier flange with the three counterbores in the gear cover seal mounting surface.

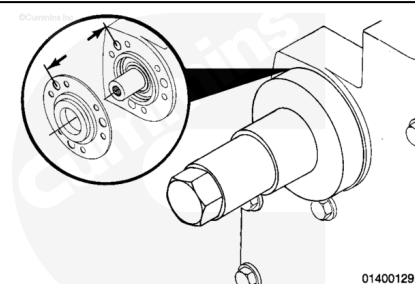

Use the tool to push the seal on the shaft until the seal carrier flange contacts the gear cover.

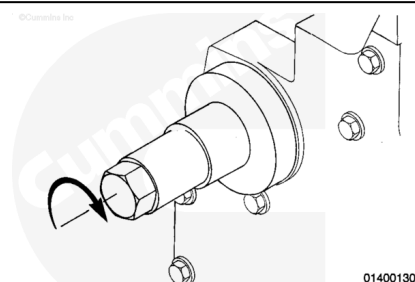


Remove the pulley installation tool housing, seal installation tool, and pulley installer.

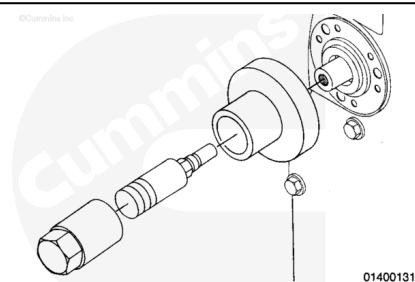

Install the six button head hex socket capscrews. Tighten the capscrews alternately and evenly.

Torque Value: 11 n•m [97 in-lb]

©Cummins Inc.

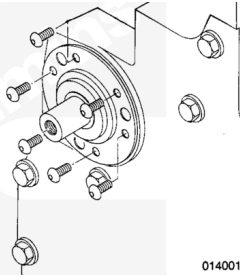

01400133

Last Modified: 30-Apr-2018
