


Trainings ▾


Preparatory Steps

- Remove the alternator drive belt. Refer to Procedure 013-005 in Section 013.
(</qs3/pubsys2/xml/en/procedures/20/20-013-005-tr.html>)
- Use a standard puller, Part Number ST-647, or equivalent. Remove the alternator drive pulley. Refer to Procedure 013-006 in Section 13.
(</qs3/pubsys2/xml/en/procedures/20/20-013-006.html>)

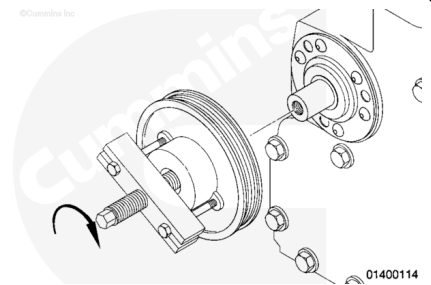

Remove


Remove the six button head hex socket capscrews.

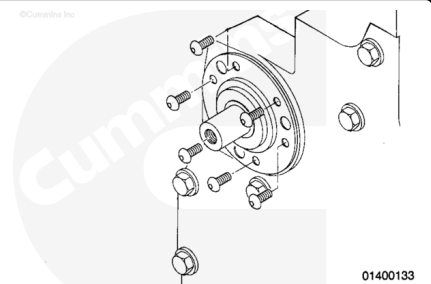


Use three [1/4-20 x 1 in] capscrews to remove the seal from the alternator drive shaft.

Install the three capscrews into the clinch nuts in the seal case.

Tighten the capscrews alternately and evenly to remove the seal.

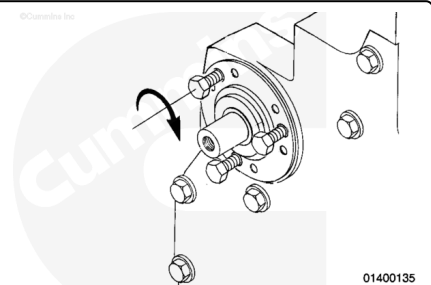

Remove the o-ring from the groove in the gear cover.

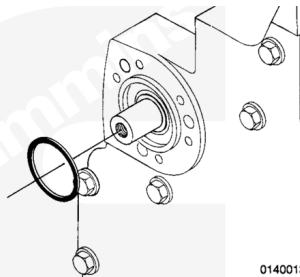


01400134

Install

Install the o-ring in the groove in the gear cover.

©Cummins Inc.

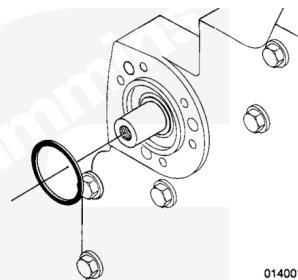


01400134

⚠ CAUTION ⚠

Do not allow oil to come in contact with other areas of the seal.

To aid in seal installation, use a small nonmetallic bristle brush to apply a thin film of clean SAE 15W-40 oil to the inside diameter of the seal case.


©Cummins Inc.

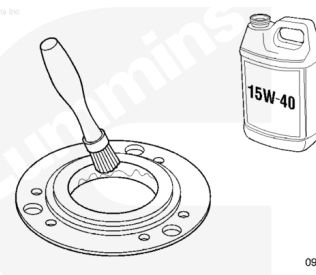

09400005

Install the seal on the alternator drive shaft.


©Cummins Inc.

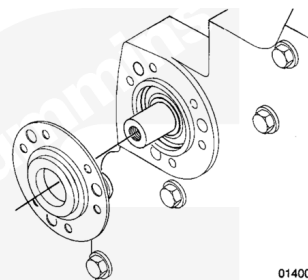

01400125


Use the seal installation tool that is supplied with the service seal to push the seal on the alternator drive shaft.

Place the installation tool against the seal.

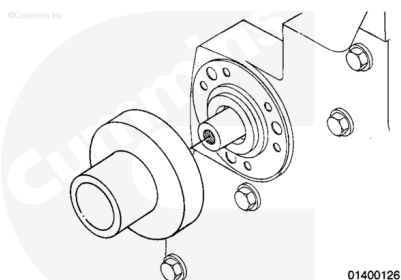


Use the pulley installation tool, Part Number 3376326, or equivalent, to push the seal on the alternator drive shaft.


Position the pulley installer on the accessory drive shaft.

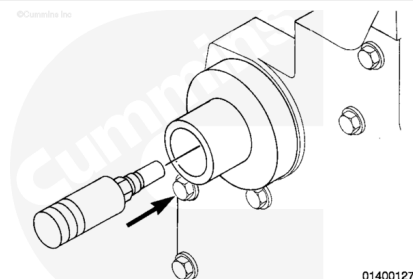


Put the pulley installation housing on the pulley installer.

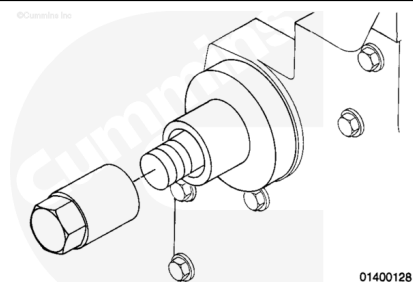


Align the three clinch nuts on the back of the seal carrier flange with the three counterbores in the gear cover seal mounting surface.

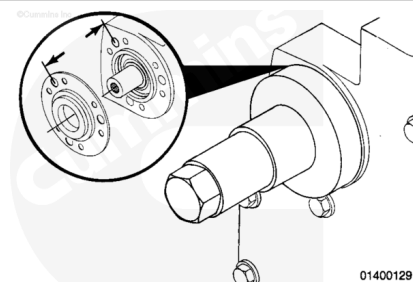

Use the tool to push the seal on the shaft until the seal carrier flange contacts the gear cover.

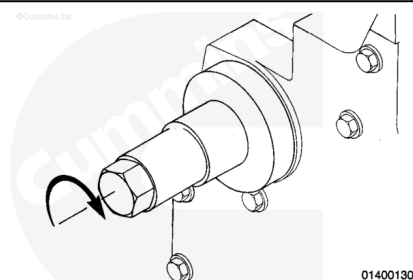


Remove the pulley installation tool housing, seal installation tool, and pulley installer.

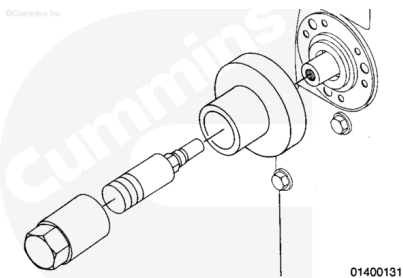

Install the six button head hex socket capscrews. Tighten the capscrews alternately and evenly.

Torque Value: 11 n•m [97 in-lb]

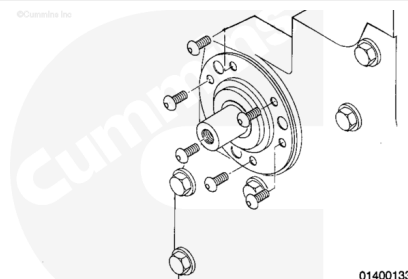

Finishing Steps

- Install the alternator drive pulley. Refer to Procedure 013-006 in Section 13.
(</qs3/pubsys2/xml/en/procedures/20/20-013-006.html>)
- Install the alternator drive belt. Refer to Procedure 013-005 in Section 13.
(</qs3/pubsys2/xml/en/procedures/20/20-013-005-tr.html>)

