


Trainings ▾

Remove


Remove the six button head hex socket capscrews.

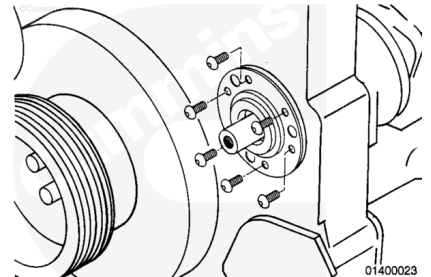

Use three [1/4-20 x 1 in] capscrews to remove the seal from the accessory drive shaft.

Install the three capscrews in the clinch nuts in the seal case.

Tighten the capscrews alternately and evenly to remove the seal.

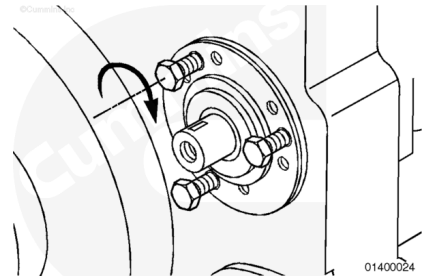

Remove the o-ring from the groove in the gear cover.

Note : The crankshaft pulley and damper have been removed for clarity.

