


Trainings ▾


Preparatory Steps

Use a standard puller, Part Number. ST-647, or equivalent. Remove the accessory drive pulley or timing disk. Refer to Procedure Procedure 009-004 in Section 9. (</qs3/pubsys2/xml/en/procedures/20/20-009-004.html>)

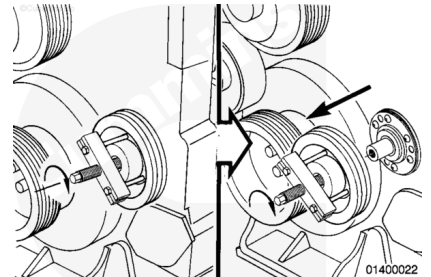

Remove


Remove the six button head hex socket capscrews.

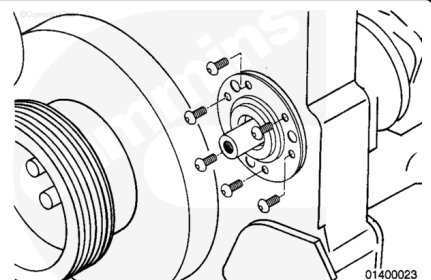

Use three [1/4-20 x 1 in] capscrews to remove the seal from the accessory drive shaft.


Install the three capscrews in the clinch nuts in the seal case.

Tighten the capscrews alternately and evenly to remove the seal.

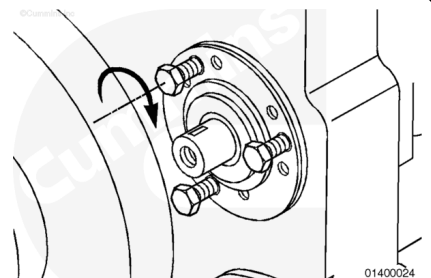


Remove the o-ring from the groove in the gear cover.

Note : The crankshaft pulley and damper have been removed for clarity.

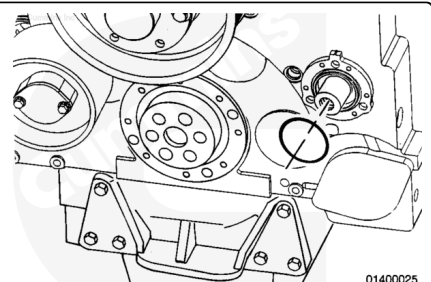


Install

Install the o-ring in the groove in the gear cover.

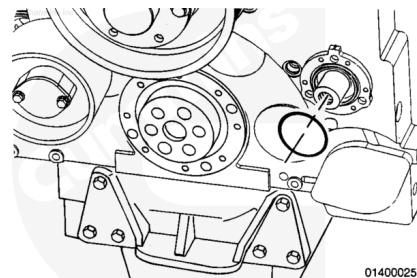


To aid in seal installation, use a small nonmetallic bristle brush to apply a thin film of clean SAE 15W-40 oil to the inside diameter of the seal case.

Note : Do not allow oil to come in contact with other areas of the seal.

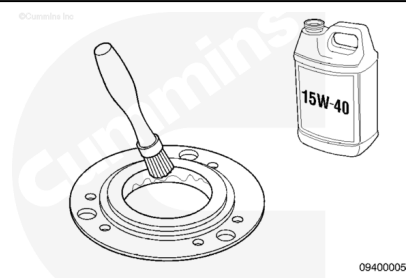


Install the seal on the accessory drive shaft.

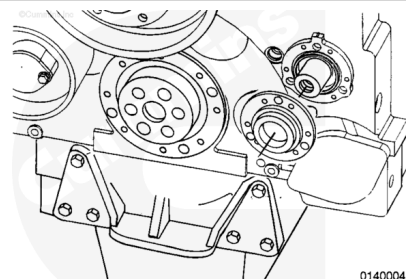


Use the seal installation tool that is supplied with the service seal to push the seal on the accessory drive shaft.

Put the installation tool against the seal.

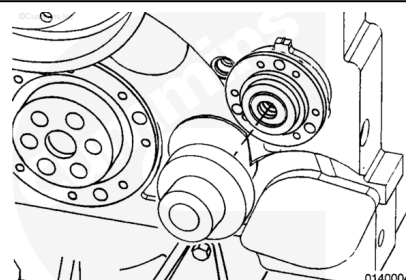


Use the pulley installation tool, Part Number 3376326, to push the seal on the accessory drive shaft.


Position the pulley installer on the accessory drive shaft.

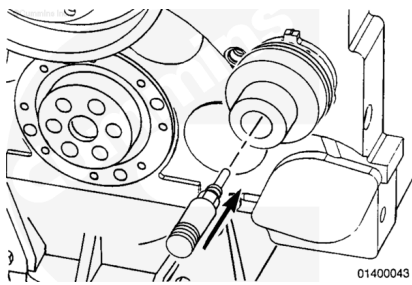


Put the pulley installation housing on the pulley installer.

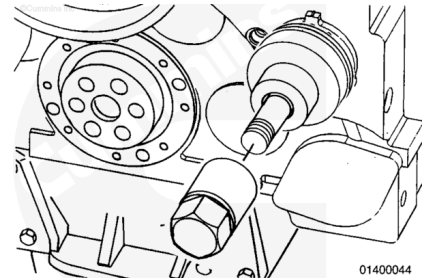


Align the three clinch nuts on the back of the seal carrier flange with the three counterbores in the gear cover seal mounting surface.

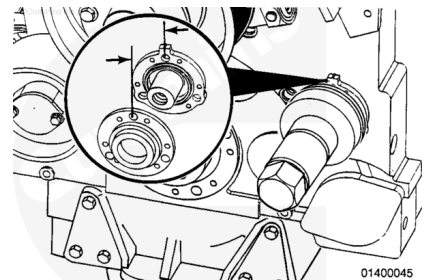

Use the tool to push the seal on the shaft until the seal carrier flange contacts the gear cover.

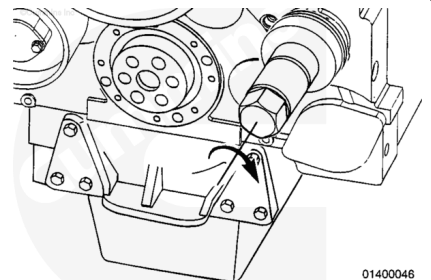


Remove the pulley installation tool housing, seal installation tool, and pulley installer.

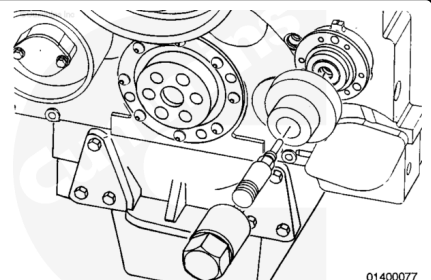


Install the six button head hex socket capscrews. Tighten the capscrews alternately and evenly.

Torque Value: 11 n•m [96 in-lb]

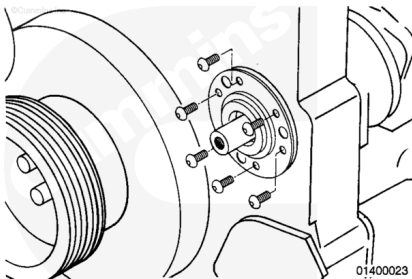

Install the keyway seal.

Install the woodruff key into accessory drive shaft.

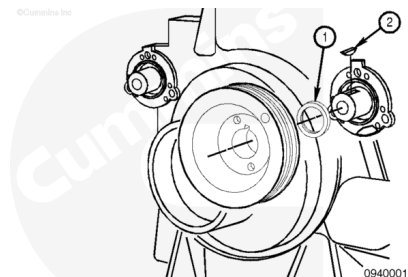

Finishing Steps

Note : Keyway seal must be installed prior to installation of keyway and accessory drive pulley.

Install the accessory drive pulley. Refer to Refer to Procedure Procedure 009-004 in Section 9.

(/qs3/pubsys2/xml/en/procedures/20/20-009-004.html)

