

Trainings ▾


Remove

⚠ WARNING ⚠

Replace the main bearings one at a time. Personal injury and damage to the crankshaft can result if the crankshaft falls.

⚠ CAUTION ⚠

Do not rotate the crankshaft until all of the main bearing caps are pulled to the block. Engine damage will result if the bearings move out of location.

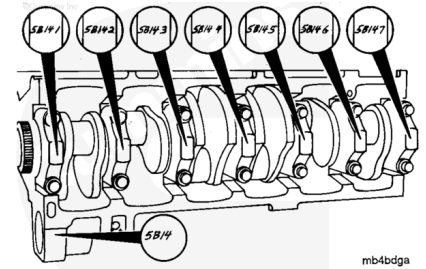

The main bearing caps **must** be pulled into position against the block before the crankshaft is rotated. As main bearing caps are replaced, tighten the cap to a minimum of 68 N•m [50 ft-lb] before turning the crankshaft.


The main bearing caps **must** be marked for position. The last number on each bearing cap identifies the cap location position in the block.

The block and main bearing cap identification numbers **must** be identical.

Use a steel stamp and mark any cap that is **not** marked correctly.

Loosen the main bearing cap capscrews until there is approximately 13 mm [0.5 inch] between the capscrew head and the cap. Use two pry bars to loosen the cap. Install the pry bars in the notches at the sides of the caps.

Remove the cap and capscrews.

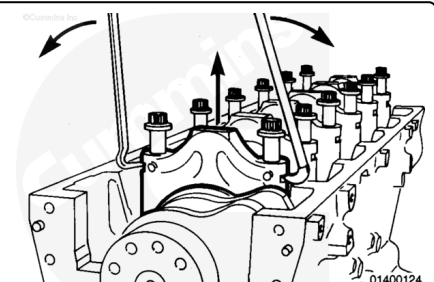


Mark the bearing position for future identification or for possible failure analysis.

Remove the lower bearing. Use an awl to mark the bearing position in the tang area.

Refer to Procedure 001-007 in Section 7.

(/qs3/pubsys2/xml/en/procedures/20/20-001-007-tr.html)

Remove the crankshaft thrust bearings.

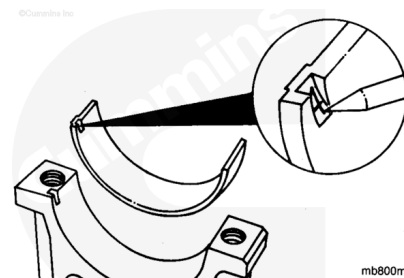

To remove the upper main bearing shell, use the main bearing roll-out tool, Part Number 3823818, and install it in the crankshaft main bearing journal oil hole.

Rotate the crankshaft so the tang (1) of the main bearing shell rolls out of the block first.

Use the crankshaft adapter mounting bolts and slowly turn the crankshaft until the bearing shell is out of the block.

Make sure the bearings are marked for location. The bearings **must** be installed in the original location after rebuild.

