


Trainings ▾

Install


Before installing the thrust bearings, refer to General Information, in Procedure Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Use clean engine oil. Lubricate the upper thrust bearings.

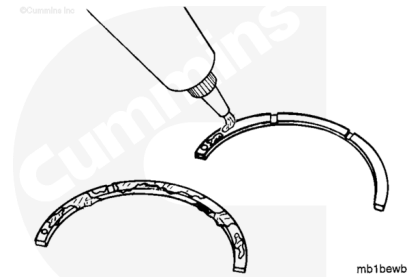

⚠ CAUTION ⚠

The grooves in the thrust bearings must point toward the crankshaft.

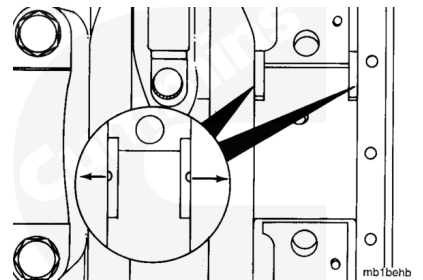

Install the bearings in the Number 6 location.


Note : Move the crankshaft to the front or to the rear so the second thrust bearing to be installed.

Torque the main bearing cap. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Use a dial indicator and measure the crankshaft end clearance. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

If the clearance is **not** within specifications, check for foreign material. Oversize thrust bearings are available to adjust the end clearance.

Note : The upper and lower thrust bearing on the same side of the main caps must be the same thickness.

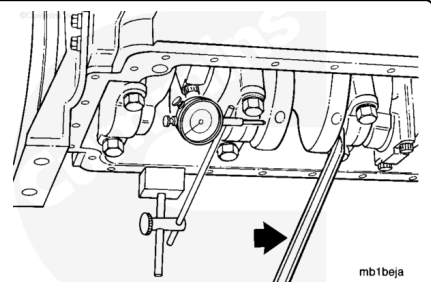

Last Modified: 17-Sep-2015