

Trainings ▾


Remove

Before removing the thrust bearings. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

The number 6 cap contains two thrust bearings.

Remove the main bearing cap. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Remove the bearings and mark them for position in the notched area.

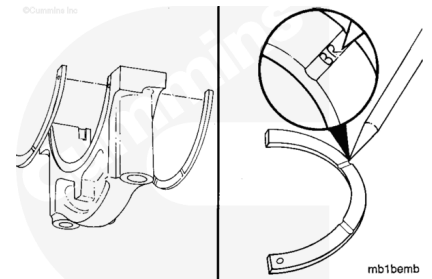

Remove the two upper thrust bearings from the block at the number 6 location. Mark the bearings for position.

Note : If necessary, slide the crankshaft to the front or to the rear to allow the thrust bearings to be removed.

