

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.


⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

©Cummins Inc.

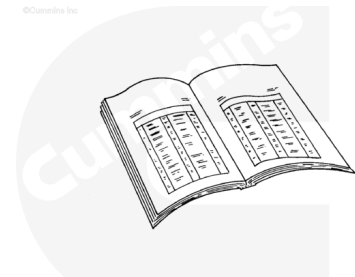

ck800wa

Prepare the engine to remove the thrust bearings.

- Drain the oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-037.html>)
- Remove the oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>)
- Remove the suction tube. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-035.html>)


Remove

Before removing the thrust bearings. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

The number 6 cap contains two thrust bearings.

Remove the main bearing cap. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Remove the bearings and mark them for position in the notched area.

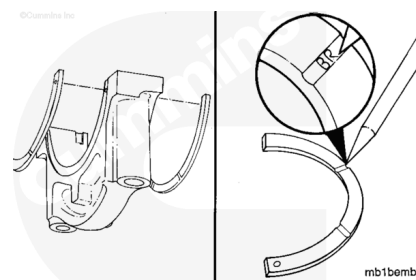

Remove the two upper thrust bearings from the block at the number 6 location. Mark the bearings for position.


Note : If necessary, slide the crankshaft to the front or to the rear to allow the thrust bearings to be removed.



Inspect for Reuse

Thrust bearings are available in three sizes: [standard, 0.010, 0.020 and oversize] . The upper and lower thrust bearings **must** be the same size. The front and rear can be different sizes.


Use the same thrust bearing size as those removed. The crankshaft will be marked on a counterweight adjacent to the thrust location if the thrust flange has been machined for oversize thrust bearings.

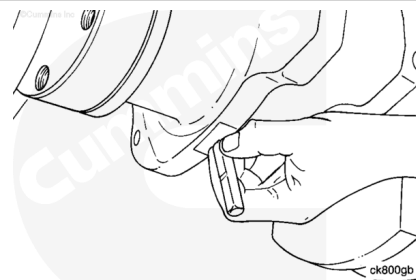

Install


Before installing the thrust bearings, refer to General Information, in Procedure Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Use clean engine oil. Lubricate the upper thrust bearings.

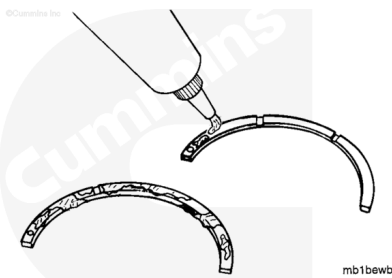

⚠ CAUTION ⚠

The grooves in the thrust bearings must point toward the crankshaft.

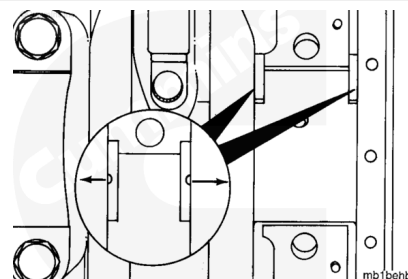

Install the bearings in the Number 6 location.


Note : Move the crankshaft to the front or to the rear so the second thrust bearing to be installed.

Torque the main bearing cap. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

Use a dial indicator and measure the crankshaft end clearance. Refer to Procedure 001-006 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-006-tr.html>)

If the clearance is **not** within specifications, check for foreign material. Oversize thrust bearings are available to adjust the end clearance.

Note : The upper and lower thrust bearing on the same side of the main caps must be the same thickness.

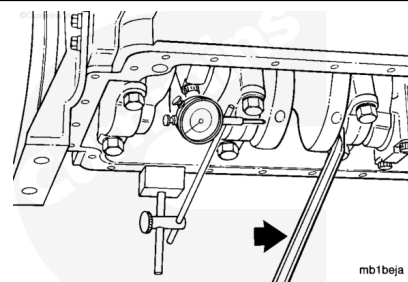


Finishing Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

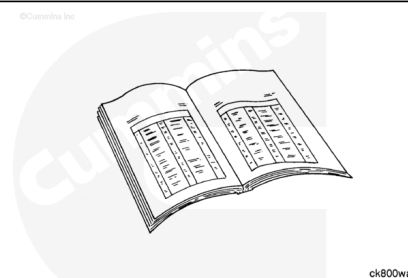

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

** WARNING **

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

Prepare the engine for normal operation.

- Install the suction tube. Refer to Procedure 007-035 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-035.html>)
- Install the oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>)
- Fill the engine with oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-037.html>)

Operate the engine and check for leaks.