



Trainings ▾

Remove

Use hydraulic actuator kit, Part Number 3823621, and camshaft bushing installation/removal kit, Part Number 3824863, to remove the camshaft bushings.

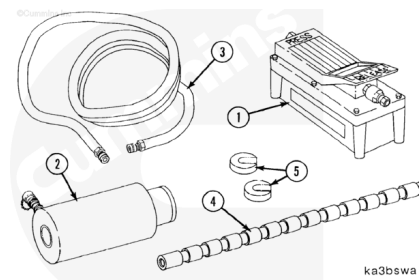

Remove the camshaft bushings.

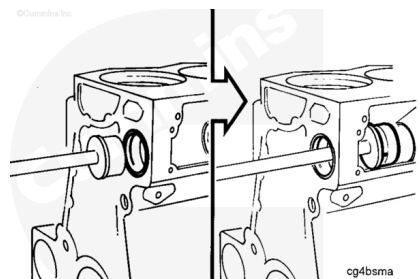


Inspect for Reuse

Clean and inspect the camshaft bushing bore.

mm		in
88.989	MIN	3.5035
89.015	MAX	3.5045


If the inside diameter is **not** within specifications, install a repair sleeve.

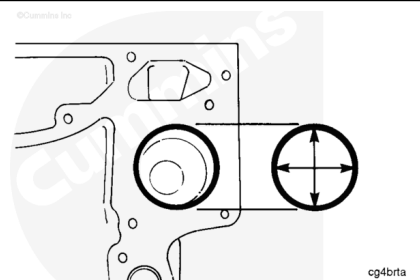

Inspect the amount of copper exposure on the camshaft bushing. If it extends more than 180 degrees around the bushing, the bushing **must** be replaced.

Measure the inside diameter.

mm		in
82.550	MIN	3.2500
82.600	MAX	3.2520

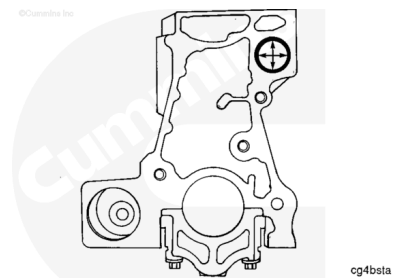


If the bushing is **not** within specifications, the bushing **must** be replaced.

Install

Align the oil holes in the bushing with the oil drilling in the block.

The notch in the bushing **must** be positioned toward the front of the block.

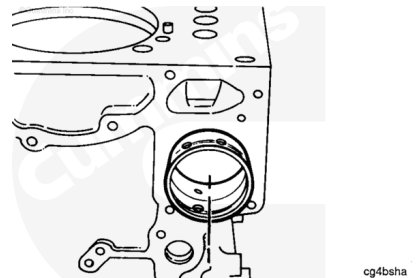


⚠ CAUTION ⚠

Clean the oil groove in the back of the camshaft bushing to prevent contamination of the lubrication system.

Install the bushing until the edge of the groove on the back (outside diameter) is even with the edge of the block.


Clean the bushing outside diameter. Remove any metal shavings from the oil groove.

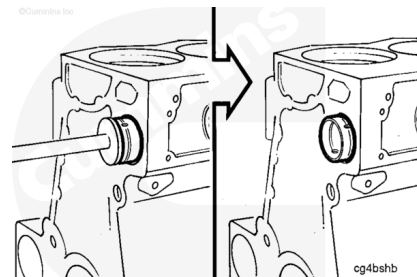

⚠ CAUTION ⚠

Be sure the front bushing is below the surface of the block.


Install the bushing until the oil holes are aligned.

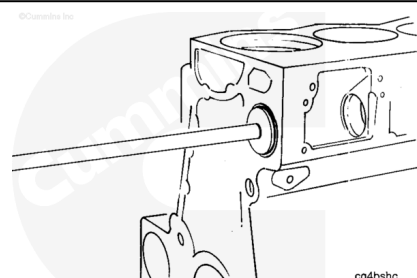

Use a 7 mm [$\frac{1}{4}$ -in] Allen wrench to check the alignment of the bushing oil holes.

There are three holes in each bushing. All holes **must** be aligned except on the front bushing.

There are no drillings to align with the upper holes on the front bushing.

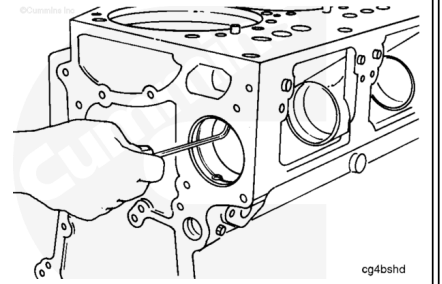

Last Modified: 17-Nov-2008
