


Trainings ▾

Remove

Remove the three capscrews.

Remove the camshaft cover.

Remove and discard the gasket.

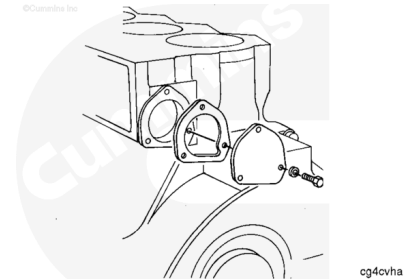

Install

Note : The notch in the gasket and the cover must align with the oil drainback hole.

Install the camshaft cover gasket and the cover. Install the capscrews. Tighten the capscrews.

Torque Value: 45 n•m [35 ft-lb]

