


Trainings ▾

Rotation Check

To rotate the engine crankshaft, push in on the engine barring device and rotate **counterclockwise**.


Rotate the crankshaft through two complete revolutions.

If the engine does **not** turn freely, the equipment can have a malfunction. Refer to the equipment manufacturer's instructions. The engine can have internal problems. Refer to the relevant procedure for inspection and replacement of internal engine components.

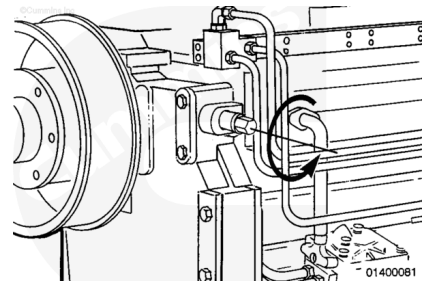

⚠ CAUTION ⚠

Extreme care must be used in prying against the viscous vibration damper. Sharp pry bars can damage the damper casing, resulting in a leak of the viscous vibration damper fluid and ultimate failure of the vibration damper.

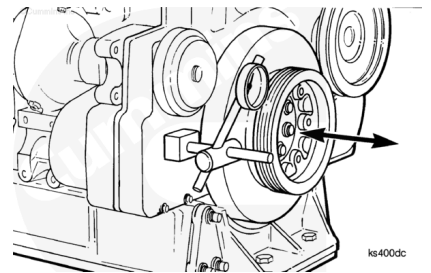

Measure the crankshaft end clearance with a dial indicator.

Measure the end clearance.

Crankshaft End Clearance

New Minimum	New Maximum	Worn Limit
0.10 mm [0.004 in]	0.43 mm [0.017 in]	0.56 mm [0.022 in]

The check can be made by attaching a dial indicator resting against the vibration damper or pulley while prying against the front cover and inner part of the pulley or vibration damper. End clearance **must** be in specification with the engine mounted in the unit and assembled to the transmission or converter.

If the clearance is **not** within specifications, contact a Cummins® Authorized Repair Location.

