


Trainings ▾

Remove

Remove the eight button head hex socket capscrews.

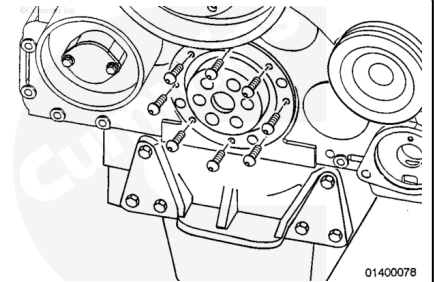

Use four [1/4-20 UNCx1 in] capscrews to remove the seal from the crankshaft.

Install the capscrews into the clinch nuts in the seal case.

Tighten the capscrews alternately and evenly to remove the seal.

