


Trainings ▾


Remove

Remove the seal mounting capscrews.

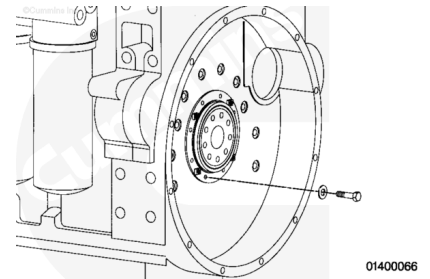

Use four [1/4-20 UNC x 1 inch] capscrews to remove the seal from the crankshaft.

Install the capscrews in the welded nuts in the seal case. Tighten the capscrews alternately and evenly to remove the seal.

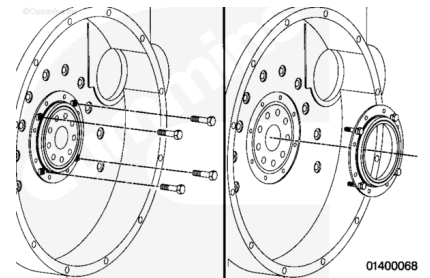

If installed, remove the wear sleeve from the crankshaft using Service Tool Part Number 3824971.

Insert the expander (2) between the wear sleeve and flywheel housing. Turn the expander so the wedge nose deforms the wear sleeve. Repeat this process until the press fit has been reduced and the wear sleeve can be removed from the crankshaft.

