


Trainings ▾


Remove

Use the cylinder liner puller, Part Number 3163745, and puller plate, Part Number 3162886, to remove the cylinder liner.

Wind down the threaded rod to extend the arm. Turn the arm to the side to enable passage through the liner.

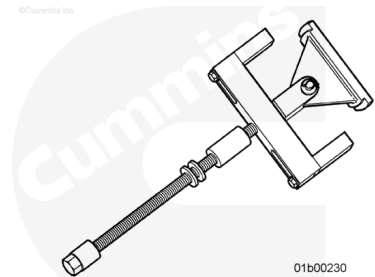


Install the cylinder liner puller, Part Number 3163745, in the cylinder liner. The puller feet **must not** touch the top of the liner. The puller arms **must** be positioned firmly on the bottom of the liner.

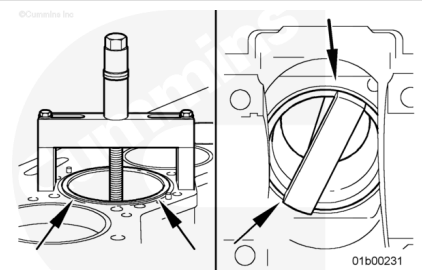

Turn the puller screw until the liner loosens in the block.


Remove the tool and the liner.

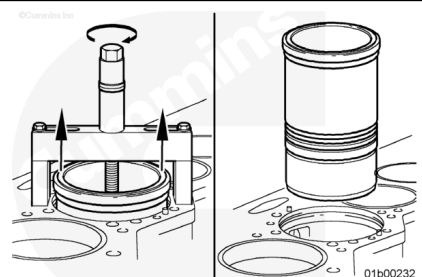

Use a liquid metal marker to mark the cylinder number and bank on each liner. Mark the cylinder liner on the camshaft side of the cylinder liner.


If sealing rings were used, use a tag to mark the cylinder number.

Measure in several places and record the thickness of the sealing rings used in each cylinder. The thickness of the sealing ring is one factor in determining liner protrusion. This information **must** be known when the liners are installed in the engine.

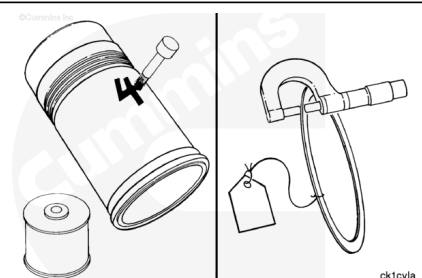

Remove and discard the two D-rings (2 and 3).

Remove and discard the crevice seal (1).

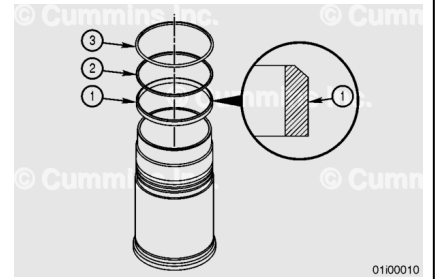

Last Modified: 13-Aug-2015
