


Trainings ▾


Install

Note : Remove the old pan adapter gasket at perforations. Gasket is designed to be removed at perforation. Steel core gasket can not be cut without causing damage to pan adapter surface.


Use Cummins® silver silicon sealant, Part Number 3823494, at each of the four T-joints that intersect the oil pan gasket.

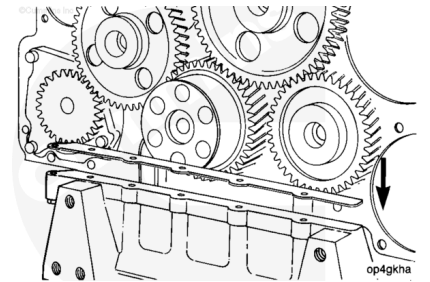

Remove the extraneous tab on the gasket by cutting along the two notched lines.

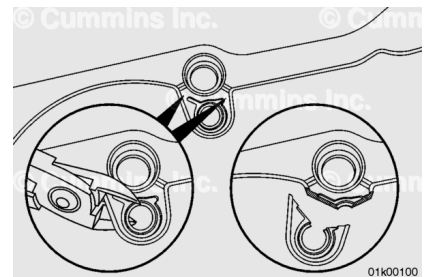

The diamond dowel (15) **must** be installed with the flat surface turned toward the master dowel hole at the lower right hand corner of the block. Guide studs (14) will aid the installation.

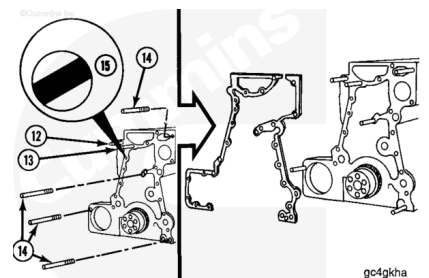


⚠ CAUTION ⚠


Do not use gasket cement. Damage to the gasket will result.

Install the gasket.

Note : If using edge molded rubber gasket, the bottom of the gasket will not be even with the bottom of the block. Fill this gap with sealant.

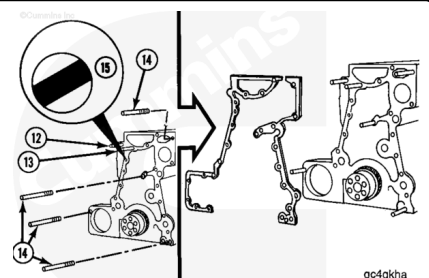


Note : Special capscrews are required to attach the spacer plate and the gear housing. The capscrews have a captive, cone-shaped washer to maintain torque.

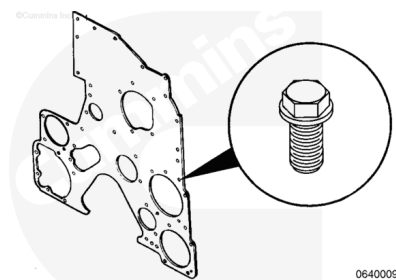

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

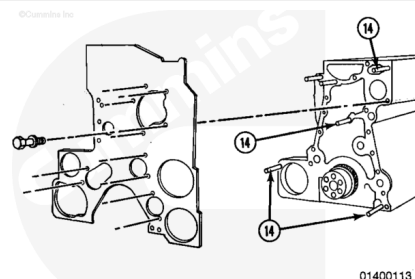

Install the spacer plate and the 11 capscrews as shown.
Remove the guide studs (14).


Install the remaining three capscrews.

Note : If the oil pan adapter is removed, spacer plate alignment **must** be checked. If the oil pan adapter is installed, alignment **does not** require checking.

Use a gauge block, Part Number ST-547, or equivalent, and measure the distance from the bottom of the block to the bottom of the plate.

The bottom of the plate or housing **must** be within 0.05 mm [0.002 inch] of the bottom of the block.

Align the plate with the bottom of the block, if necessary.

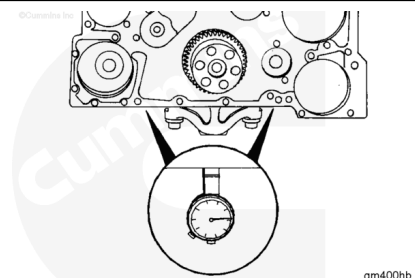

Tighten the capscrews. Use the sequence shown.

Torque Value: 45 n•m [33 ft-lb]

Measure the plate or the housing to the block alignment again to be sure it is within specifications.

