


Trainings ▾

Remove

Remove the gear cover clamping plate.

Note : Some engines have two plates.

This component is installed at the fan hub installation.

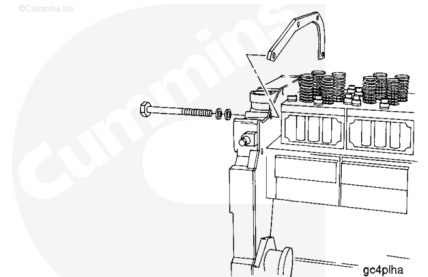


Remove the hydraulic pump drive.

Note : Some engines contain a cover plate instead of a hydraulic pump drive assembly.

Remove the four capscrews.


Remove the hydraulic pump drive assembly.

Remove and discard the gasket.

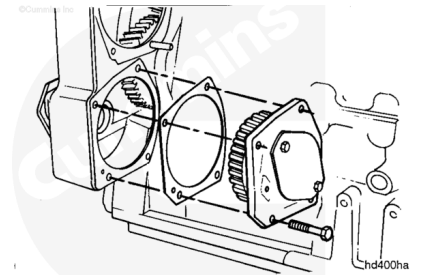

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

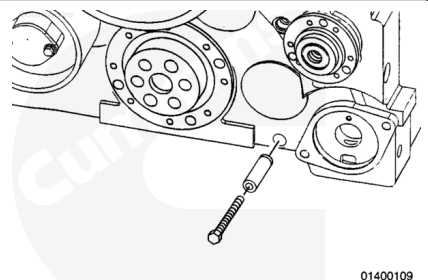

The master dowel **must** be removed before the gear cover can be removed.

Use a 5/16-18 capscrew or a threaded rod. Use an old piston pin or a slide hammer. Remove the dowel.


The front cover contains five capscrews on the bottom.

Remove the capscrews from the oil pan adapter.

The gear cover has 21 capscrews in the front of the cover and three, numbers 1, 2, and 3, on the back side of the cover.

Remove the 24 capscrews, four nuts, washers, and the gear cover.

Remove and discard the gasket.

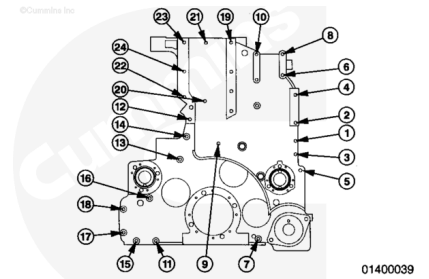

Last Modified: 24-May-2017
