


Trainings ▾


Install

Note : If the idler shaft ring dowel remained in the cylinder block during disassembly, remove the dowel from the block and install it into the idler shaft. The bore in the thrust bearing wear plate and the outside diameter of the dowel are designed to provide a slight press fit to hold the wear plate in position during installation of the idler assembly.

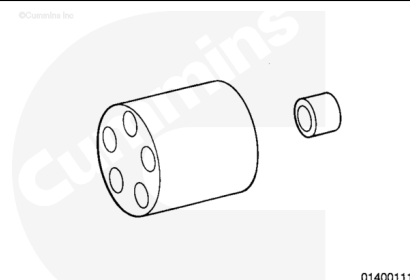

⚠ CAUTION ⚠

The grooves in the thrust washers must be positioned toward the gear.

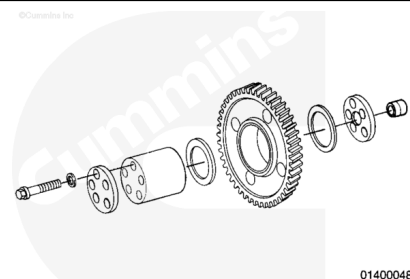


Note : The timing marks on the camshaft gear must be visible when the gear is installed.

Use Lubriplate® Number 105, or equivalent. Lubricate the gear bushing, shaft, and the thrust washer.

Use engine oil. Lubricate the capscrews. Assemble the parts as illustrated.

Note : The camshaft idler gear is the only idler gear that has timing marks.

Align the "O" on the idler gear with the "O" on the crankshaft gear. Align the "X" on the camshaft gear with the "X" on the idler gear.

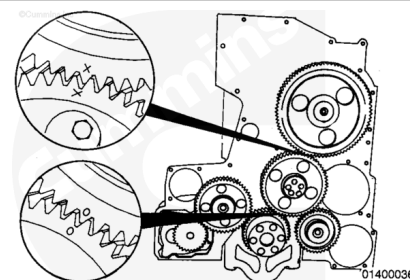


Rotate the idler shaft as necessary to align the mounting capscrew holes.

Use the capscrew to pull the shaft into the bore.

Use the following steps and tighten the capscrews in the sequence shown.


Torque Value:

1. 45 n•m [33 ft-lb]
2. 95 n•m [70 ft-lb]
3. 150 n•m [111 ft-lb]

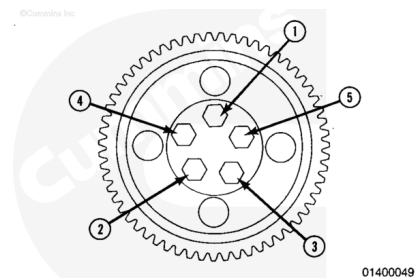

Use a dial indicator. Measure the idler gear end clearance.

Camshaft Idler Gear - End Clearance		
mm		in
0.29	MIN	0.012
0.51	MAX	0.020

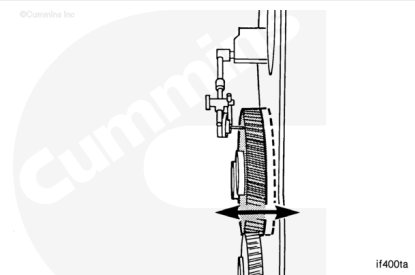

Note : If the clearance is not within specifications, check for foreign material between the parts, or check for proper location of the thrust washers. Oversize thrust washers are available.