


Trainings ▾


Install

Install the water pump idler gear.

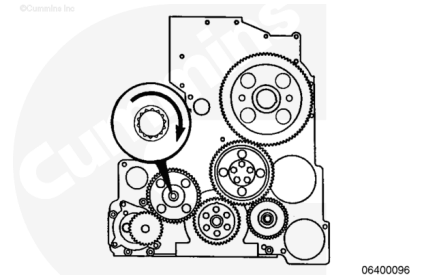

⚠ CAUTION ⚠

The grooves in the thrust washers must be turned toward the gear.

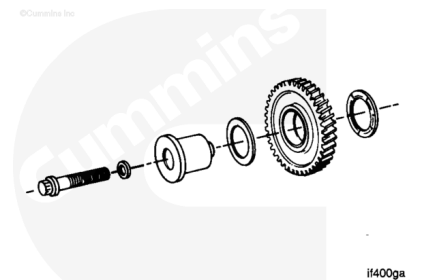


Use Lubriplate™ 105 multipurpose lubricant, or equivalent.
Lubricate the gear bushing, shaft, and the thrust washer.

Use engine oil. Lubricate the capscrew. Assemble the parts as shown.

Align the oil holes in the shaft to an angle 45 degrees to the left of vertical.


Use the capscrew to pull the shaft into the bore. Tighten the capscrews.

Torque Value: 245 n•m [180 ft-lb]

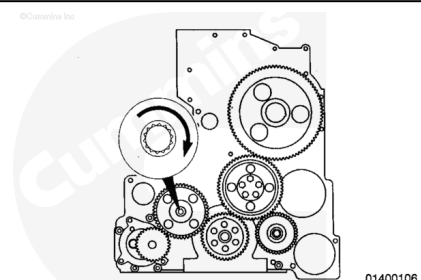

Use a dial indicator and measure the idler gear end clearance.

Water Pump - Idler Gear End Clearance		
mm		in
0.10	MIN	0.004
0.36	MAX	0.014

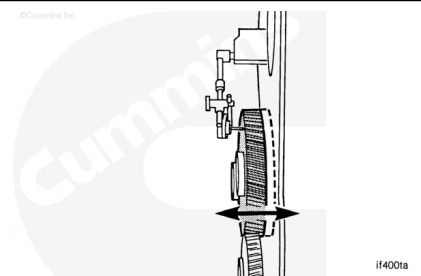

Note : If the clearance is **not** within specifications, check for foreign material between the parts, or check for proper location of the thrust washers. Oversize washers are available.

Last Modified: 16-Apr-2019
