


Trainings ▾

Remove

Note : The bolt-in idler shafts have flanges that require the shaft, the idler gear, and the thrust washer to be removed as an assembly.

Remove the capscrew from the idler gear.

Note : To remove the gear assembly, use two pry bars and pry the gear and the shaft from the block.

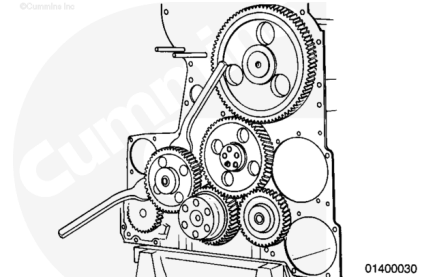

Remove the hydraulic pump idler shaft and thrust bearings.

