


Install

⚠ CAUTION ⚠

Use care when handling the piston cooling nozzle. Any damage to the piston cooling nozzle can result in engine damage.

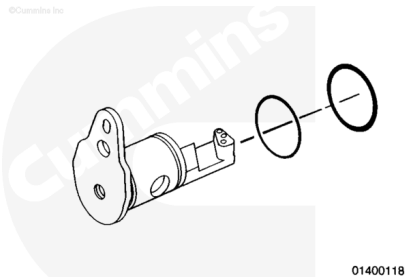


Use vegetable oil to lubricate the new o-ring. Do **not** soak the new o-ring in engine oil.

Install the o-ring in the groove of the piston cooling nozzle that is the least distance to the flange.

Install the piston ring type (steel) seal ring in the groove that is the greatest distance from the flange.

Align one of the valve set marks with the mark cast in the accessory drive seal boss.

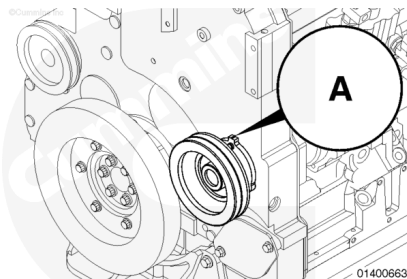


Reference the sequence chart illustrated to identify the two piston cooling nozzles that can be installed.

Valve Set Mark	Install Piston Cooling Nozzles on Cylinders
A	1, 6
B	2, 5
C	3, 4

⚠ CAUTION ⚠

Do not use the capscrew to pull the nozzle into the cylinder block. Nozzles and o-ring damage or external oil leaks can result.

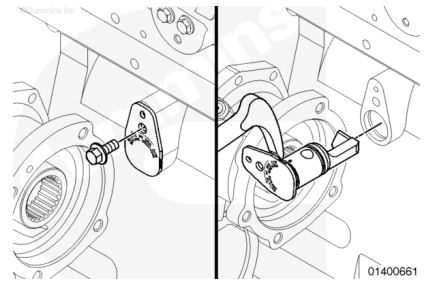

Place the nozzle in the block with the nozzle end parallel to the crankshaft centerline.

Install the two piston cooling nozzles. Use **only** your hand to push the nozzle into the bore until the flange touches the block.

Turn the nozzle 90 degrees to align the capscrew hole.

Install and tighten the capscrew.

Torque Value: 45 n•m [33 ft-lb]

Rotate the barring device and align the next valve set mark with the mark cast into the gear cover.

Repeat the process to install the remaining piston cooling nozzles.

