


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not attempt to remove the piston cooling nozzle when the piston is at bottom dead center. The nozzle will be damaged and can result in piston failure.

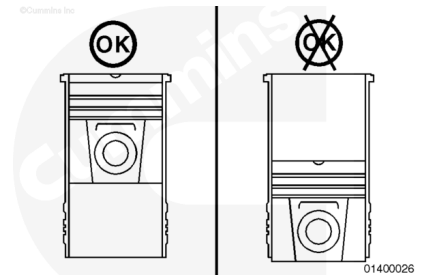


To prevent damage to the piston cooling nozzles during removal, use the valve set marks and the sequence chart to identify those nozzles that can be removed at each index mark on the accessory drive pulley.

One complete crankshaft revolution is required to remove all of the nozzles.

Valve Set Mark	Remove Piston Cooling Nozzles on Cylinders
A	1, 6
B	2, 5
C	3, 4

Rotate the engine barring device until the "A" mark on the pulley is aligned with the mark that is cast on the accessory drive seal boss.

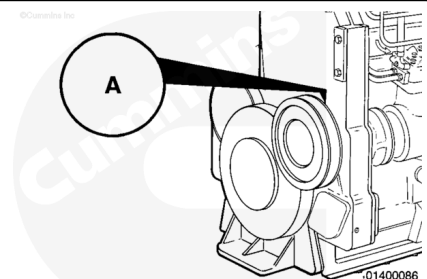


Remove the piston cooling nozzle on cylinders number 1 and number 6.


Remove the piston cooling nozzle mounting capscrew.

Turn the nozzle 90 degrees in the direction of the arrow stamped on the nozzle.

Carefully use a pry bar on the nozzle flange to remove the nozzle from the cylinder block.

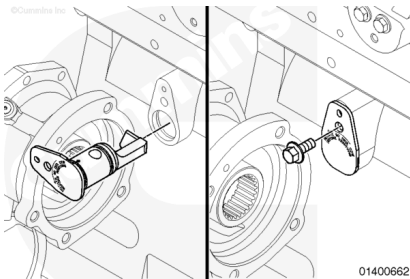

After removing the nozzle from cylinders number 1 and number 6, rotate the engine barring device and align the next valve set mark with the mark cast on the gear cover.

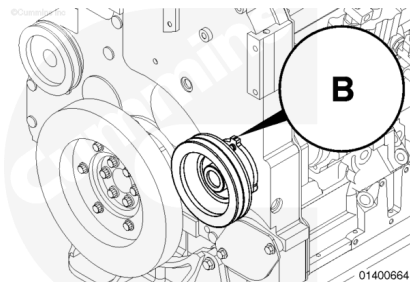

Use the chart, for reference, remove the appropriate piston cooling nozzles.

Repeat the process to remove the remaining piston cooling nozzles.

©Cummins Inc.

Valve Set Mark	Remove Piston Cooling Nozzles on Cylinders
A	1, 6
B	2, 5
C	3, 4