


Trainings ▾

Inspect

⚠ CAUTION ⚠

The silicone fluid in the vibration damper will become solid after extended service and will make the damper inoperative. An inoperative vibration damper can cause major engine or drivetrain damages.

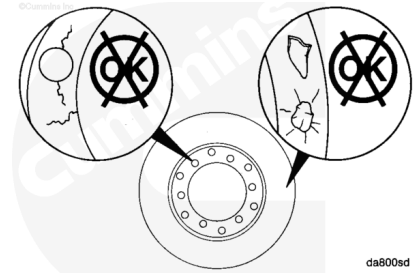

Check the vibration damper for evidence of fluid loss, dents, and wobble. Inspect the vibration damper thickness for any deformation or raising of the damper cover plate.

If any of these conditions are identified, contact a Cummins® Authorized Repair Location to replace the vibration damper.

For vibration damper location, see the following procedure.

Refer to Procedure 100-002 Section E.

(/qs3/pubsys2/xml/en/procedures/20/20-100-002-om.html)

Note : Vibration dampers have limited service life. The damper must be replaced after 576,00 km [360,000], or 15,000 hours of service.

Finishing Steps

- Install the fan belt and related components. Refer to Procedure 008-002 in Section 8. (/qs3/pubsys2/xml/en/procedures/20/20-008-002-om.html)

