

Trainings ▾


Remove

⚠ WARNING ⚠

This component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this component.

⚠ CAUTION ⚠

Do not pry or hammer on the vibration damper. Damage to the vibration damper can result.

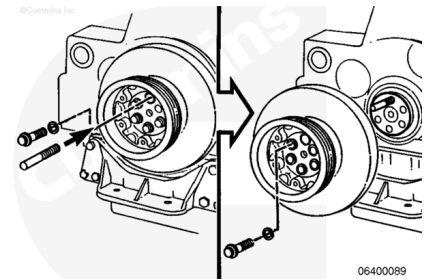


Remove one capscrew and install a $\frac{3}{4}$ -16x5 inch guide stud.

Remove the remaining capscrews from the vibration damper.

Remove the guide stud.

Note : Engines that do not have a belt driven fan hub have an adapter instead of a pulley.

Remove the pulley from the vibration damper.

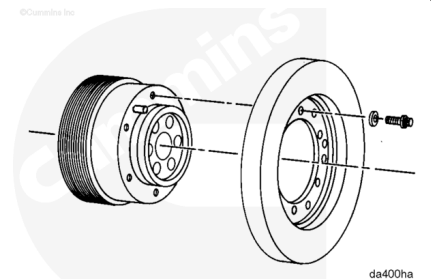

Finishing Steps

- Install the fan belt and related components. Refer to Procedure 008-002 in Section 8. ([/qs3/pubsys2/xml/en/procedures/20/20-008-002-shopds.html](http://qs3/pubsys2/xml/en/procedures/20/20-008-002-shopds.html))

