


Trainings ▾


Remove

Protect the push rod galleys, coolant passages, and oil passages from contamination.

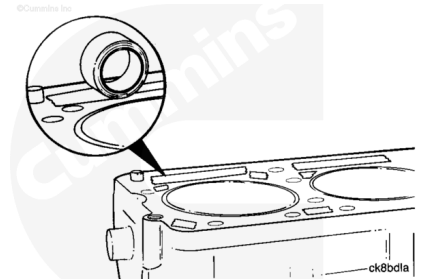

⚠ CAUTION ⚠


Do not use abrasive paper to remove the carbon deposits. Small particles of abrasive paper will cause severe engine damage.

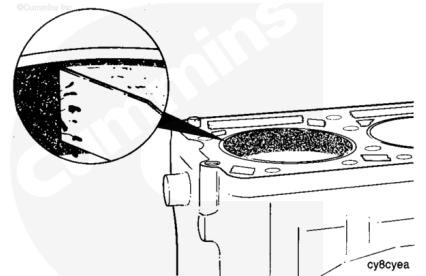

Use a scraper or a similar blunt-edged tool to loosen the carbon deposits.

⚠ CAUTION ⚠


Use extreme care to be sure that no abrasive cleaners or materials are used in the piston ring travel area. Severe engine damage can result.

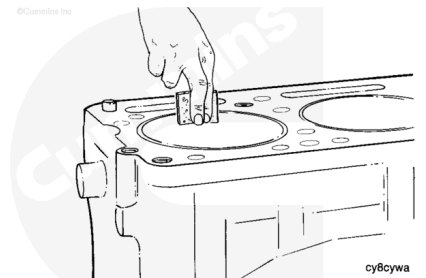

Remove the remaining carbon with a nylon abrasive pad, Scotch-Brite™ 7448, or equivalent, and solvent. The carbon **must** be removed, but the surface does **not** have to appear like new metal.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using a wire wheel. Flying debris and dirt can cause serious personal injury.

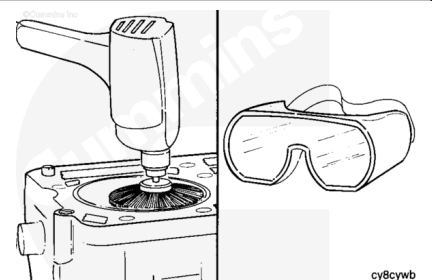


⚠ CAUTION ⚠

Do not use a steel wire wheel of inferior quality. The inferior wire wheel will lose steel bristles during operation and cause additional contamination.

An alternative method to remove the carbon ridge is to use a high quality-steel wire wheel installed in a drill.


Note : Do not use a steel wire wheel in the piston ring travel area. Operate the wire wheel in a circular motion to remove the deposits.

Use the barring mechanism to rotate the engine. Rotate the crankshaft to position the connecting rod at bottom dead center.

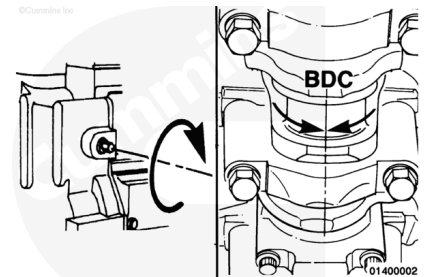

Connecting rods **must** have the cylinder number marked on both the rod and the cap on the side positioned toward the camshaft. Check the rods for correct markings. Use a steel stamp and mark any rod that is **not** correctly marked.


Loosen the capscrews until there is 6 mm [1/4 in] of clearance between the rod cap and the capscrew head.

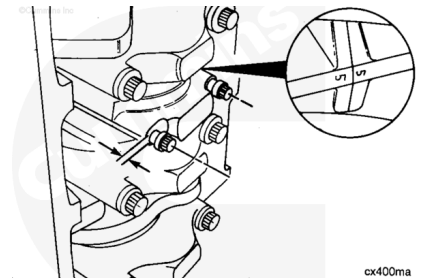


Use a mallet. Tap the connecting rod capscrews until the connecting rod cap and rod separate. Remove the capscrews and the cap.

Remove the lower rod bearing. Use an awl to mark the bearing position in the tang area.

Mark the bearing for future identification or for possible analysis.

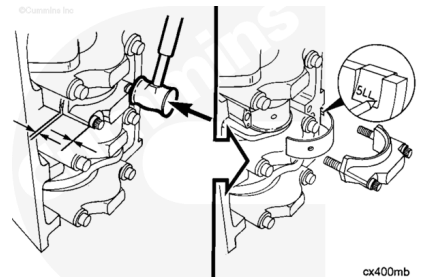


Install two connecting rod guide pins, Part Number 3375098, or equivalent, into the connecting rod. Push the piston and connecting rod up until the piston rings are above the cylinder liner.

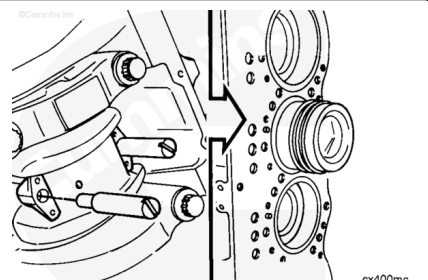

⚠ CAUTION ⚠

Place the piston and rod assembly in a rack to prevent damage to the piston and rod assembly.

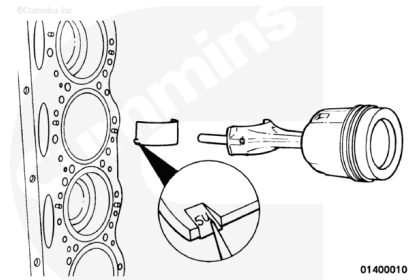

Remove the piston and rod assembly.

Remove the upper connecting rod bearing.

Use an awl to mark the bearing position in the tang area.

Clean and Inspect for Reuse

Clean and inspect the connecting rod for reuse. Refer to Procedure 001-014 in Section 1.

(</qs3/pubsys2/xml/en/procedures/20/20-001-014-tr.html>)

Clean and inspect the pistons for reuse. Refer to Procedure 001-043 in Section 1.

(</qs3/pubsys2/xml/en/procedures/20/20-001-043.html>)

