


Trainings ▾

Measure

Note : This check **must** be performed after the gear cover is removed. If the cover is **not** already removed, refer to Procedure No. 001-031-002.

⚠ CAUTION ⚠

The adjacent (engaging) gear must not turn as the gear being measured is turned.

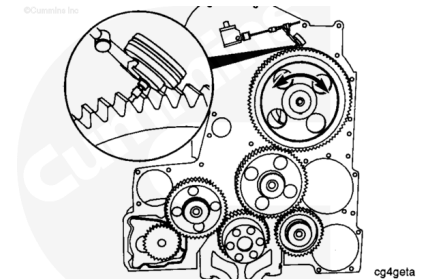

Position a dial indicator so the tip is contacting the surface of the gear tooth as shown. Do **not** allow the mating gear to turn.

Rotate the gear being measured **clockwise** . Position the indicator to "0". Now rotate the gear **counterclockwise** and read the indicator.

mm		in
0.07	MIN	0.003
0.30	MAX	0.012

The backlash on the oil pump can be adjusted by rotating the pump body.

