


Trainings ▾

Remove

Use the appropriate bushing mandrel and an arbor press. Remove the accessory drive, water pump, and the hydraulic pump drive bushings.

Measure the bore I.D. Replace the front cover when any bore I.D. is **not** within specifications.

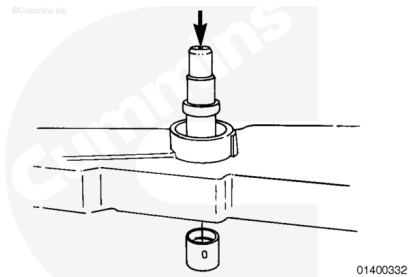

	mm		in
Accessory and Water Pump Drive	43.078	MIN	1.696
	43.104	MAX	1.697
Hydraulic Pump Drive	41.275	MIN	1.625
	41.301	MAX	1.626

Install

Use appropriate bushing mandrel, install the accessory drive, water pump and hydraulic pump bushings.

Use a mallet or an arbor press. Install the bushings.

