

Trainings ▾

Preparatory Steps


⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.


- Remove the rock sheilds. Refer to Procedure 016-011 in Section 16. (</qs3/pubsys2/xml/en/procedures/20/20-016-011.html>)
- Drain the engine lubricating oil. Refer to Procedure 007-037 in Section (</qs3/pubsys2/xml/en/procedures/20/20-007-037.html>)
- Remove the lubricating oil pan. Refer to Procedure 007-025 in Section (</qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html>)
- Remove the lubricating oil pan adapter. Refer to Procedure 007-027 in Section 7. (</qs3/pubsys2/xml/en/procedures/20/20-007-027-tr.html>)

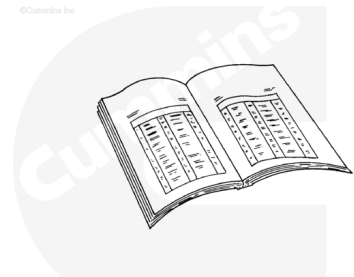

ck800wa


Initial Check

Manually rotate the engine to gain access to the crankshaft tone wheel capscrews.

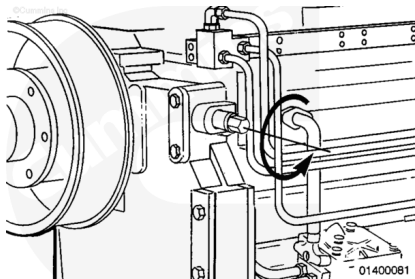


Inspect the crankshaft tone wheel for damage, cracks, or missing teeth.

Inspect for bends and deformation which would **not** allow it to be read by the speed sensor. If damaged, replace the crankshaft tone wheel.

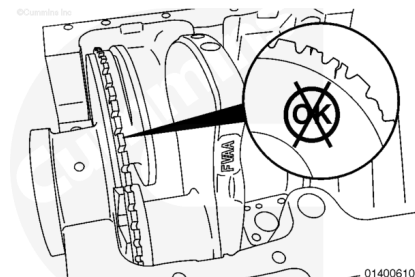


Check for loose capscrews. Tighten if necessary.

Torque Value: 33 n•m [24 in-lb]

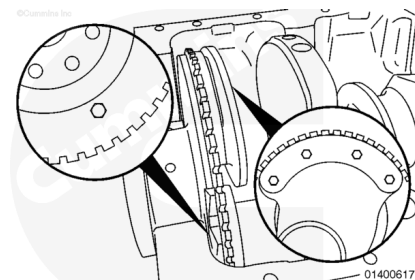


Remove

Remove the crankshaft. Refer to Procedure 001-016 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-016-tr.html>)

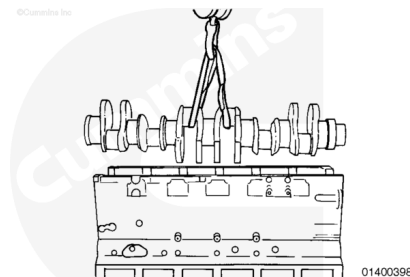


Remove the seven tone wheel mounting capscrews and the crankshaft counterweights.

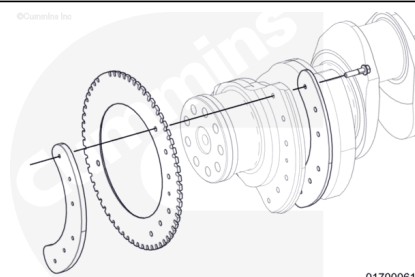


Install

Install the seven mounting capscrews.

Torque Value: 33 n·m [24 ft·lb]

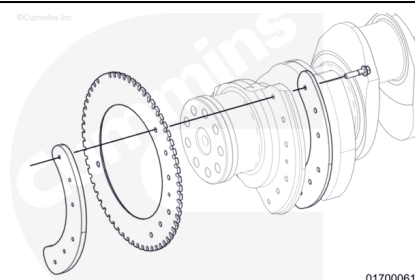

Install the crankshaft. Refer to Procedure 001-016 in Section 1.
(/qs3/pubsys2/xml/en/procedures/20/20-001-016-tr.html)

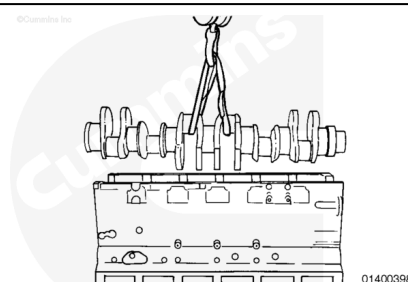

Finishing Steps

- Install the lubricating oil pan adapter. Refer to Procedure 007-027 in Section 7.
(/qs3/pubsys2/xml/en/procedures/20/20-007-027-tr.html)
- Install the lubricating oil pan. Refer to Procedure 007-025 in Section (/qs3/pubsys2/xml/en/procedures/20/20-007-025-tr.html)
- Fill the engine with lubricating oil. Refer to Procedure 007-037 in Section (/qs3/pubsys2/xml/en/procedures/20/20-007-037.html)
- Install the rock shields. Refer to Procedure 016-011 in Section 11. (/qs3/pubsys2/xml/en/procedures/20/20-016-011.html)

