

Trainings ▾

Install

⚠ WARNING ⚠


Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

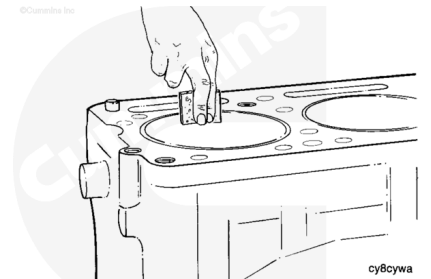


Clean the top of the cylinder block and the cylinder liners.

Clean the threaded holes which attach the cylinder head to the block with electrical contact cleaner, Part Number 3814510, or equivalent.


Dry with compressed air.

Measure the liner protrusion. Refer to Procedure 001-028 in Section 1. (</qs3/pubsys2/xml/en/procedures/20/20-001-028-tr.html>)

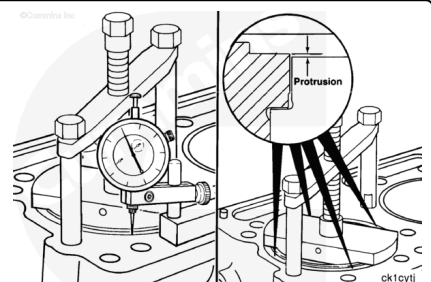


The word TOP, stamped on top of the head gasket, **must** be visible after the gasket is installed.

Install the cylinder head gasket.

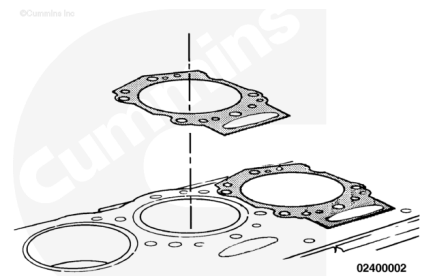

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

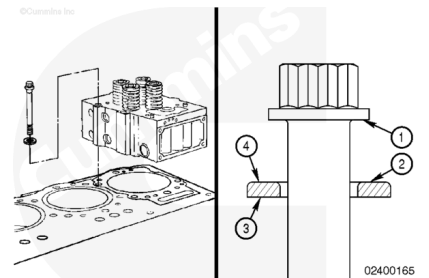

Install the cylinder head. It **must** slide easily over the dowel pins.

Apply clean engine oil to the threads of the cylinder head cap screws.

Apply Loctite™ 51606, or equivalent, non-metal, graphite base, anti-seize compound to the top side of the washer.

Install the cap screws.


The markings on the head of the flange head cap screws serve as an aid during installation.

Torque Value:

Flange Head Cap screws

1. 298 n•m [220 ft-lb]

After tightening the cap screw, mark the cylinder head adjacent to one of the two single marks on the cap screw head.

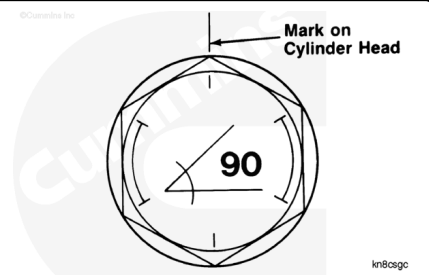

Tighten the cap screws using the following steps in the sequence shown.

Torque Value:

1. 68 n•m [50 ft-lb]

2. 203 n•m [150 ft-lb]

3. 298 n•m [220 ft-lb]

4. Advance 90 degrees

