


Trainings ▾

Leak Test

⚠ WARNING ⚠


Always wear protective eyewear and protective clothing when cleaning with steam or high pressure water.

Use steam or high pressure water. Clean the exterior of the engine.

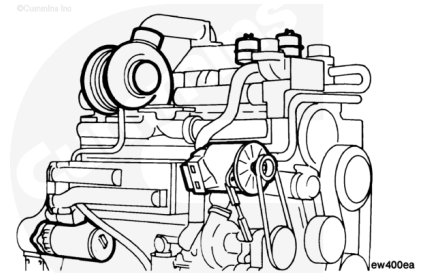


Operate the engine at low idle.


Check for oil or coolant leaks between the cylinder head and the engine block.

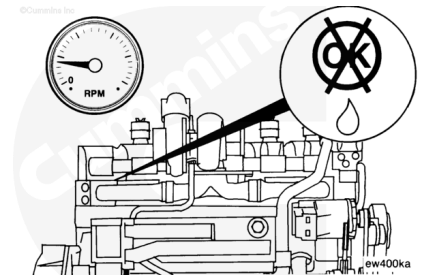


Listen for a chirping sound between the cylinder head and engine block. A chirping sound, usually during engine acceleration, indicates a combustion leak.

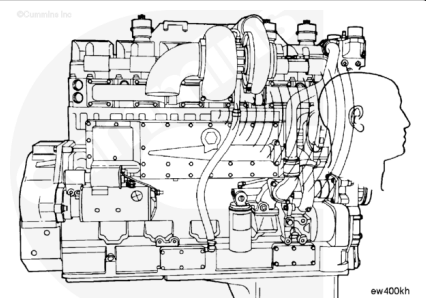

If a leak is found, remove the cylinder head and all related components. Refer to Procedure 002-004 (</qs3/pubsys2/xml/en/procedures/20/20-002-004-tr.html>).

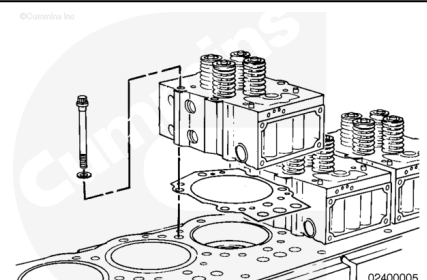

Pressure check the cooling system to be sure the leak was at the head gasket and **not** at the liner counterbore. Refer to Procedure 001-026 (/qs3/pubsys2/xml/en/procedures/20/20-001-026-tr.html) for coolant leaks at the counterbore.

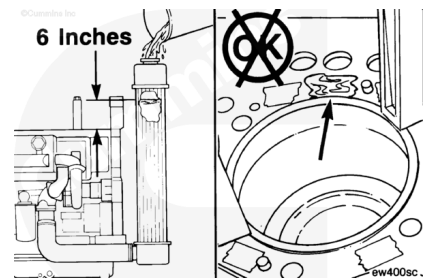

Install the cylinder head and all related components. Refer to Procedure 002-004 (/qs3/pubsys2/xml/en/procedures/20/20-002-004-tr.html).

