

Trainings ▾

Preparatory Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.

- Remove the fuel filters. Refer to Procedure 006-015 in Section 4. (</qs3/pubsys2/xml/en/procedures/20/20-006-015-om.html>)
- Remove the fuel filters. Refer to Procedure 005-068 in Section 4. (</qs3/pubsys2/xml/en/procedures/20/20-005-068.html>)
- Remove the high-pressure injector supply lines. Refer to Procedure 006-051 in Section A. (</qs3/pubsys2/xml/en/procedures/20/20-006-051-om.html>)



ck800wa

Rail Applications

- Drain coolant, if necessary. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/20/20-008-018-om.html>)
- Remove the fuel filters. Refer to Procedure 006-015 in Section 4. (</qs3/pubsys2/xml/en/procedures/20/20-006-015-om.html>)
- Remove the high-pressure injector supply lines. Refer to Procedure 006-051 in Section A. (</qs3/pubsys2/xml/en/procedures/20/20-006-051-om.html>)



ck800wa

Remove

with Mechanically Actuated Injector


Loosen the hose clamp at the breather vent tube.

Remove the tube support bracket capscrew and the bracket.

Remove the vent tube and the hose from the engine.


If the vent tube is blocked with an obstruction or sludge, it **must** be cleaned to prevent excess crankcase pressure buildup.

Remove the rocker lever cover. Refer to Procedure 003-011 in Section A. (</qs3/pubsys2/xml/en/procedures/20/20-003-011-om.html>)

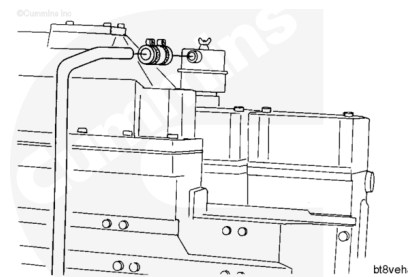


Remove the following parts from the breather body (6).

1. Wing Nut
2. Washer
3. Breather Cap
4. Screen Mesh
5. Element.

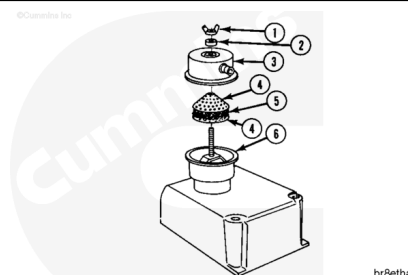

Remove the push nuts.

Remove the baffle.

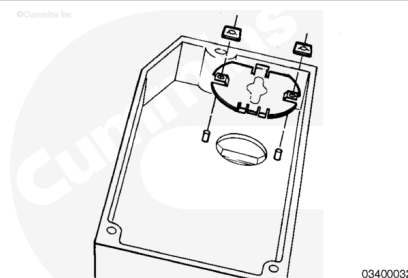


⚠ CAUTION ⚠

The mandrel must make contact on the breather body to prevent damage.

Use a water pump bearing separator, Part Number 3375326, or equivalent. Support the cover as close as possible to the breather to prevent cracking of the cover.

Use a press and mandrel to press the breather out.

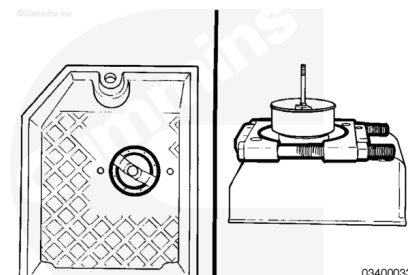


with Electronically Actuated Injector


Loosen the hose clamp at the breather vent tube.

Remove the tube support bracket capscrews and the bracket.

Remove the vent tube and hose from the engine.

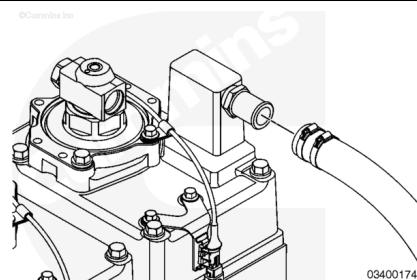


Remove the rocker lever cover. Refer to Procedure 003-011 in Section A. (</qs3/pubsys2/xml/en/procedures/20/20-003-011-om.html>)

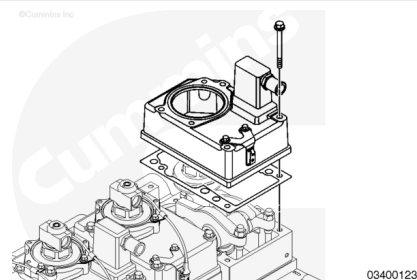

Remove the breather cover from the underside of the rocker lever cover by removing the three spring nuts.

Discard the spring nuts.

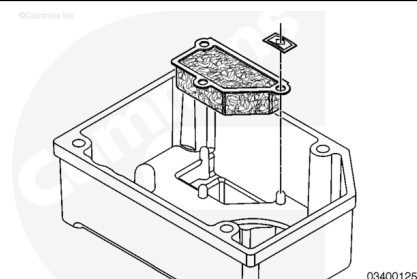


Rail Applications

Loosen the hose clamp and remove the crankcase breather hose from the breather canister.

Loosen the tube clamp between the breather canister and the hand-hole cover.


Remove the breather canister from the hand-hole cover.

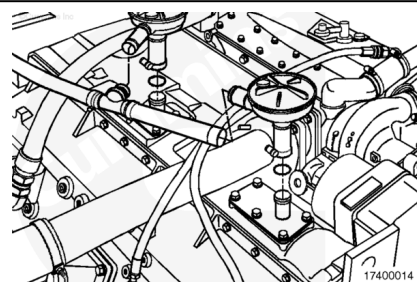

Note : The left hand breather housing has mounting capability for a second impactor. The right hand breather housing does not.

Perform the following steps to remove the right hand impactor style breather:

Remove the tube support clip.

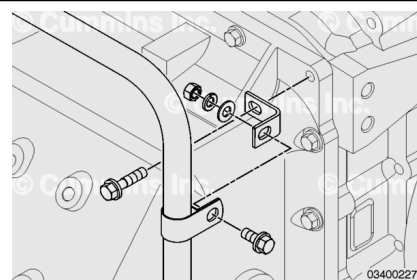


Remove the fuel filters, if necessary.

Remove the tube support clip longer capscrew (3/8 x 1-3/4-inch).

Remove the remainder of the hose, as shown.

Remove hose clamps.

1. 88.9 mm [3.5 in] Hose
2. 165.1 mm [6.5 in] Hose
3. 222.25 mm [8.75 in]

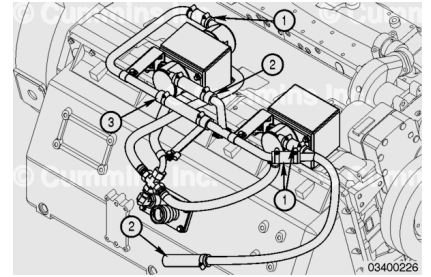


Remove the P-clip from the drain hose. Remove the capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch), and the nut (3/8-inch).

Remove the straight thread o-ring elbow adjusting nut (1).

Remove the o-ring face seal cross to the elbow (2).


Remove the hose fittings from the side cross fitting (3).

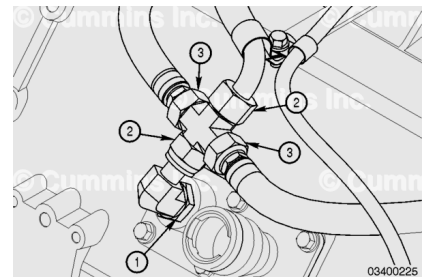

Remove the left side coolant filter hose support.

Remove the 3/8-inch stud.


Remove the coolant filter hose capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch) and P-clip.

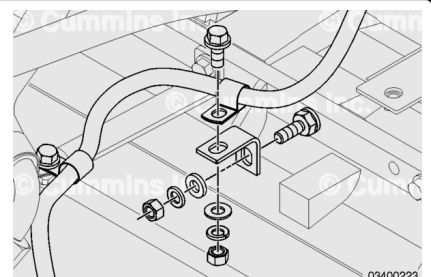

Remove the 3/8-inch diameter stud.


Remove the clip support plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch).

Remove the coolant filter hose from the P-clip. Remove the capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch).

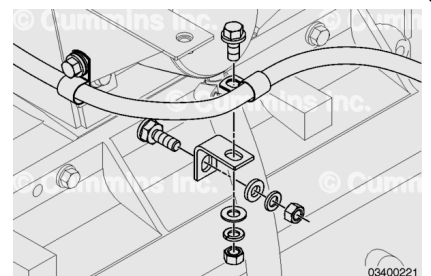

Remove the capscrew (3/8 x .973-inch), plain washer (3/8-inch), and P-clip from the hose support bracket. Remove the capscrew (3/8 x 0.976-inch six point).


Remove the P-clip from the coolant filter hose.

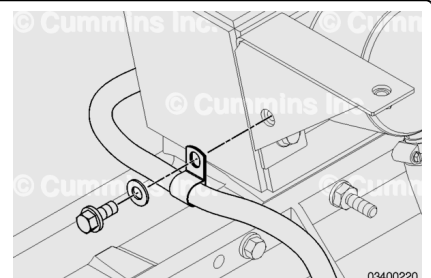

Remove the coolant hose support from the tube support bracket.

Remove the capscrew ((1) six-point, 3/8 x 1-inch) from the two P-clips.


Remove the hose support clip.

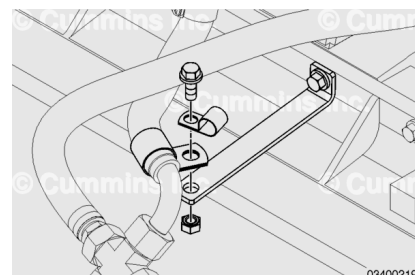

Remove the oil pan mounting capscrew.

Remove the hose support.


Remove the tube brace.

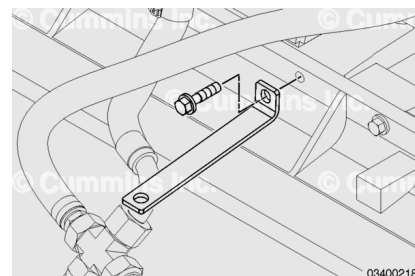

Remove the hose clamps.


Remove the hose fittings.

Remove the hose.

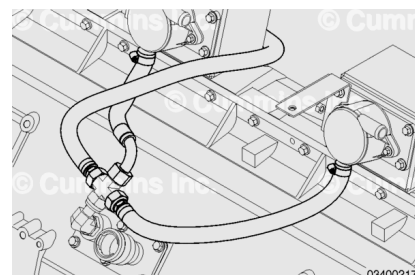


Loosen the elbow fitting.

Remove the cross fitting on the elbow fitting as shown.

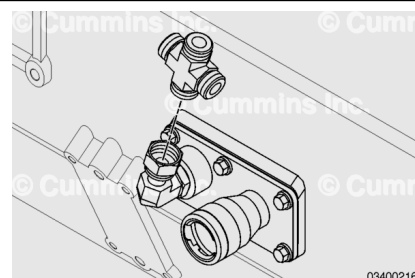

Remove the elbow fitting.

Remove the 90 degree elbow fitting on the oil pan hand-hole cover.

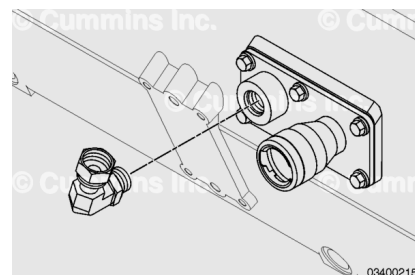

Procedure for removal of right hand and left hand breathers:

Right Hand Breather


Remove the front breather flange head capscrews.

Remove the right hand front breather.


Left Hand Breather

Remove the front breather flange head capscrews.

Remove the left hand front breather.

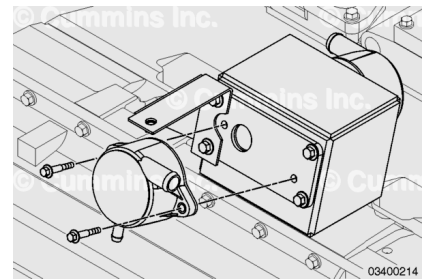


Remove the left hand rear breather and hose as an assembly.

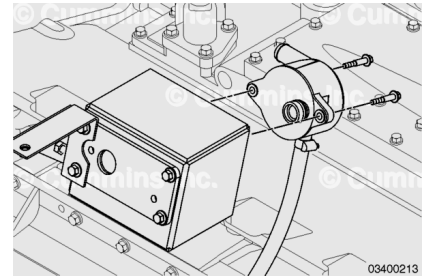


Remove the clamp.

Remove the breather drain hose for the left hand rear breather.

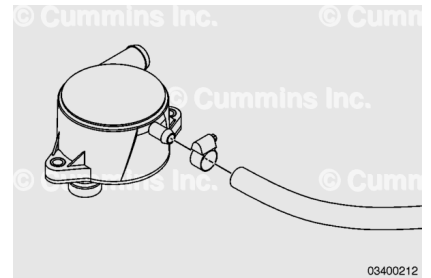


Remove the six capscrews (3/8 x 1-inch), as shown.

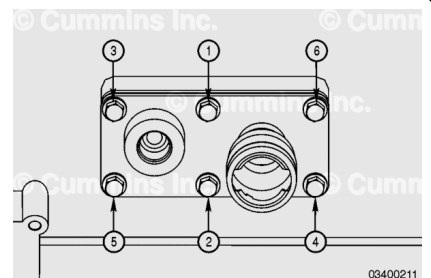


Remove the tube from the oil pan sump as shown.

Remove the gasket.

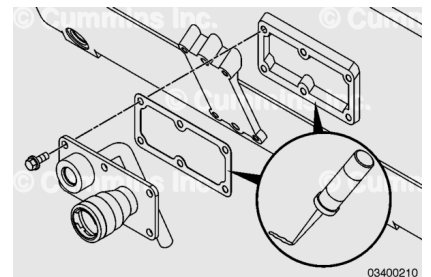


Remove the 10mm [0.39 in] x 40mm [1.57 in] capscrews with 11 mm [0.4325 in] inside diameter (I.D.) plain washers.

Remove the hand-hole cover.

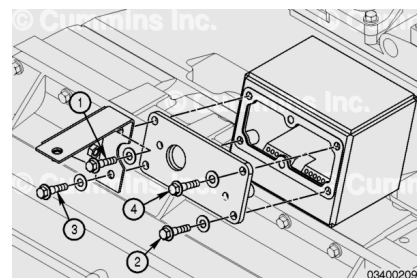


Remove the gasket from the left hand breather housing hand-hole cover.

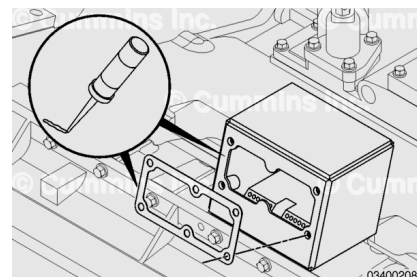


Remove the two center capscrews (3/8 x 1-¼ -inch, 12 point, 3/8-inch diameter) and the plain washers (3/8-inch inside diameter, 0.0128-inch thick).


Remove the upper baffle through the hand hole opening.

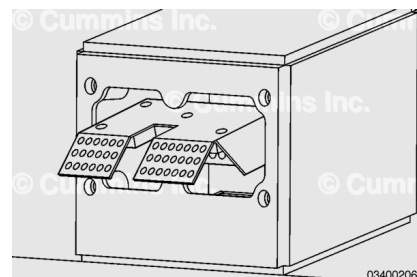


Remove the four outer capscrews (3/8 x 1-¼ -inch, 12 point) and the plain washers (3/8 x 0.0128-inch thick) from the breather housing.

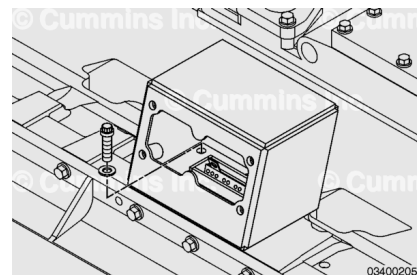

Remove the right hand breather housing.

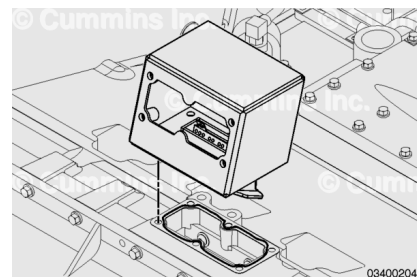

Remove the lower baffle from the breather housing through the hand-hole.

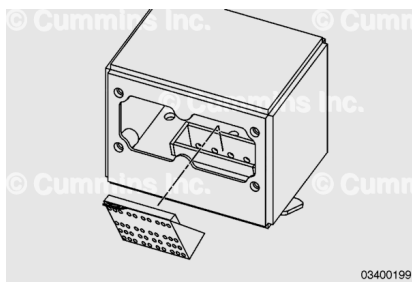


Note : The left hand breather housing has mounting capability for a second impactor. The right hand breather housing does not.


Perform the following steps for the removal of the left hand impactor style breather:

Remove the two center capscrews (3/8 x 1-1/4-inch, 12 point) and plain washers (3/8-inch inside diameter, 0.0128-inch thick).

Remove the upper baffle through the hand-hole opening.

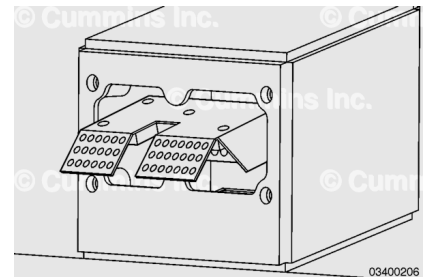


Remove the four outer capscrews (3/8 x 1-1/4-inch, 12 point) and the plain washers (3/8 x 0.0128-inch thick) from the breather housing.

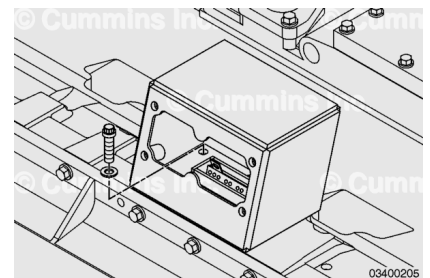


Remove the left hand breather housing by rotating it forward, in order to clear the button-head capscrews.

Remove the gasket.

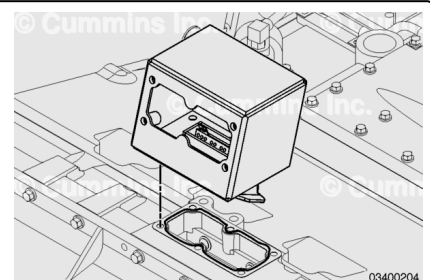

Remove the breather housing lower baffle.


Remove the lower baffle from the breather housing through the hand hole.

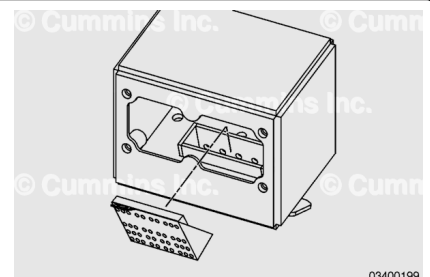

Removal of Class 185 **only**.


Remove the tube clamps to the breather tube (down) support bracket and the breather tube (down).

Remove all hose clamps.

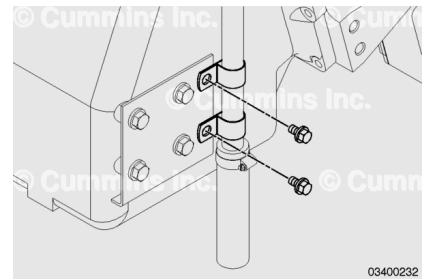

Removal of Class 185 **only**.

Remove the capscrews without the washers.

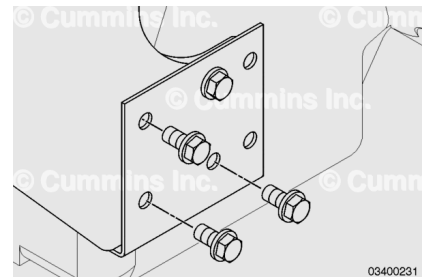


Removal of Class 185 **only**.

Remove one capscrew in the tube brace as shown.

Remove the two remaining capscrews and discard the washers.


Do **not** use washers.

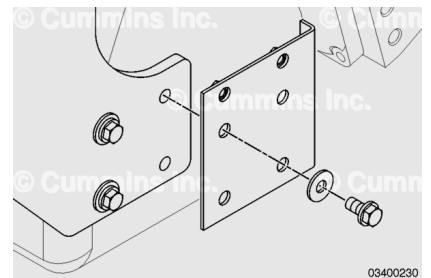

Removal of Class 185 **only**.

Remove two capscrews on the right side of the raft plumbing support structure.


Retain the capscrews for reuse and discard the washers.

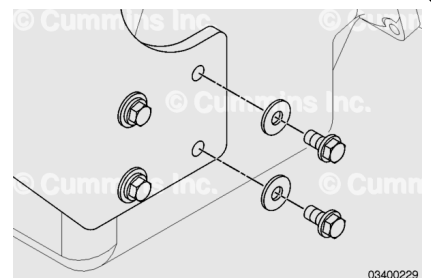

Removal of Class 180 **only**.

Remove the plain washers [0.1181-inch] between the brace and the oil pan.

Remove the tube brace from the oil pan. Remove the capscrews ($\frac{1}{2}$ x 1-1/8-inch), as shown.

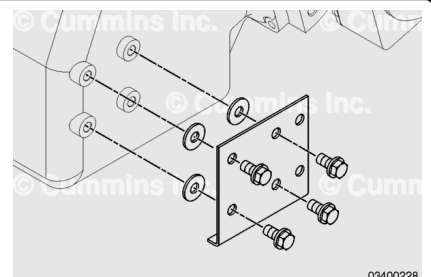


Clean and Inspect for Reuse

with Mechanically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

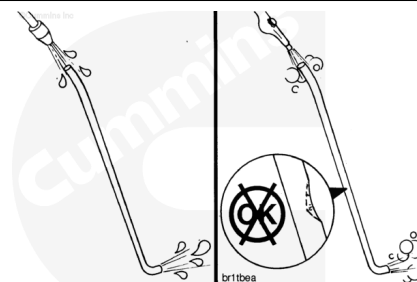

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the inside of the crankcase breather tube.
Dry with compressed air.

Use air pressure to blow through the vent tube.

Replace the vent tube if it is clogged or dented.


Replace the mesh if it is torn, broken down, or deteriorating.

Clean the vent tube and screens in an approved cleaning solvent. Dry with compressed air.

Clean the following parts:

1. Wing Nut
2. Washer
3. Breather Cap
4. Screen Mesh
5. Element.

Wipe out the breather housing (6).

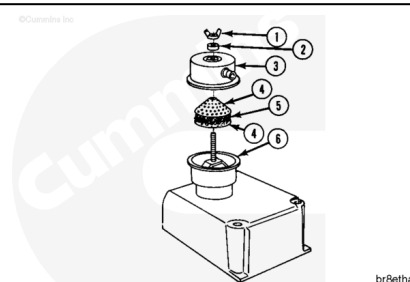


with Electronically Actuated Injector

⚠ WARNING ⚠

When using solvents, acids or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

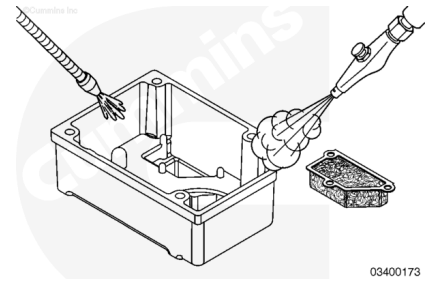


Use solvent to clean the rocker cover and breather baffle.

Dry with compressed air.

Inspect all parts for cracks, stripped threads, and any other damage.

Replace any parts that are damaged.

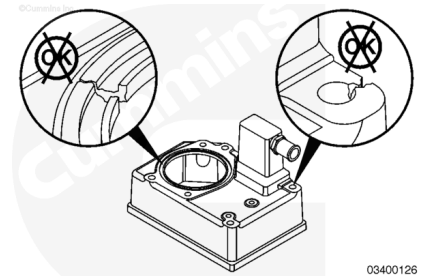


Rail Applications

Perform the following checks for the impactor style breather:


Inspect the breather housing for cracks and any other damage.

Replace, if damaged.

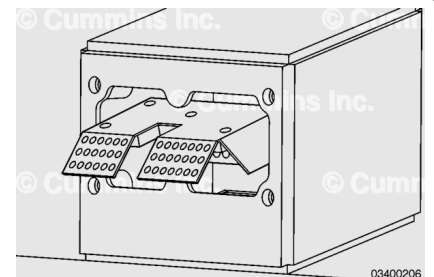

Inspect the breather for cracks, stripped threads, and any other damage.

Replace, if damaged.

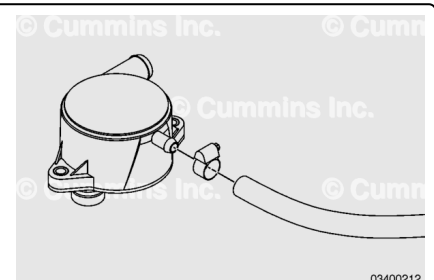

Install


with Mechanically Actuated Injector

⚠ CAUTION ⚠

The mandrel must make contact on the breather body to prevent damage.


Use a water pump bearing separator, Part Number 3375326, or equivalent. Support the cover as close as possible to the breather to prevent cracking of the cover.

Push the breather in.

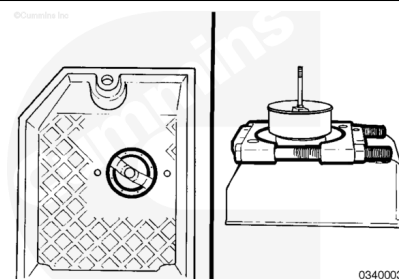


Install the baffle.

Install the push nuts.

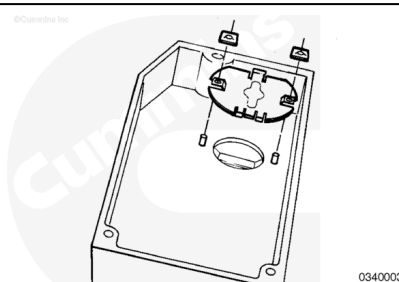


Install the following parts from the breather body (6).

1. Wing Nut
2. Washer
3. Breather Cap
4. Screen Mesh
5. Element.

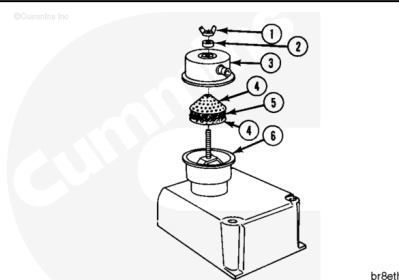


Assemble the breather.

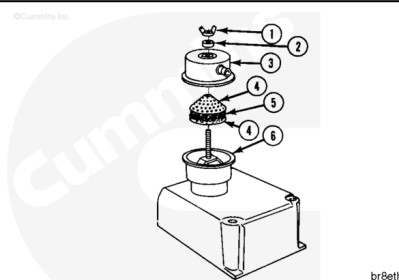

Install the vent tube and hose.


Install the tube support bracket.

Tighten the hose clamp at the breather tube.

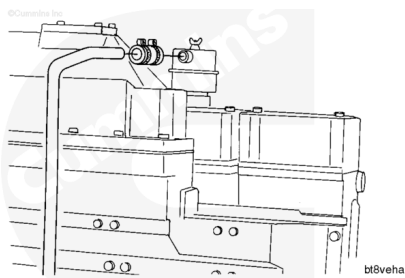


with Electronically Actuated Injector


Install the breather baffle on the three pins on the underside of the rocker lever cover and secure it in place with the three new spring nuts.

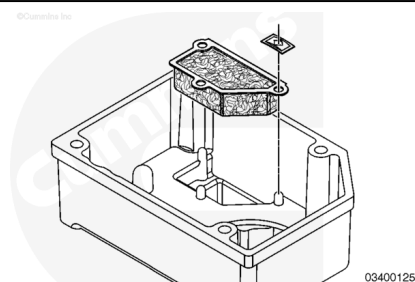

Install the rocker lever cover. Refer to Procedure 003-011 in Section A. (</qs3/pubsys2/xml/en/procedures/20/20-003-011-om.html>)

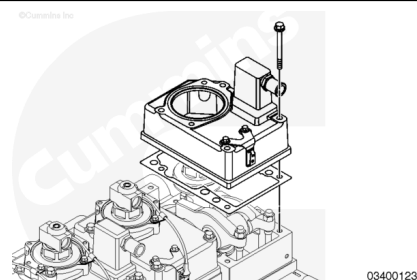


Install the vent tube and hose.
Tighten the hose clamps.

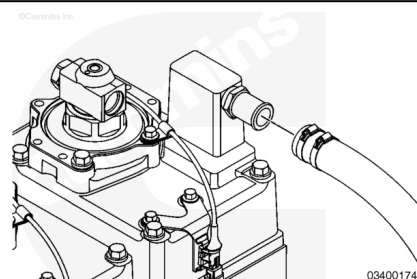

Rail Applications


Install the o-ring and breather canister on the hand-hole cover.
Tighten the tube clamp.
Install the crankcase breather hose on the breather canister.
Tighten the hose clamp.
Replace the power-pack.

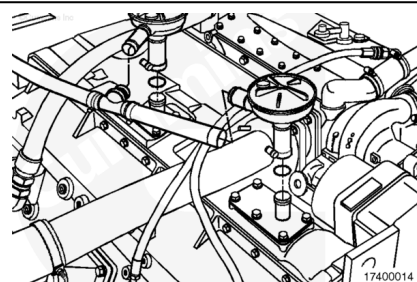

Note : The left hand breather housing has mounting capability for a second impactor. The right hand breather housing does **not**.

Perform the following steps for the initial installation of the impactor style breather:


Remove the front and rear hand-hole covers.

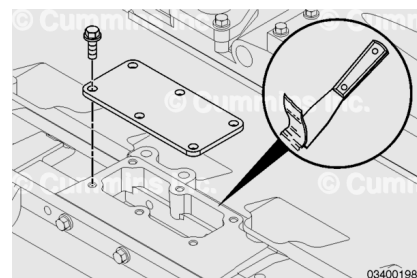

Remove the standard pan adapter to block capscrews and washers inside the hand hole.

Replace with long round head capscrews (3/8 x 1.65-inch) and plain washers (1.27 mm [0.050-inch] thick, 3/8-inch diameter).

Torque Value: 47 n•m [35 ft-lb]

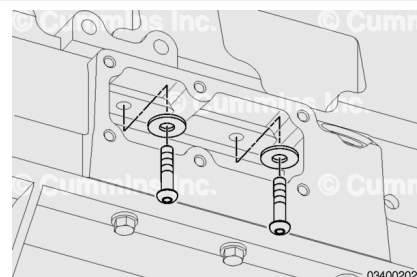


Install the breather housing lower baffle.

Install the lower baffle in the breather housing through the hand hole.


Push the breather baffle down until the baffle assembly is seated in the bottom of the cavity.

If the baffle does **not** fit tightly, bend the side walls slightly outward to provide more interference.

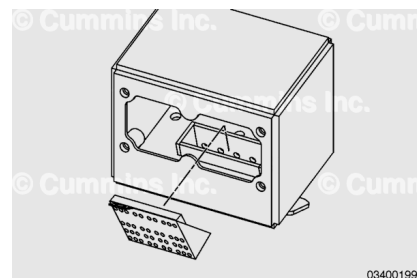


Push the baffle back until it contacts the back wall.

The breather will look like the cutaway when it is installed correctly.

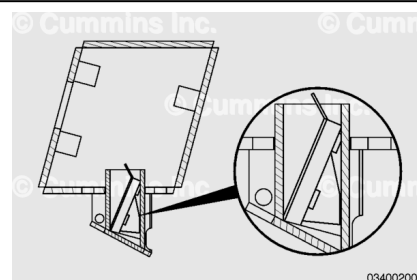


Apply a thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the gasket area prior to installing the gasket.

After the gasket is installed, apply another thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the top of the gasket.

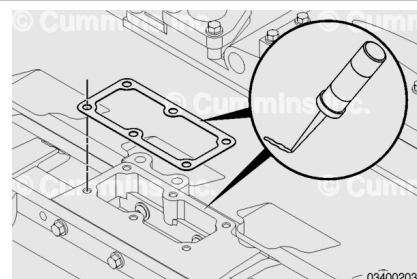


Install the breather housing before the gasket dressing sets. If the gasket dressing sets prior to installation, remove and discard the gasket. Clean and repeat the assembly process with a new gasket.

Install the left hand breather housing by rotating it back, in order to clear the button-head capscrews.

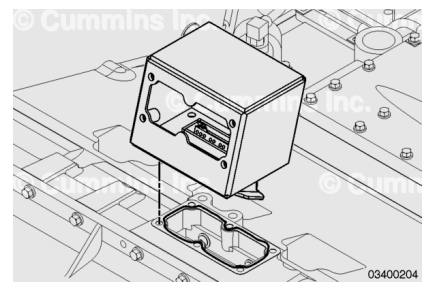


Install the four outer capscrews (3/8 x 1-1/4-inch, 12 point) and the plain washers (3/8 x 0.0128-inch thick) on the breather housing.

Do **not** tighten the capscrews at this time.

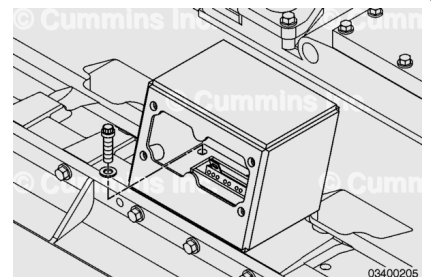


Install the upper baffle through the hand-hole opening.

Insert the two center capscrews (3/8 x 1-1/4-inch, 12 point) and plain washers (3/8-inch inside diameter, 0.0128-inch thick).

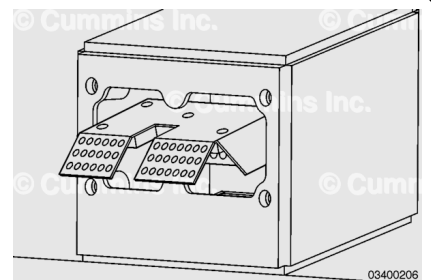

Tighten the capscrews (12-point 3/8 x 1-1/4-inch) in the sequence shown.

Torque Value: 30 n•m [22 ft-lb]

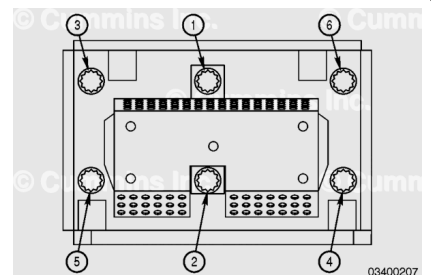


Perform the following steps to install the right hand impactor style breather:

Note : The left hand breather housing has mounting capability for a second impactor. The right hand breather housing does not.

Install the breather housing lower baffle.

Install the lower baffle in the breather housing through the hand hole.


Push the breather baffle down until the baffle assembly is seated in the bottom of the cavity.

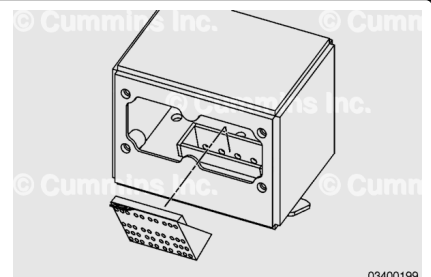

If the baffle does **not** fit tightly, bend the side walls slightly outward to provide more interference.


Push the baffle back until it contacts the back wall.

The breather will look like the cutaway when it is installed correctly.

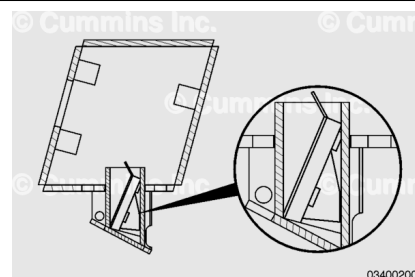


Apply a thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the gasket area prior to installing the gasket.

After the gasket is installed, apply another thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the top of the gasket.

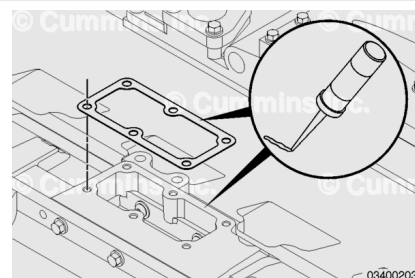


Install the breather housing before the gasket dressing sets. If the gasket dressing sets prior to installation, remove and discard the gasket. Clean and repeat the assembly process with a new gasket.

Install the right hand breather housing by rotating it back, in order to clear the button-head capscrews.

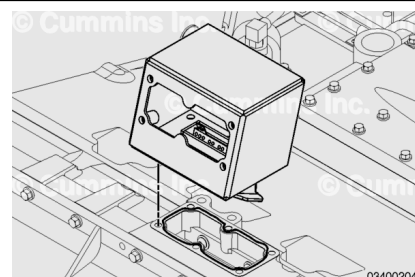


Install the four outer capscrews (3/8 x 1-1/4-inch, 12 point) and the plain washers (3/8 x 0.0128-inch thick) on the breather housing.

Do **not** tighten the capscrews at this time.

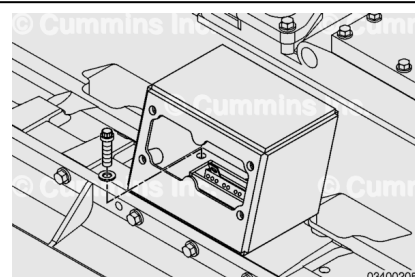


Install the upper baffle through the hand-hole opening.

Insert the two center capscrews (3/8 x 1-1/4-inch, 12 point, 3/8-inch diameter) and the plain washers (3/8-inch inside diameter, 0.0128-inch thick).

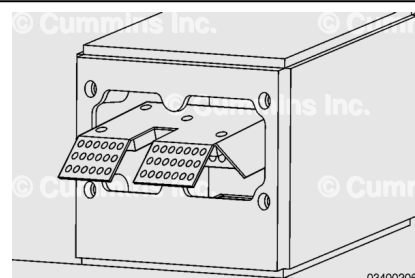

Tighten the capscrews (12-point, 3/8 x 1-¼-inch) in the sequence shown.


Torque Value: 30 n•m [22 ft-lb]

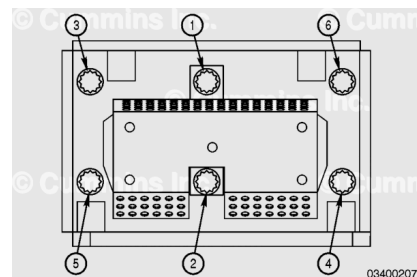

Install the gasket on the left hand breather housing hand-hole cover.

Apply a thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the gasket area prior to installing the gasket.

After the gasket is installed apply another thin coating of ThreeBond® 1207-D silicone sealant, or equivalent, to the top of the gasket.

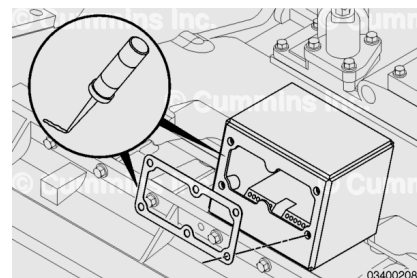

Install the hand-hole cover.

Make sure the cover is **not** upside down.


Apply bb61® thread locker, Part Number 3823682, to the capscrews, prior to installation.

Install the 10 mm [0.39 in] x 40 mm [1.57 in] capscrews with 11 mm [0.4325 in] inside diameter (I.D.) plain washers.

Torque Value:

1. 18 n•m [159 in-lb]

2. 36 n•m [27 ft-lb]

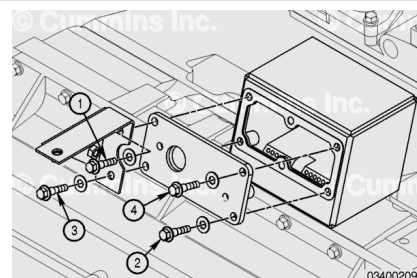

Remove the original hand-hole cover.

Insert the tube into the oil pan sump as shown.


Clean the gasket sealing surface.

Use caution to prevent debris from entering the oil sump.

Install the gasket.


Apply a thin coating of ThreeBond® 1207 D silicone sealant, or equivalent, to the gasket area prior to installing the gasket.

After the gasket is installed, apply another thin coating of ThreeBond® 1207 D silicone sealant, or equivalent, to the top of the gasket.

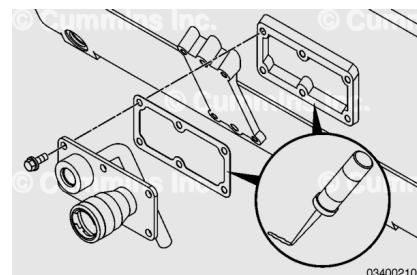

Install the six capscrews (3/8 x 1-inch) and tighten in the appropriate sequence, as shown.


Torque Value: 30 n•m [22 ft-lb]

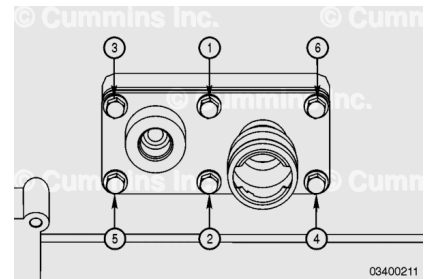

Install the breather drain hose for the left hand rear breather.

Tighten the clamp.

Torque Value: 4 n•m [35 in-lb]

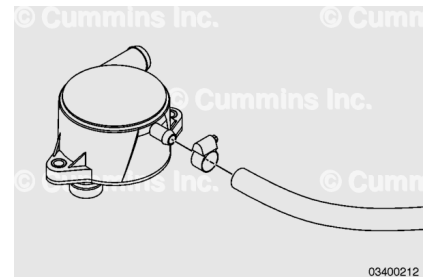


Install the left hand rear breather and hose as an assembly, using capscrews (8 mm [0.31 in] x 45mm [1.77 in] long).

Lubricate the o-ring on the breather with a light coating of clean engine oil.

Make sure the hose does **not** kink during installation.

Torque Value: 18 n•m [159 in-lb]

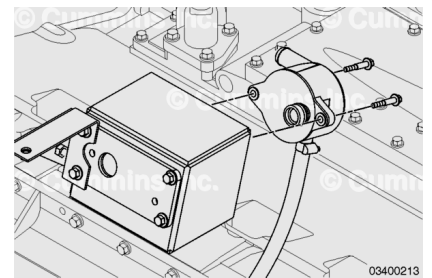


Install the left hand front breather.

Lubricate the o-ring on the breather with a light coating of clean engine oil.

Tighten the front breather flange head capscrews.

Torque Value: 18 n•m [159 in-lb]

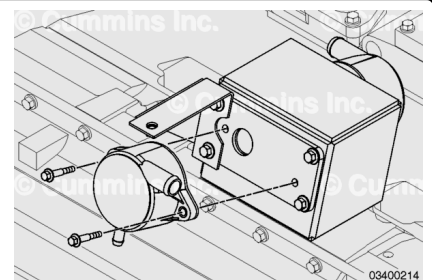

Install the right hand front breather.

Lubricate the o-ring on the breather with a light coating of clean engine oil.

Tighten the front breather flange head capscrews.

Torque Value: 18 n•m [159 in-lb]


Install the 90 degree elbow fitting on the oil pan hand-hole cover.

Lubricate the o-ring with a light coating of clean engine oil.

Position the elbow as shown.

Tighten the elbow fitting.

Torque Value: 10 n•m [89 in-lb]

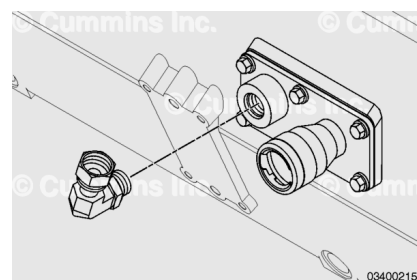


Install the cross fitting on the elbow fitting as shown.

Position the cross piece fitting as shown.

Tighten the elbow fitting.

Torque Value: 10 n•m [89 in-lb]

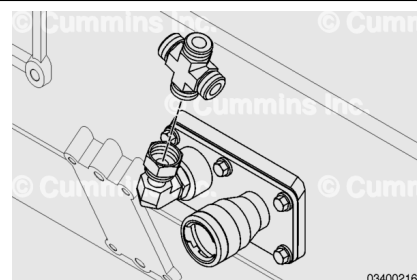


Route the hose as shown.

Install the hose fittings finger tight.

Tighten the hose clamps.

Torque Value: 5 n•m [44 in-lb]

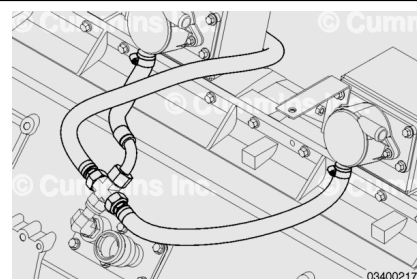

Remove the oil pan mounting capscrew.


Install the hose support.

Remove the oil pan capscrew in the location shown.

Mount the tube brace in this location and secure it with the capscrew (3/8 x 1-3/4-inch, six-point).

Tighten the capscrew.


Torque Value: 47 n•m [35 ft-lb]

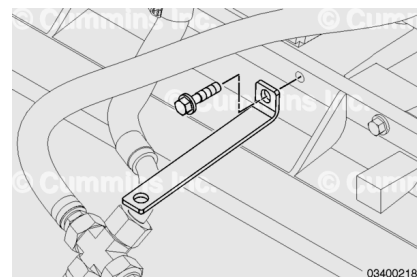

Install the hose support clip.


Use capscrew ((1) six-point, 3/8 x 1-inch) to secure the two P-clips, as shown.

Tighten the P-clips finger tight.

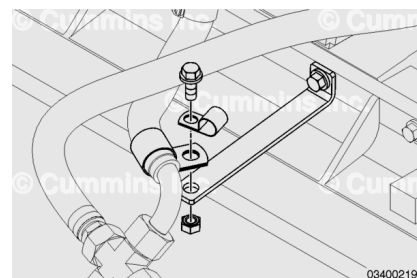

Install the coolant hose support on the tube support bracket.

Install the capscrew (3/8 x 0.973-inch), plain washer (3/8-inch), and P-clip to the hose support bracket. Tighten the capscrew (3/8 x 0.976-inch six point) finger tight.

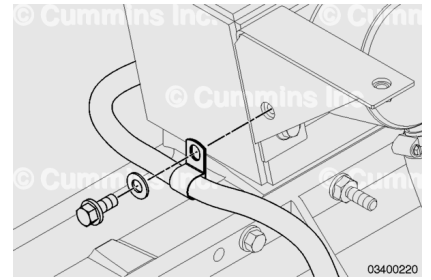

Remove the oil pan capscrew in the location shown.

Install the 3/8-inch diameter stud.


Tighten the stud.

Torque Value: 47 n•m [35 ft-lb]

Install the clip support plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch).

Torque Value: 47 n•m [35 ft-lb]


Route the coolant filter hose through the P-clip and secure it with the capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch) nut.

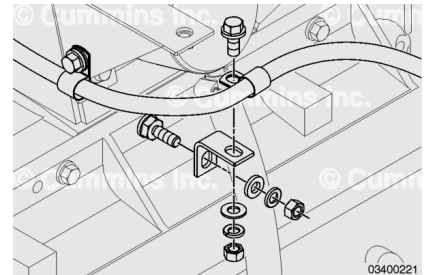

Align the coolant hose as shown to avoid chaffing of the hoses.

Tighten the capscrews (3/8 x 1-inch).

Torque Value: 47 n•m [35 ft-lb]

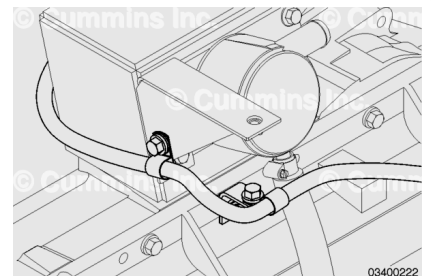

Install the left side coolant filter hose support.

Remove the oil pan capscrew in the location shown.

Replace the oil pan capscrew with the 3/8-inch stud.


Torque Value: 47 n•m [35 ft-lb]

Install the tube P-clip support on the stud.

Secure the support with a plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch).

Torque Value: 47 n•m [35 ft-lb]


Route the coolant filter hose through the P-clip and secure it with the capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch), and nut (3/8-inch).

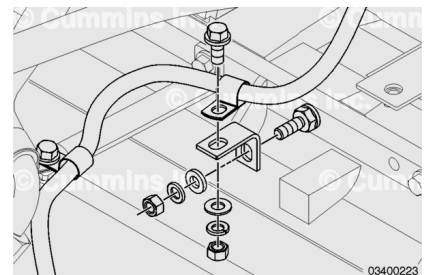

Align the coolant hose, as shown, to avoid hose chaffing.

Tighten the P-clip capscrews (3/8 x 1-inch).

Torque Value: 47 n•m [35 ft-lb]

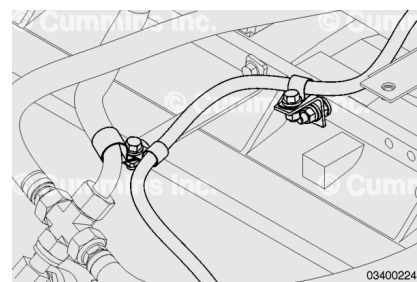

Route the P-clip around the drain hose and secure with the capscrew (3/8 x 0.937-inch), plain washer (3/8-inch), lock-washer (3/8-inch) and the nut (3/8-inch).

Align all drain hoses.

Tighten the capscrew (3/8 x 1-inch, six-point).

Torque Value: 47 n•m [35 ft-lb]

Tighten the straight thread o-ring elbow adjusting nut (1).


Torque Value: 71 n•m [52 ft-lb]

Tighten the o-ring face seal cross to the elbow (2).

Torque Value: 95 n•m [70 ft-lb]

Tighten the hose fittings to the side cross fitting (3).

Torque Value: 68 n•m [50 ft-lb]

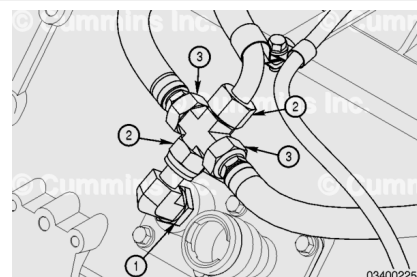


Install the remainder of the hose, as shown.

Coat the inside of the hose(s) with clean engine oil.

Position the hose clamp(s) for easy access to the adjusting capscrew.

Do **not** tighten the hose clamps at this time.

1. 88.9 mm [3.5-in] Hose
2. 165.1 mm [6.5-in] Hose
3. 222.25 mm [8.75-in]

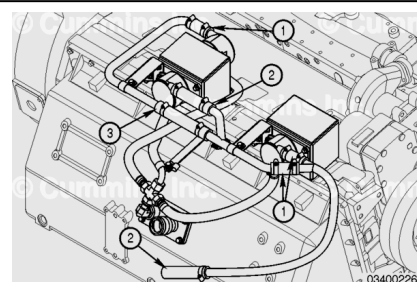


Install the tube support clip.

Remove the fuel filters, if necessary.

Remove the existing capscrew in the location shown and discard.

Install the tube support clip.

Secure the tube support clip with the longer capscrew (3/8 x 1-3/4-inch).

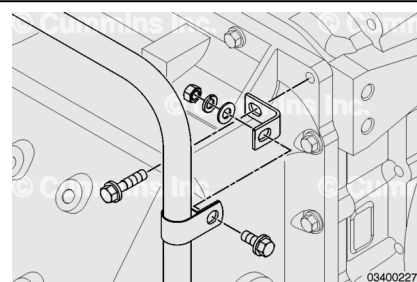


Installation of Class 180 **only**.

Install the plain washers [0.1181-inch] between the brace and the oil pan.

Secure the tube brace to the oil pan with the capscrews ($\frac{1}{2}$ x 1- $\frac{1}{8}$ -inch), as shown.


Torque Value: 71 n•m [52 ft-lb]

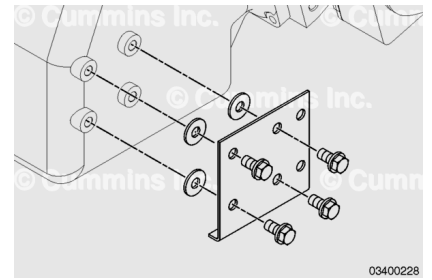

Installation of Class 185 **only**.

Remove the two capscrews on the right side of the raft plumbing support structure.

Retain the capscrews for reuse and discard the washers.

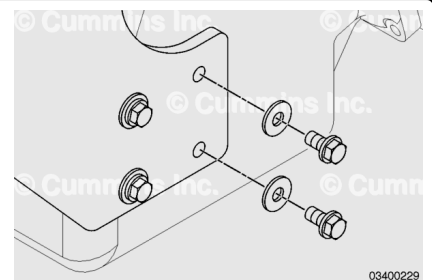


Installation of Class 185 **only**.

Install one capscrew in the tube brace as shown.

Tighten the capscrew to a snug fit.

Remove the two remaining capscrews and discard the washers.

Do **not** reuse the washers.

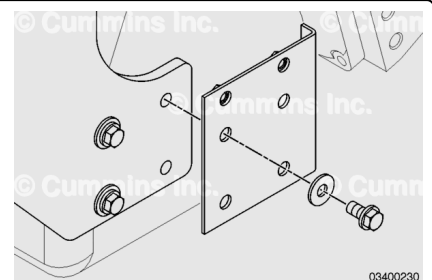


Installation of Class 185 **only**.

Rotate the tube brace around to align the holes.

Install the capscrews that were removed from these locations without the washers.

Torque Value: 71 n•m [52 ft-lb]

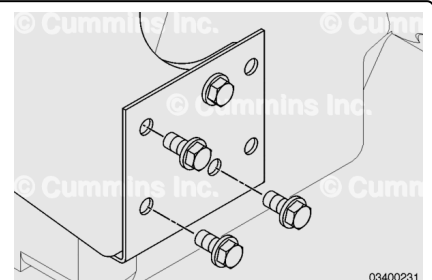


Attach the tube clamps to the breather tube (down) support bracket and the breather tube (down).

Check the alignment of all impactor exhaust routing. Adjust as necessary.

Tighten the capscrews ($\frac{3}{8}$ x $\frac{3}{4}$ -inch).

Torque Value: 47 n•m [35 ft-lb]

Tighten all hose clamps.

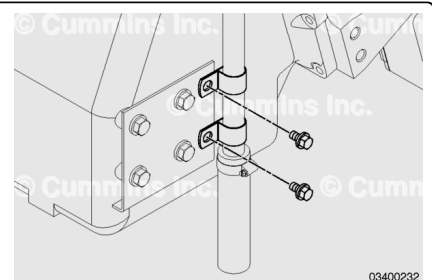

Torque Value: 5 n•m [44 in-lb]

Finishing Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

The pressure of the fuel in the line is sufficient to penetrate the skin and cause serious personal injury. Wear gloves and protective clothing.

- Install the high-pressure injector supply lines. Refer to Procedure 006-051 in Section A.
(/qs3/pubsys2/xml/en/procedures/20/20-006-051-om.html)
- Operate the engine and check for leaks.

©Cummins Inc.



ck800wa

Rail Applications

- Install the high-pressure injector supply lines. Refer to Procedure 006-051 in Section A.
(/qs3/pubsys2/xml/en/procedures/20/20-006-051-om.html)
- Install the fuel filters, if removed. Refer to Procedure 006-015 in Section 4.
(/qs3/pubsys2/xml/en/procedures/20/20-006-015-om.html)
- Fill coolant, if previously drained. Refer to Procedure 008-018 in Section 8.
(/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html)
- Operate the engine and check for leaks.

©Cummins Inc.



ck800wa