



## Trainings ▾

### Disassemble

Remove the locking nut and adjusting screw.

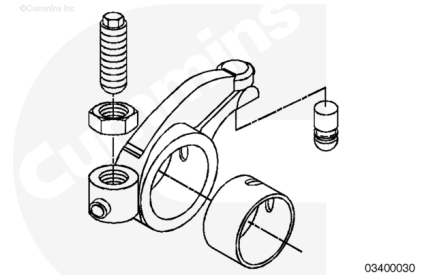


Remove the socket from the ball on the rocker lever shaft.

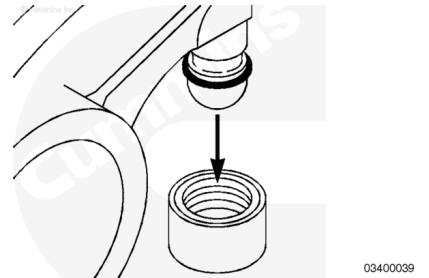

Place the ball in a vice as shown.

Wiggle the rocker lever until the ball swivels.

Use a mallet to tap the rocker lever until the ball comes out.

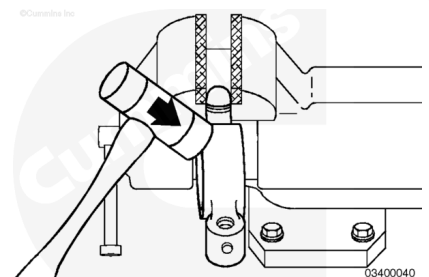


### Magnetic Crack Inspect

**Note :** The rocker lever must be disassembled to do this inspection.

Use the residual method. Apply coil shot amperage.

| Amperage (Ampere Turns)    |
|----------------------------|
| 1200 D.C. or rectified A.C |

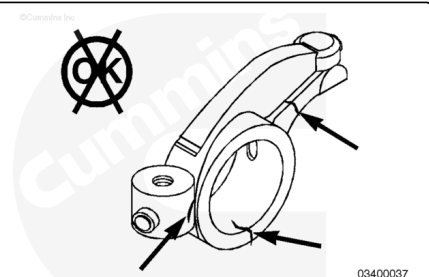

## Amperage (Ampere Turns)

2000 D.C. or rectified A.C

**Note :** Ampere turn is an electrical current of one ampere flowing through the coil, multiplied by the number of turns in the coil.

The lever **must** be replaced if there is a crack in any location.

Demagnetize the lever.

### **⚠ WARNING ⚠**


**When using solvents, acids or alkaline materials of cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.**

Use solvent to clean the rocker lever.

## Assemble

Install the adjusting screw and the lock nut in each lever.

Do **not** completely tighten the lock nut until the assembly is installed on the engine.

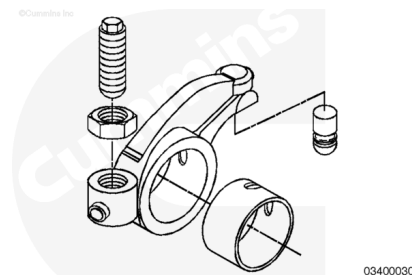


### **⚠ CAUTION ⚠**

**Do not overstress the press fit.**


Use a press to seat the new ball into the cavity in the rocker lever.

The lip on the ball **must** be flush with the surface on the rocker lever.

**Note :** Use an old push tube socket end to help hold and align for proper seating.

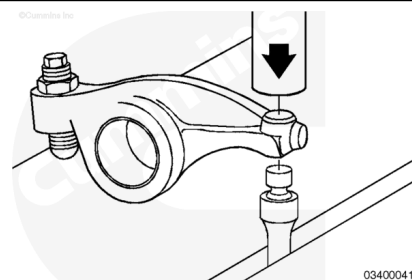

Install the new socket on the ball.

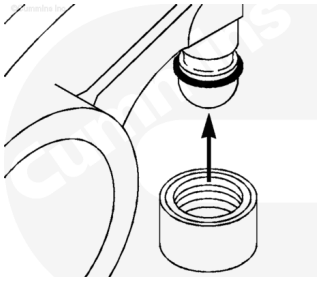

03400042

---

**Last Modified: 18-Feb-2026**

---