

Trainings ▾

Install


with Mechanically Actuated Injector

⚠ CAUTION ⚠

The oil drillings in the shaft must be in alignment with the oil drillings in the rocker levers.

⚠ CAUTION ⚠

The plug in the end of the shaft must be on the same end as the exhaust rocker lever. Damage to the rocker assembly will occur if the plug is not installed or installed in the wrong location.

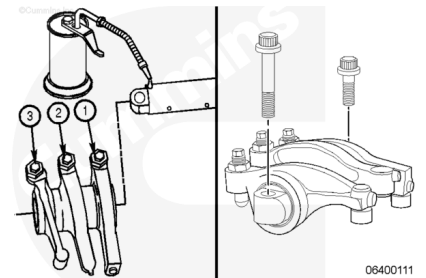

Use clean oil to lubricate the shaft.

Slide the rocker levers on the shaft in the sequence shown.

- Exhaust lever (1)
- Injector lever (2)
- Intake lever (3)

Lubricate the threads, rocker sockets, and crosshead pads with clean engine oil.


Install the washers and capscrews.

Make sure the ring dowel that aligns the rocker shaft is installed in the housing.

Make sure the adjusting screws are loose.

Position the rocker lever assembly on the housing. Install the capscrews and finger-tighten two or three revolutions.

Align the pushrod sockets with the adjusting screws.

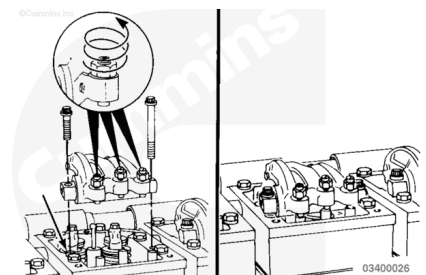


There are two different torque values, depending on the type of rocker lever shaft the engine has.

For capscrews for rocker lever shaft A:

Torque Value: 122 n•m [90 ft-lb]

For capscrews for rocker lever shaft B:

Torque Value: 225 n•m [166 ft-lb]

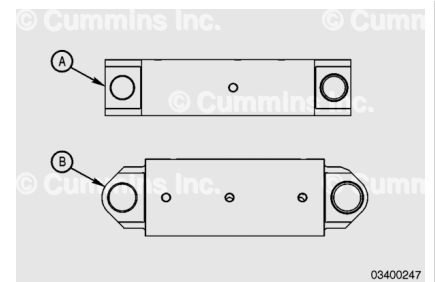


with Electronically Actuated Injector

⚠ CAUTION ⚠

The oil drillings in the shaft must be in alignment with the oil drillings in the rocker levers.

⚠ CAUTION ⚠

The plug in the end of the shaft must be on the same end as the exhaust rocker lever. Damage to the rocker assembly will occur if the plug is not installed or installed in the wrong location.

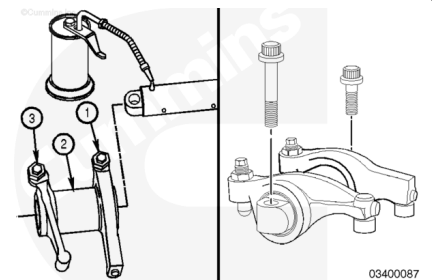

Use clean oil to lubricate the shaft.

Install the exhaust lever (1), spacer (2), and intake lever (3) onto the shaft. The oil drillings in the shaft **must** align with the drillings in the levers.

Note : The plug in the end of the shaft must be on the same end as the exhaust rocker lever.

Lubricate the threads, rocker sockets, and crosshead pads with clean engine oil.


Install the washers and capscrews.

Make sure the ring dowel that aligns the rocker shaft is installed in the housing.

Make sure the adjusting screws are loose.

Position the rocker lever assembly on the housing. Install the capscrews and finger-tighten two or three revolutions.

Align the pushrod sockets with the adjusting screws.

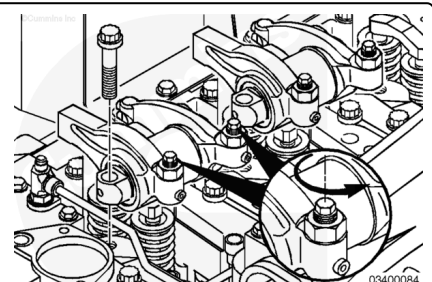


There are two different torque values, depending on the type of rocker lever shaft the engine has.

For capscrews for rocker lever shaft A:

Torque Value: 122 n•m [90 ft-lb]

For capscrews for rocker lever shaft B:

Torque Value: 225 n•m [166 ft-lb]

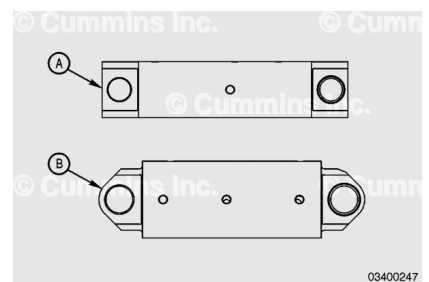

Last Modified: 20-Feb-2026
