

Trainings ▾

Remove


with Mechanically Actuated Injector

Loosen all the adjusting screw nuts and screws to remove all the load from the push rod.

Do **not** allow the rocker levers to fall off the shaft during removal.

Remove the two rocker lever assembly mounting capscrews.

Remove the rocker lever assembly.

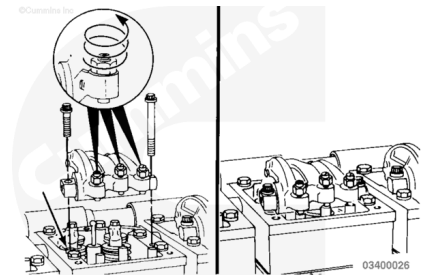

with Electronically Actuated Injector

Loosen the rocker lever adjusting screws.

Loosen the rocker lever shaft mounting capscrews and remove the rocker lever assembly.

Do **not** allow the rocker levers to fall off the shaft during removal.

