


Trainings ▾

Remove

Note : Do not remove the bushing unless it is damaged or worn.

Support the lever as shown (2). Use an arbor press and rocker lever bushing mandrel (1), Part Number 3162458, for mechanically actuated injector and Part Number ST-1284, for electronically actuated injector or equivalents to remove the bushing.

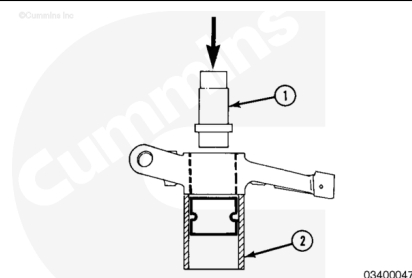

Install

Use an abrasive pad to remove any burrs from the bore of the lever.

If cracks are suspected, use the magnetic particle inspection method. Refer to Procedure 003-009 in Section (/qs3/pubsys2/xml/en/procedures/20/20-003-009-tr.html). The lever **must** be replaced if it is worn.

Measure the rocker lever bore inside diameter.

Lever Bore Inside Diameter Mechanically Actuated
Injector

mm		in
49.246	MIN	1.937
49.27	MIN	1.940

Lever Bore Inside Diameter Electronically Actuated
Injector


mm		in
36.47	MIN	1.436
36.50	MIN	1.437



⚠ CAUTION ⚠

See the Service Tool Instructions for the proper use of Tool Number 3162458, for mechanically actuated injector and Part Number ST-1284, for electronically actuated injector.

The bushing must be installed with the long slot in the direction of the crosshead side of the lever (elephant's foot side). A loss of lubricating oil to the elephant's foot and crosshead will occur if the bushings are incorrectly installed.

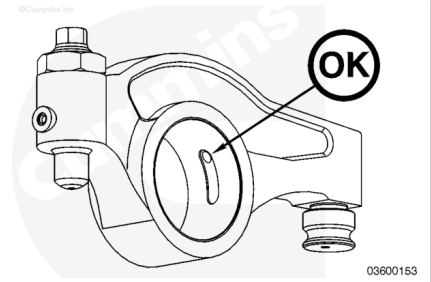

Align the slot in the bushing to point toward the nose of the rocker lever while aligning the oil holes in the bushing with the oil passages in the rocker lever.

Use an arbor press and a rocker lever mandrel (1), Part Number 3162458, for mechanically actuated injector and Part Number ST-1284, for electronically actuated injector or equivalents to install the bushing.

