

Trainings ▾

Install


with Mechanically Actuated Injector

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.


Install the gaskets, rocker lever covers, and capscrews.
Tighten all the capscrews.

Torque Value: 45 n•m [33 ft-lb]

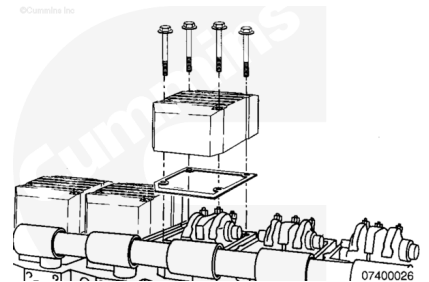

with Electronically Actuated Injector


Remove the cylinder head protective cover from the push tube hole.

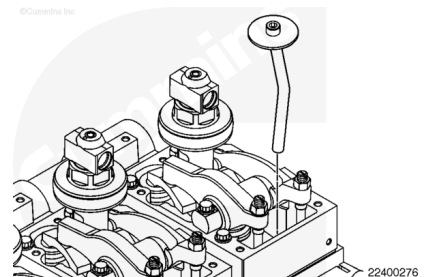

Install the new rocker lever cover gasket and rocker lever cover.

Secure the rocker lever cover with four capscrews.


Torque Value: 40 n•m [30 ft-lb]

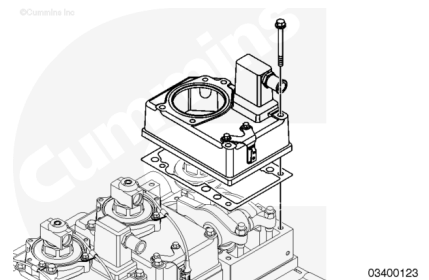

If the injector cover plate dust seal was damaged and needs to be replaced, lubricate the new dust seal with clean engine oil.

Check that the smooth side of the seal is facing downward and the side with the groove is facing upward.

Use a soft rubber mallet to tap the seal into place.

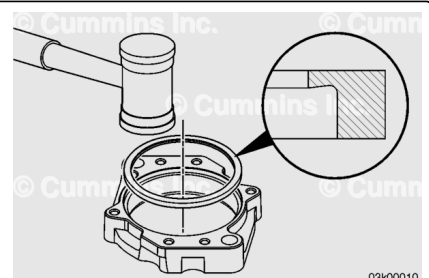


Lubricate the large o-ring and damper on the injector with clean engine oil. Engine oil will protect the o-ring and damper during the installation of the rocker lever cover plate.

Install the new o-ring on the rocker lever cover plate.

Install the rocker lever cover plate on the injector and tap into place with a soft face mallet. Secure to the rocker lever cover plate with two capscrews.


Install the rocker lever cover plate to the rocker lever cover.

Torque Value: 40 n•m [30 ft-lb]

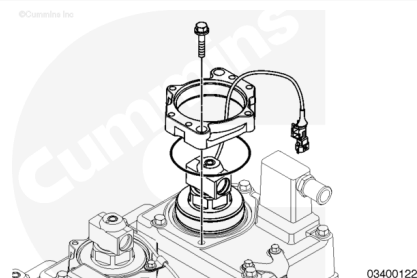


Connect the injector wiring harness to the injector.

Secure the injector wiring harness to the rocker lever cover with a P-clip.

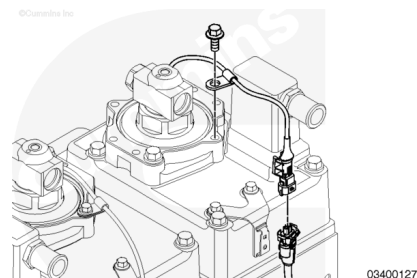

Connect the injector wiring to the bracket by sliding onto the bracket until the electrical connection locks into position.

If the locking feature on the electrical connection is missing, use a cable tie, Part Number 3822924, or equivalent, to secure the wiring harness to the bracket.

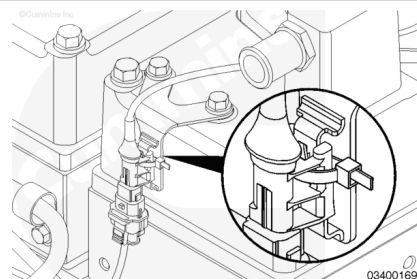


When installing the rocker lever cover of cylinder number five:

For engines with rear out turbocharger option:


Install two new stainless steel wire ties (1) to secure the turbocharger speed sensor wiring to the turbocharger

Install the P-clips that secure the turbocharger speed sensor wiring to the injector cover plate (2) and to the rocker lever cover (3).

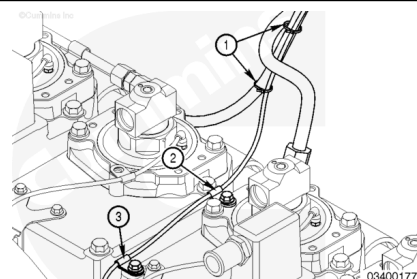

For engines with the front out turbocharger option with a turbocharger elbow bracket:

Install the P-clips (1) that secure the turbocharger speed sensor wiring to the turbocharger elbow bracket, injector cover plate (2), and to the rocker lever cover (3).

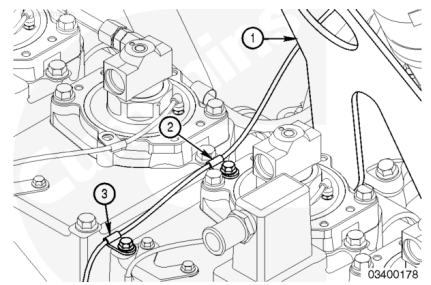

For engines with front out turbocharger elbow bracket:

Install the P-clips that secure the turbocharger speed sensor wiring to the "L" bracket (1), injector cover plate (2), and to the rocker lever cover (3).

