

## Trainings ▾

### Install


#### with Mechanically Actuated Injector

Lubricate the o-rings (2) with vegetable oil.

**Note :** Use of other lubricants, such as engine oil, will cause the o-rings to swell.

Install the o-rings into the grooves on the outside diameter at each end of the water transfer tubes. Do **not** overstretch, twist, or kink the o-rings.


Install the water transfer tube (1).

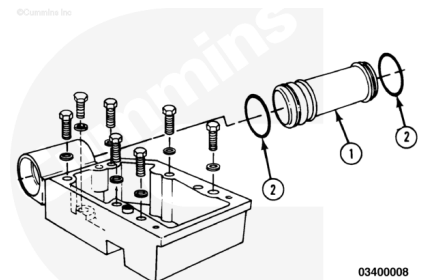

**Note :** The gasket and housing must be aligned correctly with the dowel pins.


Install the gasket and the housing.

Install the seven capscrews. Hand-tighten.

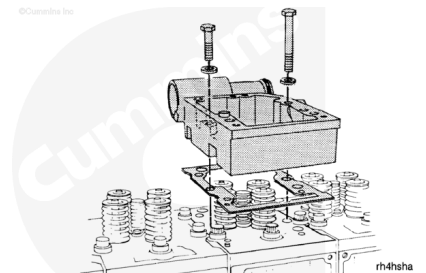


Use the sequence shown to tighten the capscrews.

**Torque Value:** 95 N·m [ 70 ft-lb ]

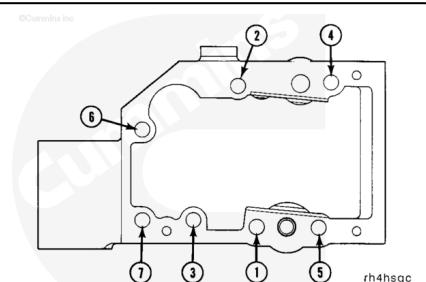

Use water transfer tube driver, Part Number ST-1319, and a hammer to drive the water transfer tube into the adjacent housing until the water transfer tube is approximately centered.

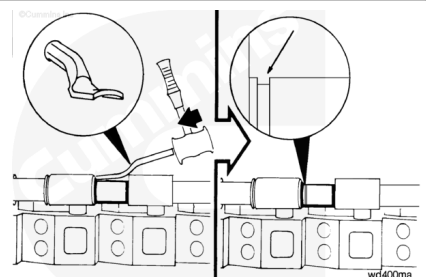

## with Electronically Actuated Injector


Lubricate the o-rings (2) with vegetable oil.

**Note :** Use of other lubricants, such as engine oil, will cause the o-rings to swell.

Install the o-rings into the grooves on the outside diameter at each end of the water transfer tubes. Do **not** overstretch, twist, or kink the o-rings.

Install the water transfer tube (1).

Make sure the tagged or labeled water transfer tubes are installed in the correct locations.

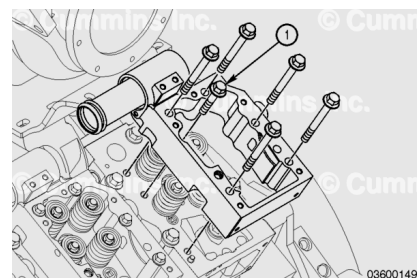


Install the new rocker housing gaskets to the cylinder heads while making sure the gaskets align correctly with both dowel pins and the rest of the bolt holes.

Make sure the tagged or labeled rocker lever housings are installed in the correct locations.

Check the threads of the rocker housing capscrews for damage. Check under the capscrew heads for cracks. Check for any deformation or necking of the capscrew.

Install the five long and one shorter (1) capscrew and washer. Hand-tighten them to a minimum of two full turns to obtain the correct thread engagement.

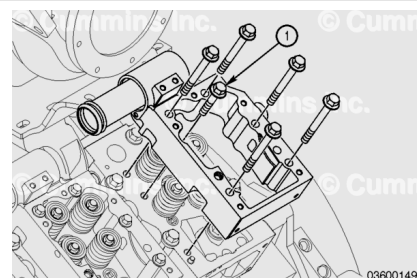


Use the sequence shown to tighten the capscrews.

### Torque Value:


Rocker Lever Capscrews

1. 122 N•m [ 90 ft-lb ]

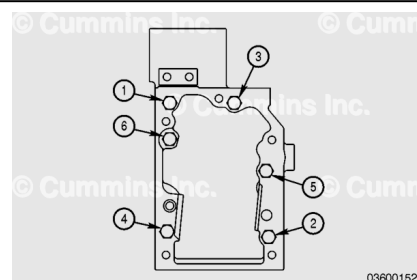

### ⚠ CAUTION ⚠

**Check that the o-rings are not cut, damaged or rolled over when driving the water transfer tubes into the adjacent rocker lever housings. Leakage will result if damaged.**

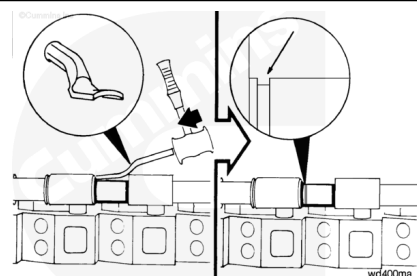

Use water transfer tube driver, Part Number ST-1319, and a hammer to drive the water transfer tube into the adjacent rocker lever housing until the water transfer tube is centered.

---

**Last Modified: 28-Jun-2013**

---