

Trainings ▾


Remove

with Mechanically Actuated Injector


Use the water tube driver, Part Number ST-1319 (20), or equivalent, to drive the water transfer tube toward the front of the engine until the back part of the water transfer tube clears the rocker lever housing.



Remove the seven mounting capscrews and the rocker lever housing.

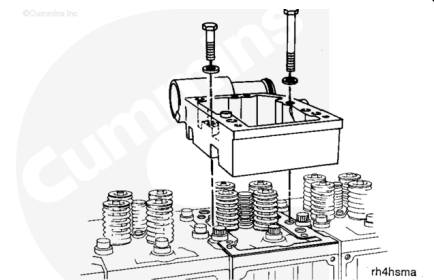

Remove and discard rocker lever housing gasket.

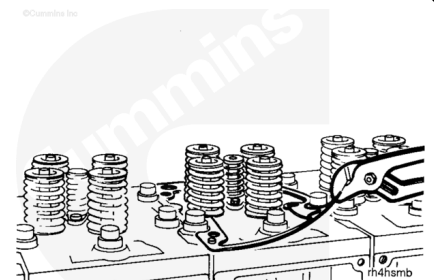

with Electronically Actuated Injector


Use the water tube driver, Part Number ST-1319 (20), and a hammer to drive the water transfer tube toward the front of the engine until the back part of the water transfer tube clears the rocker lever housing.



Remove the six mounting capscrews, plain washers, and the rocker lever housing.

Note : Note the placement of the single shorter capscrew (1).

All rocker lever housings are **not** the same. Tag or mark the parts with their respective locations relative to cylinder number to aid during assembly.

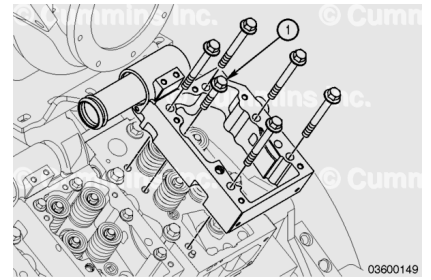

Remove and discard the gasket.

